

# CRAYNE'S LAW: ALL COMPUTERS WAIT AT THE SAME SPEED

No one seriously disputes the advantages of programming in a high-level language. Yet there are still programs, or portions of programs, which are best written in that lowest level of all—the computer's native instruction set. There are two related reasons for this: speed and machinedependent function.

A friend reported the following benchmarks on the IBM PC for a program which generates prime numbers. Written in interpretive BASIC, the program ran for about 4 hours. The identical BASIC program, compiled, ran in about  $2\frac{1}{2}$  hours. But the same function—carefully constructed in assembler to take full advantage of the PC's internal registers—ran in less than 2 minutes, more than 100 times faster.

For the majority of programs which spend most of their time either searching a disk or waiting for the user to key something, this speed advantage means little. But there are many applications where a few assembly language routines can allow a microcomputer to provide the speed and function of a much larger system.

This book, then, is written for the person who—either for business or for pleasure—wants to bypass the barriers of BASIC and delve beneath the depths of DOS.





#### THE SERIOUS ASSEMBLER

Copyright © 1985 by Charles A. Crayne and Dian Girard

All rights reserved, including the right to reproduce this book or portions thereof in any form.

A Baen Book

Baen Enterprises 8–10 W. 36th Street New York, N.Y. 10018

First printing, May 1985

ISBN: 0-671-55963-X

Cover art by Robert Tinney. Reproduced with permission of BYTE Publications.

Printed in the United States of America

Distributed by SIMON & SCHUSTER MASS MERCHANDISE SALES COMPANY 1230 Avenue of the Americas New York, N.Y. 10020

# CONTENTS

Preface	1
Part I—The DOS Programming Environment Chapter 1—The IBM PC Family Chapter 2—Overview of the 8086/8088 Architecture Chapter 3—Programming in the .COM Environment Chapter 4—Assembly and Linkage Chapter 5—Programming in the .EXE Environment	5 8 21 32 42
Part II—Programming with DOS Calls Chapter 6—DOS Console Services Chapter 7—Other Character Calls Chapter 8—Introduction to Disk File Operations Chapter 9—Stream Oriented I/O Chapter 10—Directory Operations	55 64 71 88 102
Part III—Programming with BIOS Calls Chapter 11—Video Output Chapter 12—Graphics Chapter 13—Keyboard Handling Chapter 14—Disk Operations	127 141 156 164
Part IV—Programming the Silicon Chapter 15—Direct Screen Handling Chapter 16—Graphic Primitives	182 190
Part V—Interfaces and Ideas Chapter 17—BASIC Subroutines Chapter 18—Copy Protection Schemes	207 217
Appendix A-8086/8088 Instruction Set	225
Glossary	233
Appendix B—Sample Program List	247
Index	249

### TRADEMARKS

Many terms used in this book are trademarked. Since it is not practical to identify them as such every time they are used, they are acknowledged here.

CP/M and CP/M-86 are trademarks of Digital Research.

IBM, IBM Personal Computer, and PC-DOS are trademarks of International Business Machines Corp.

Microsoft, MS-DOS, and XENIX are trademarks of Microsoft Corporation.

UCSD p-System is a trademark of the Regents of the University of California.

UNIX is a trademark of AT&T

## PREFACE

Conventional wisdom is that new programming languages arise not in a continuous stream, but in waves of innovation. Each such generation is supposedly marked by an order of magnitude improvement in functionality and accompanying programmer productivity. The pundits claim that such languages as COBOL, PL/I, and Pascal are of the third generation, and that the query languages and application generators which are now becoming common represent the fourth.

No one seriously disputes the advantages of programming in a high-level language. Yet there are still programs, or portions of programs, which are best written in that lowest level of all—the computer's native instruction set. There are two related reasons for this speed and machine-dependent function.


One friend of mine reported the following benchmarks on the IBM PC for a program which generates prime numbers. Written in interpretive BASIC, the program ran for about 4 hours. The identical BASIC program, compiled, ran in about 2<sup>1</sup>/<sub>2</sub> hours—a major improvement. But the same function—carefully constructed in assembler to take full advantage of the PC's internal registers—ran in less than 2 minutes, more than 100 times faster.

For the majority of programs which spend most of their time either searching a disk or waiting for the user to key something, this speed advantage means little. Indeed, *Crayne's Law* reminds us that "All computers wait at the same speed!" But there are many applications where a few assembly language routines can allow a microcomputer to provide the speed and function normally associated with a much larger system.

This book, then, is written for the person who—either for business or for pleasure—wants to bypass the barriers of BASIC and delve beneath the depths of DOS. Although no specific level of programming experience is required (in the sense that many of the examples are not just code fragments but rather complete working programs), the book does not attempt to teach beginning programming skills. Nor does it contain a detailed explanation of each of the machine instructions since that material is included in the IBM *Macro Assembler* manual.

The book is divided into five major parts. "The DOS Programming Environment" provides an overview of the IBM PC architecture and explains how to write, assemble, and execute a trivial assembly language program. "Programming with DOS Calls" contains a detailed discussion of the DOS service calls, and concludes with a file display program which will operate in the tree-structured directory environment of DOS release 2. "Programming with BIOS Calls" demonstrates how windowing, graphics, nonstandard disk formats, and other advanced features can be added to programs by taking advantage of the functions in IBM'S ROM BIOS. "Programming the Silicon" goes the final mile, explaining how to directly program the device adapters. Finally, "Interfaces and Ideas" shows how to interface assembly language routines to high-level languages, and also provides a repository for some topics—such as copy-protection schemes—that didn't quite fit anywhere else.

Charles A. Crayne



# Part I

## The Dos Programming Environment

### Chapter 1 THE IBM PC FAMILY

When IBM chose to enter the personal computer market, it brought with it several ideas which were commonplace in medium- and large-scale computers, but which were almost nonexistent in the microcomputer industry. Some of these features, such as parity checked memory and power-on diagnostics, have since become fairly common. The concept that has remained exclusively IBM's however, is that of a diverse family of personal computers, based essentially on the same architecture and technology, with individual members providing specialized functions at some cost in compatability. As of this writing, the IBM PC family consists of 11 members which can be categorized as follows.

The general-purpose personal computers consist of the PC, PC XT, and the Portable PC. These machines all use the Intel 8088 microprocessor and accept most of the same interface adapter boards. The PCjr also uses the 8088, but is packaged quite differently, which leads to programming differences when directly controlling the device adapters.

The PC AT is an upgraded PC XT which uses the

### Charles A. Crayne and Dian Girard

more advanced Intel 80286 microprocessor. This chip has architectural features which allow it to address more memory than the 8088 and which can protect sections of memory against unauthorized changes. These features make this chip desirable for running multiuser operating systems. However the 80286 also has a 8086/ 8088 compatability mode which means that systems and programs written for the PC and PC XT will operate on the PC AT with little or no changes.

The 3270 PC contains a hardware windowing capability and is designed for direct attachment to an IBM communications controller. In this mode, it will handle four host communication sessions, two scratchpad windows, and one DOS program window. Several models exist, with different graphics capabilities. The older models are build on a PC XT base. The newer ones use the PC AT. Except for the screen handling functions, therefore, programming is similar to the base machines.

The PC XT/370, and a newer version based on the PC AT, are quite different from the rest of the family. They have been upgraded with a special processor board containing a Motorola 68000 microprocessor; a second, specially modified 68000; and a modified Intel 8087 floating point processor. This allows them to execute the IBM 370 instruction set, and thus to directly execute many programs written to run on the IBM main-frames. Needless to say, programming for these machines is beyond the scope of this book.

### **PC** Operating System

When the IBM PC was announced, three operating systems were announced as supporting it. These were PC DOS, written for IBM by Microsoft; the UCSD p-system; and Digital Research's CP/M-86. For a variety of reasons—

primarily IBM's aggressive policy of pricing DOS at a small fraction of the price of the other system—PC DOS has become the industry standard. The other operating systems still exist, and the 3270 PC and the PC XT/370 each have their own unique control programs. But the only serious threat on the horizon are the variants of ATT'S UNIX operating system. These are PC/IX for the PC XT and XENIX for the PC AT.

PC DOS, however, is itself heading towards UNIX functions. When DOS 1.0 appeared, it was obvious that it owed a lot to CP/M. Some programmers maintain that it is easier to convert CP/M programs to DOS than to CP/M-86. PC DOS 1.1 was a maintenance release, but PC DOS 2.0 introduced many new features, including the UNIX concepts of input and output redirection, program piping, and filters. DOS 2.1 was announced as a release specifically to support the PCjr, but was also a maintenance release which fixed several known problems. PC DOS 3.0 was announced to support the PC AT, with no other new functions. At the same time, PC DOS 3.1 was announced for delivery in the spring of 1985, to support the newly announced networking features. Due to publication schedules, the sample programs in this book have been developed and tested under DOS 2.1 on a PC XT, but should work with little or no change on DOS release 3.


## Chapter 2 OVERVIEW OF THE 8086/8088 ARCHITECTURE

The "brain" of the IBM Personal Computer is the Intel 8088 microprocessor unit (MPU). Although this unit is quite small physically it has several design features that are commonly found in the much larger "mainframe" computers. It is logically divided into two parts: the Bus Interface Unit (BIU), which contains the segment registers and the instruction pointer, and the Execution Unit (EU), which contains the program registers and the stack and base pointers. Figure 2.1 illustrates the functional organization of the 8088 MPU.

The function of the Bus Interface Unit is to handle all of the memory read and write requests and to keep the instruction stream byte queue (the "pipeline") full. Since the 8088 BIU Interfaces to an 8-bit data bus and the EU works primarily with 16-bit operands, the BIU must make two consecutive bus reads whenever a 16-bit value (such as an address) is required. These functions are performed asynchronously with instruction execution. That is, after each instruction is performed the BIU checks the status of the pipeline. This pipelining technique effectively isolates the Execution Unit from

### THE SERIOUS ASSEMBLER

### Figure 2.1-8088 Architecture

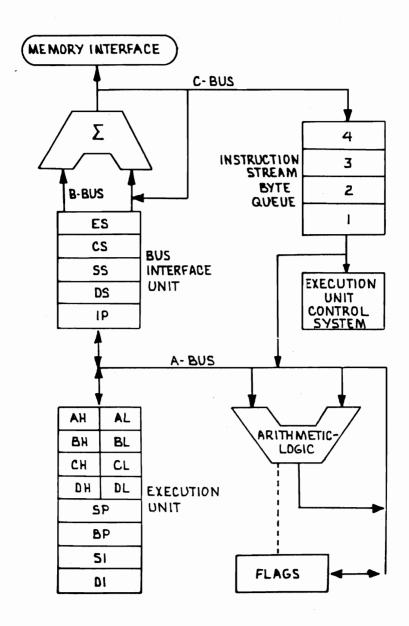

the data bus and avoids placing boundary restrictions on application data. You do not have to worry about placing data on word or byte boundaries.

The pipeline can be accepted or manipulated by the programmer. The only time it needs to be considered are on those rare occasions when the proper operation of a program depends upon knowing the exact timing of a sequence of instructions. [This discussion has been presented here primarily to dispell the myth that if IBM had chosen to base its PC on the Intel 8086 (which is logically identical to the 8088 but interfaces to a 16-bit bus) then the PC would have run twice as fast. In fact, a detailed study of the 8086 and 8088 timing equations yields the conclusion that for a typical application program, the change from an 8-bit to a 16-bit data bus would result in no more than about a 20 percent improvement in execution time.]

The programmers view of the 8088 consists solely of the registers and the flags. Four of the EU's registers (AX, BX, CX, and DX) can be addressed either as single 16-bit registers or as two paired 8-bit registers. The register pair AH/AL can be called AX, BH/BL is the same as BX, and so forth. All of the other registers are 16-bit (two-byte) registers only, and cannot be used for single-byte manipulation.

The 8088 instruction set consists of about 90 basic instructions, each of which can be used with multiple addressing modes. Most of these instructions will work either on byte (8-bit) or word (16-bit) operands. Most of the instructions are either register-to-register or registerto-storage operations. Memory-to-memory operations are only available with special case "string handling" instructions which are dependent upon source and destination index registers.

This book assumes that you have access to a reference manual that describes the function of each machine

instruction in detail, and therefore that information has not been duplicated in this book. For quick reference, however, a chart giving a short description of each assembly language instruction (mnemonic) is provided in Appendix A.

Like all language handlers, the IBM macroassembler (which will be considered the standard throughout this book) has its own syntax rules. Figure 2.2 is a program fragment which shows the format. Each instruction appears on a separate line in the source file, and each instruction consists of two parts, although not all parts are required on every line.

Figure 2.2—Instruction Format

LABEL:	MOV	AX,CASH	; CAPTURE	MONEY
	CMP	AX,Ø		
	JNZ	LABEL1		

(code omitted for clarity)

;CALCULATE COMMISSION LABEL1:

The first component of an instruction is an optional label. A label which references a machine instruction is followed by a colon. Next is the operator, which is the mnemonic for a machine instruction. Then come the operands, or data, being used by the operator. The number of operands depends upon the specific instruction. In most cases, the operands will consists of a register and a memory reference.

The order of the operands is important. Many systems distinguish between read and write requests by using separate instructions, such as "load" and "store." The IBM macroassembler uses the single mnemonic "MOV" for both cases, with the direction being from the second operand to the first. Thus, in the example line "MOV AX,CASH" the value at the memory location labeled "CASH" will be loaded into the 16-bit register "AX." If "CASH" does not refer to data item defined as a word, then the assembler will flag this statement as being in error. Notice that the operands are separated by a coma. This is a required character. If it is missing the assembler will also flag the statement. Although labels are generally started in the first column the position of the instruction elements is not critical. Formatting can be done with either spaces or the tab key.

The final element of an instruction is an optional comment. Comments are indicated by a semicolon (;); any part of a line following a semicolon is considered to be a comment. If a semicolon appears in the first position of a line then the entire line is a comment.

### **Segment Registers**

The 8088 instructions work with 16-bit addresses. Sixteen bits are only enough to access a memory address space of 64K bytes. To overcome this limitation, the 8088 BIU indexes all memory requests—for data or instructions—with a 20-bit value computed from one of the four segment registers (CS, SS, DS, or ES). These registers are actually only 16 bits themselves, but they are used as if they had an additional four zero bits appended to them. A segment always begins on a 16-byte boundary and for this reason a group of 16 bytes on a 16-byte boundary is called a "paragraph."

Each of the four segment registers has a specific purpose. The Code Segment (CS) register is automatically used as the index for the instruction

pointer. That is, all instruction fetches come from a 64K address space pointed to by the CS register. The Stack Segment (SS) register provides a similar function for all stack operations. In addition, memory requests which are indexed by the Base Pointer register (BP) default to the stack segment. The Data Segment (DS) register provides automatic indexing of all data references except for those which are relative to the stack, those which are the destination of one of the "string" instructions, and those cases where the programmer has explicitly specified a different segment register. Finally, the Extra Segment (ES) register automatically indexes only the destination operand for the "string" instructions.

Figure 2.3 illustrates one way in which the four segments can be set up in the 1024K [1-megabyte (1M)] total address space. In the example each segment is separate and noncontiguous, but this need not be the case. Segments can overlap or even coincide. In extreme cases, manipulation of the segment registers can be quite tricky, but fortunately, most of the time the assembler and the linker will set up the proper values and the programmer can mostly ignore them.

### Arithmetic and Index Registers

There are four general-purpose registers: AX, BX, CX, and DX. As mentioned above, each of these registers can also be treated as two single-byte registers. That is, AX consists of AH, which is the most significant byte of AX, and AL, which is the least significant byte of AX. Likewise, BH and BL make up BX, CH and CL comprise. CX, and DH and DL form DX. Although all of these registers can be used to perform 8- or 16-bit arithmetic, each also has one or more unique functions.

AX is the primary accumulator. Some instructions,

### Figure 2.3—Memory Organization

MEMORY REFERENCE NEEDED	SEGMENT REGISTER USED	SEGMENT Selection Rule
Instructions	CODE (CS)	Automatic with all instruction prefetch
Stack	STACK (SS)	All stack pushes and pops. Memory refer- ances relative to BP base register except data references.
Local data	DATA (DS)	Date references when: relative to stack, destination of string operation, or expli- citly overridden.
External Data (global)	EXTRA (ES)	Destination of string operations: Explicit- ly selected using a segment override.
	0FFSET	OFFFFFH CODE SEGMENT XXXX0H STACK SEGMENT
C 5 S 5	WORD {	DATA SEGMENT

Į

EXTRA DATA SEGMENT

00000H

9

14

DS ES

SEGMENT REGISTER FILE such as Convert Byte to Word (CBW) operate only on the AX register. AH and AL are also the primary parameter registers for calls to PC DOS.

BX is the base register. It is the only one of the general-purpose registers which can be used as an index in address calculations.

CX is used in loop control. For example, the LOOP instruction automatically decrements CX by one and branches if the result is not zero. Other instructions can be used with a repeat prefix which will cause them to iterate the number of times specified by CX, creating a "count loop."

DX is the data register. It is used to pass address parameters to DOS, and specifies the port addresses for direct I/O requests.

### **Pointer Registers**

SP is the stack pointer. It points to the current position in the execution stack. Although it can be set to any value, it is normally changed automatically as a result of such instructions as PUSH, POP, CALL, and RETurn.

BP is the base printer. Like SP, it normally points into the current execution stack. However, it is not changed by stack operations. Therefore it is typically used as a base index for variables which were passed to a subroutine by placing them on the top of the stack.

### **Index Registers**

SI is the source index register. It can be used as an index for any data requests. It is automatically used as the pointer to the source operand by the "string" instructions.

Charles A. Crayne and Dian Girard

DI is the destination index register. Like SI, it can be used by the programmer as a data index register. It is automatically used as the pointer to the destination operand by the "string" instructions.

Figure 2.4 is a register usage summary.

Figure 2.4	-Register	Usage	Summary
------------	-----------	-------	---------

GENERAL	PURPOSE REGISTERS
AX	Primary accumulator. Used for all I/O operations and for primary parameters for DOS calls.
ВХ	Base register. The only general purpose register used in address calculations.
СХ	Count register. Used for loop control.
DX	Data register. Holds address parameters for DOS
	calls, and the port address for I/O.
POINTER F	REGISTERS
SP	Stack Pointer
BP	Base Pointer
INDEX REG	ISTERS
SI	Source index.
DI	Destination indes. (Indexed access to memory is required for string instructions.)

### **Addressing Modes**

Coding style often depends on the available addressing modes. The 6502, for example, has only single-byte index registers. This forces the programer to put data tables on page boundaries. The 8080 has only limited ability to address memory without using index registers. This leads to a programming style in which the register contents are constantly being saved and reloaded from register save areas.

The 8088 solves both at these problems. The immediate mode works not only for registers, but also for memory locations. This makes it unnecessary to initialize memory constants by first passing the values through a register.

The direct mode is available for most instructions, allowing, for example, the direct addition of a register to a memory location instead of having to load the value into the accumulator, add in the desired register, and then store the accumulator back into memory. The direct mode can be enhanced by several different ways of indexing. Even double indexing is available, which allows for the concept of repeated fields within records within buffers, all controlled with register pointers.

Finally, indexing or double indexing can also take place within the stack segment. This is most useful when the stack is being used for passed parameters and local program variables in order to provide reentrant code.

Addressing modes are summarized in Figure 2.5.

Figure 2.5—Addressing Modes			
IMMEI	DIATE		
	ADD	AX,1024	
	MOV	TEMP,25	
DIRE	СТ		
	ADD	AX, TEMP	
		TEMP,AX	
DIREC	и, т	NDEXED	
		AX, ARRAY[DI]	
	MOV	TABLE[SI],AX	
IMPLI	ED		
	ADD	AX,[DI]	
	MOV	[SI],AX	
BASE	RELAT	LIVE	
	ADD	AX,[BX]	
		AX, ARRAY[BX]	
	ADD	AX, ARRAY[BX+SI]	

STACK	
ADD	AX,[BP]
ADD	AX, ARRAY[BP]
ADD	AX, ARRAY[BP+SI]

### **Stack Operations**


Some machine architectures, like the IBM 360/370 family, have no concept of an execution stack. Others, like the 6502, place the stack at a hardware-defined location. The 8088 allows the stack to be placed anywhere in memory, and lets the programmer work directly within the stack (through register indexing) as well as with the item which is currently on the top of the stack.

Figure 2.6 shows how the stack might look after a subroutine is given control. The calling routine has placed three parameters on the stack before issuing the call instruction. The SS register points to the start (low address) of the stack segment. This address can be anywhere within the 1M address space supported by the 8088. (In actuality, of course, the stack has to be in read/write memory.) The Stack Pointer points to the 16-bit value which is currently on the top of the stack. Note that the illustration has been drawn so that the lowest memory address is toward the bottom of the page. The stack actually grows from high memory addresses toward lower memory addresses. The concept of calling the most recent addition to the stack the "top" is a logical one that comes from the way a human would put a piece of paper on the top of a stack.

The called program could refer to the passed parameters as an offset from the Stack Pointer (SP). But SP is

#### THE SERIOUS ASSEMBLER


Figure 2.6—Stack Awaiting Subroutine Operation

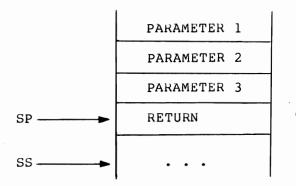

TOP OF STACK

going to move around as the subroutine saves and restores the caller's registers. So a better way is to use the base pointer register, BP. Here is a scenerio which a subroutine might use in order to save registers and access both the passed parameters and its own local variables, all in a way which requires no preallocated storage.

First, the subroutine saves the caller's BP register. Then BP is set equal to SP. SP is then decremented by two bytes for each local variable. The other registers are now saved, as required, by pushing them on the stack. This leaves the configuration shown in Figure 2.7. Note that all of the passed parameters can now be addressed as BP+n and the local variables are addressed as BP-n, where *n* is the offset. When the subroutine is finished, it resets SP to BP and issues a RET *n* instruction to clean up the stack.

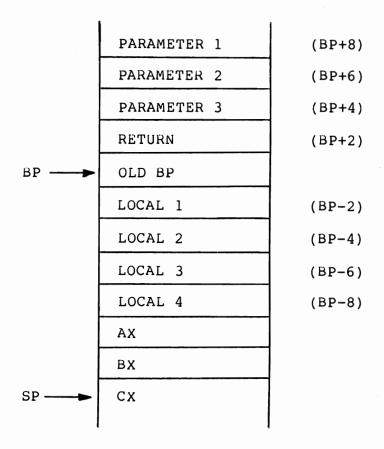

## Chapter 3 PROGRAMMING IN THE .COM ENVIRONMENT

At first glance the four segment registers—each of which relocates a different type of address reference—seem to make programming on the PC overly complicated. It's true that they add a level of programming complexity which did not exist in previous generations of microcomputers, but they do not have to be used for the majority of programs. By accepting a few simplifying restrictions, not only can the segment registers be mostly ignored, but their existence can solve some of the common problems associated with relocating code.

Without hardware relocation, a microprocessor using a 16-bit addresses operates in an absolute address space of 0 to 64K. Unfortunately the application programmer cannot use this entire address range because it is shared with the operating system, ROM storage, and memory-mapped I/O.

The location of the operating system is particularly critical. If it is placed in low memory, and grows larger for any reason (such as a new release with more features), all of the application programs have to be relinked to a higher address. On the other hand, if the operating system is located in high memory, then it has to be regenerated whenever the amount of read/write memory on the system is changed.

The PC segment registers do away with these problems entirely. By simply accepting the segment register values set by the operating system when it loads the program and ignoring them thereafter, the application program becomes completely independent of the actual hardware address assignments.


Figure 3.1 is an overview of the 1M address space. (For a more detailed breakdown, with specific addresses, see the "System Memory Map" in the *Technical Reference Manual.*) The first 640K can contain read/write memory (RAM). The next 128K is reserved for CRT refresh buffers, although only the 3270 PC currently uses all of it. The top 256K contains the system BIOS and cassette BASIC, which are on the system board, and any ROM code on expansion boards, such as that on the hard disk controller.

The PC's operating system is loaded into low memory. Next to be loaded are any specified device drivers, and any other programs, such as a print spooler, which have to stay resident while the application programs are running. Application programs are loaded at the first available storage above the resident modules.

When DOS loads a program, it checks to see if the load module contains any relocation information. Such a file conventionally has a file name extension of .EXE, and is the most general format of an executable module. However, .EXE files are a bit more complex to program, and will be discussed later. The other acceptable load module format is conventionally called a .COM file.


A program written to become a .COM file has a simplistic view of the universe. It doesn't know anything about segment registers. It believes that it has been loaded into real memory at address 256, just

#### THE SERIOUS ASSEMBLER

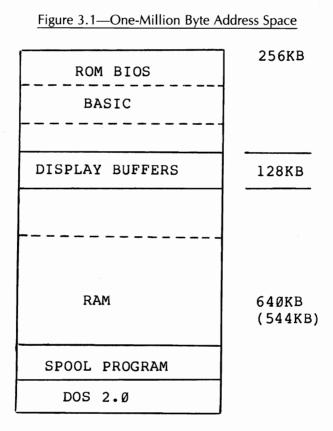

above a predefined work area called the "Program Segment Prefix." This work area is the only reserved area in the program's addressable memory. (This environmental view will be familiar to those who have programmed under CP/M.)


Figure 3.2 contains the description of the PSP, as defined in the DOS reference manual. (The memory addresses are shown in hex.) Again, the similarity to CP/M should be noted. All of the fields in the PSP are set up by DOS when the program is loaded so that no program initialization is required.

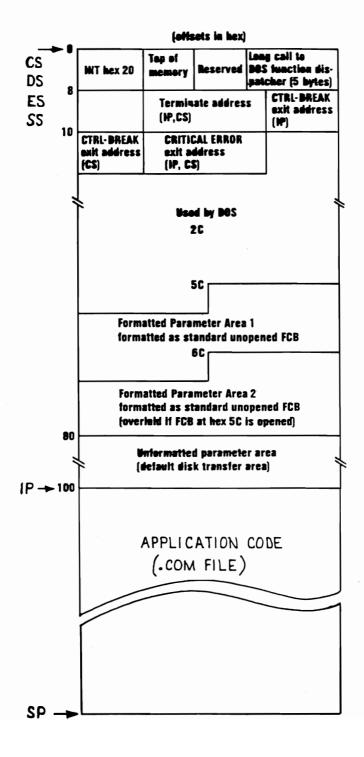

#### THE SERIOUS ASSEMBLER

### **Passing Parameters**

The first field of the PSP that the application programmer is likely to use is the unformatted parameter area at hex 80. When a program is invoked by typing its name from the command prompt, DOS places any command line text following the program name into a text buffer at hex 81 and puts the length of that text string (not including the carriage return) in a one-byte count field at location hex 80. Figure 3.3 illustrates this process. It shows a program fragment which tests for the existence of a parameter string and, if one is found, examines each character in the string.

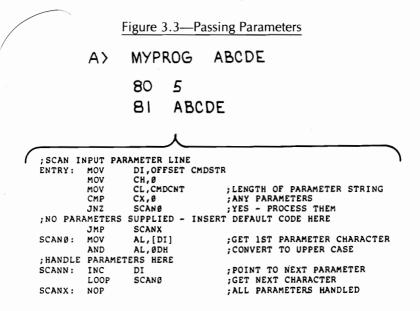

### Gaining Control from DOS

When DOS loads a .COM program, it builds the PSP and sets all four segment registers to point to it. DOS then loads the program at hex 100, sets the stack pointer to the end of the 64K address space (or the top of real memory, if it happens to be lower) and gives control to the program at its load point. The program, therefore, has very little housekeeping to do. The programmer's primary responsibility is to explain to the macroassembler what DOS has already done.

Although the .COM program does not know about segment registers, the macroassembler does. Because of this the programmer's first job is to define the entire program as a single segment. This is done by surrounding the program with the SEGMENT and ENDS pseudoops, as shown in the sample program in Figure 3.6. Next, the assember is informed that all of the segment registers have been set to point to the beginning of the segment via the ASSUME statement. Note that the ASSUME pseudo-op does NOT generate any code. It only sets an expectation level for the assembler to use. This distinction will become critical when we discuss the .EXE environment, where the programmer is responsible for specifically setting the segment registers.

### **NEAR and FAR Procedures**

Another macroassembler construct, which only marginally affects the generated code, is the "procedure." In high-level languages procedure blocks typically control the scope of variable names, keep track of the number and type of passed parameters, and assign storage for local variables. The macroassembler only keeps track of whether a procedure is declared as FAR or NEAR.

A FAR procedure is one that is intended to be called from another code segment. The assembler will generate an intersegment call, which places both the instructions pointer and the code segment register on the

stack before transfering control. Any return instructions within the scope of the FAR procedure will be generated as intersegment returns, setting both the instruction pointer and the code segment from the top of the stack.

A call to a NEAR procedure with be generated with an intrasegment (single-segment only) call, which saves only the instruction pointer. Likewise, any return instructions within a NEAR procedure will restore only the instruction pointer. This situation is shown in Figure 3.4.

Figure 3.4—NEAR and FAR Procedures

FAR-NAME	PROC FAR CALL NEAR-NAME RET
FAR-NAME	ENDP
NEAR-NAME	PROC NEAR (code omitted for clarity) RET
NEAR-NAME	ENDP

Since the .COM environment involves only a single segment, we do not actually need to use FAR procedures. Strictly speaking, it is not even necessary to use procedures at all. The assembler will default to considering the entire program as an unnamed NEAR procedure and will only generate intrasegment calls and returns. However, the use of procedures will become important later and therefore they will be used in all of the sample programs, for the sake of compatibility.

The proper use of the NEAR and FAR procedure attributes involves only a couple of simple rules:

1. Each program should have exactly one FAR procedure which is the routine to which DOS will give control. (This procedure must not contain any embedded subroutines.)

2. All routines called from the main routine must be placed in one or more NEAR procedures. The sample program makes each subroutine a separate procedure, but it is also a common programming practice to group a set of logically related subroutines together into a single procedure.

### **Returning to DOS**

In DOS 1.0 and 1.1 there is basically only one way to effect a normal return to DOS. This is to issue interrupt hex 20 with the code segment register pointing to the program segment prefix. Since, in the .COM environment, CS always points to the PSP and since DOS has placed an INT 20H instruction at the beginning of the PSP, there are several possible techniques to use in executing the interrupt. Four of these are illustrated in Figure 3.5. (DOS 2.0 introduced an additional technique which will be discussed in a later chapter.) The

Figure 3.5—Returning to DC	JS
----------------------------	----

•	ΙΝΤ	21H
•	JMP	Ø
•	MOV INT	AH,Ø 21H
•	PUSH MOV PUSH RET	AX,Ø

first three of these, however, work ONLY in the .COM environment. Again, for compatibility with later examples, we will adopt the fourth technique. Note that this method only works when it appears within the scope of a FAR procedure, since it depends upon an intersegment return to cause both the IP and the CS registers to be set from the top of the stack.

## The Sample Program

Now let us put these concepts together to form the working program shown in Figure 3.6. This simple program will clear the screen, write a short message to the console, and return to DOS. In doing so it illustrates all of the concepts that we have developed in this chapter.

The first thing the program does is perform its housekeeping: it defines a segment, notifies the assembler that the segment registers will be pointing to it on entry, defines labels for that portion of the PSP that it will be referring to, ORGs to the program load point, and jumps around the data area to the true program entry.

Since all four segment registers point to the same place, code and data can be freely intermixed. However, it is a good idea to always define data areas before referring to them, because of the internal design of the assembler. Thus it has become a common programming practice to place all of the data elements together at the beginning of the program, immediately following a jump to the true entry point. Note that labels on data elements (as well as on pseudo-ops) do not have colons for delimiters. This is important. The assembler does weird things if you make a mistake in this rule.

# Figure 3.6—Sample Program

PAGE TITLE PAGE	60,132 SAMPLE	- SHOWS DOS CALL	ING CONVENTIONS FOR .COM FILES			
COMSEG	SEGMENT PARA PUBLIC 'CODE' ASSUME CS:COMSEG,DS:COMSEG,ES:COMSEG,SS:COMSEG ORG 80H					
CMDCNT CMDSTR	DB DB ORG	? 80 DUP (?) 100H	;COMMAND LINE COUNT ;COMMAND LINE BUFFER			
START		FAR Entry	;SKIP DATA AREAS			
; DATA A	REAS					
;	DB		n Executed',13,10,'\$'			
;SCAN I	NPUT PAR MOV MOV	AMETER LINE DI,OFFSET CMDST CH,Ø CL,CMDCNT CX,Ø SCANØ				
;NO PAR	AMETERS	SUPPLIED - INSEP	RT DEFAULT CODE HERE			
SCANØ:	JMP MOV AND	AL,[DI] AL,ØDH	;GET 1ST PARAMETER CHARACTER ;CONVERT TO UPPER CASE			
SÇANN: SCANX:	PARAMET INC LOOP NOP	ERS HERE DI SCANØ	;POINT TO NEXT PARAMETER ;GET NEXT CHARACTER ;ALL PARAMETERS HANDLED			
START	OF MAIN					
	CALL CALL	CLRSCN IAMHERE				
,	TO DOS					
DONE:	PUSH MOV	DS AX,Ø AX				
;; ;SUBROU						
; CLRSCN			;CLEAR SCREEN			
	PUSH MOV INT POP RET	AX AX,2 10H AX				
CLRSCN IAMHERE	ENDP PROC PUSH	АХ				

RET IAMHERE ENDP COMSEG ENDS END

START

Code labels, on the other hand *must* end with a terminating colon.

The section of the sample program that scans the input parameter line does not actually accomplish anything the way it is written. A good first exercise for the reader would be to add the necessary code to the program so that it changes the message written to the console if a specific character is recognized in the input string. (Hint: the simplistic uppercase translate routine provided only works on alphabetic characters.)

The two subroutines provided with this sample illustrate two different techniques for manipulating the screen. CLRSCN clears the screen by issuing a direct call to the ROM BIOS. IAMHERE uses a DOS function call to write a character string to the current cursor position. Note that the function keeps writing until it finds a dollar sign. If you forget to supply this terminator the routine will blithely cause all of memory to be dumped to the screen until one is found (if ever).

The problem with IAMHERE, of course, is that it always prints the same message. As part of the exercise suggested above, IAMHERE should be modified so that the address of the message to be displayed is passed to it as a parameter.

# Chapter 4 ASSEMBLY AND LINKAGE

In order to create an executable program in assembly language you must type the source code, assemble it, and then link it. These steps are always followed, no matter whether the end result is an .EXE or a .COM file.

The macroassembler converts source code instructions, typed in by the programmer, into machine language that can be read by the computer. This assembler, which executes in two separate passes, expects an .ASM file as input, and produces .MAP, .CRF, .LST, and .OBJ files as output. It is generally advisable to put the macroassembler and the linker on a diskette in drive A:, along with any library files used by the program, and to keep all source code on separate diskettes, which are mounted in drive B:. The object code and .EXE or .COM executable files can then be built on drive A: while the listing file is routed to drive B:. This is especially attractive if you are dealing with a program that has been broken up into sections for assembly, since the source code, backup copy, and listing for each program can be kept conveniently on one diskette while a

master diskette holds the generated object code and the final combined program created by the LINK program.

It is very common to run out of disk space while attempting to assemble a program because of the large size of the generated listing (.LST) file. Some programmers prefer to suppress sections of the listing (for routines that have already been debugged) by inserting alternate nonprint (.XLIST) and print (.LIST) commands within the source code. If you are lucky enough to have a hard disk you will have much less difficulty, but if you're dealing with diskettes this is a problem to watch out for.

The assembler needs to know five pieces of information: the names of the source file, object file, cross reference, listing, and map file. It also needs to know which diskettes contain, or will receive, these various files. The best way to give the assembler the information—and to ensure that you don't leave out part of it—is to create a batch file. The batch file only needs to be a single line long and will save you a lot of grief over your development cycle. Figure 4.1 shows a sample batch file that takes a source program from drive A: and routes all of its output to drive B:.

Figure 4.1—Assembly Batch File

ECHO OFF IF NOT EXIST B:%1.ASM GOTO ERROR MASM B:%1,%1,B:%1,B:%1/X%2 GOTO DONE :ERROR ECHO SOURCE FILE NOT ON DRIVE B. :DONE

This batch file uses the limited logic available in batch mode to abort the process if the source code is not present on drive B:. This keeps the assembler from allocating disk space for files that can't actually be built. Without this error proofing, the assembler will create directory entries that can only be purged with CHKDSK.

# Linking Your Code

After the program is assembled it must be linked. This process converts the assembler's machine language code into an executable program. If the program is made up of separately assembled routines then the linker is also used to combine them. Like the assembler, LINK must know where the program sections are, and where the final linked program should be written. Figure 4.2 shows a sample batch file that is used to combine three assembled programs (PARSER, ACTION, and SUBRTN) into a program called ADVENTUR. LINK automatically appends an extension to the completed program, and unless you specify otherwise the extension will be .EXE.

#### Figure 4.2—Linker Batch File

#### LINK PARSER+ACTION+SUBRTN, ADVENTUR, ADVENTUR, /M;

This batch file is intended to be used on the logged drive, which holds the assembled program code, and links known programs. For general cases the replacement character (%) would have to be used instead of the actual program names.

If you want to create a .COM program, instead of .EXE code, you must convert the program by using EXE2BIN, a program that is supplied on your DOS diskette. If this is a process you will be going through often (or even more than once) it is well worth while to

create a batch file to do the work for you. The program shown in Figure 4.3 does both the LINK and the conversion.

Figure 4.3-EXE to COM Conversion by Batch

LINK B:%1,B:%1,B:%1; EXE2BIN B:%1 B:%1.COM DEL B:%1.EXE

#### **EDLIN—The PC Line Editor**

The screen editor provided with the IBM DOS is called EDLIN. It is a line editor, which means that you can only work on one line at a time, unlike a full-screen editor which allows you to move the cursor to any position on the display for additions or corrections. Line editors are somewhat limiting and can be frustrating if you're used to a full-screen version. If you have a word processor that can be used in nondocument mode (like WordStar) and you prefer to use it, by all means do so. Just be sure that it creates a file that can be used by the assembler. Document modes frequently use the high-order bit of each byte for formatting information; this will produce assembly errors.

Editing a file with EDLIN is the same whether it is a new file or you're reopening one for changes and additions. Type EDLIN followed by the name of the new file. If you want to edit a file on a drive other than the logged one you must include the drive name: EDLIN B:TEST.TXT.

EDLIN responds with an asterisk, to let you know the file has been opened. You can now type any of the ten EDLIN commands listed in Figure 4.4. One very important thing to remember about EDLIN is

that it automatically creates a backup copy of your program each time it is used, unless you abort the edit with a Q for QUIT. Always be sure there is enough space on your working diskette to accommodate this backup.

Figure 4.4—EDLIN Commands

	i iguie -	EDEIN Commands
А		Append lines
D		Delete lines
line	#	Edit a line
Е		End editing the file
I		Insert a line
L		List lines
Q		Quit editing
R		Replace text
S		Search for string
W		Write lines

## **Opening a New EDLIN File**

To begin writing lines to a new file you must first type I, which places the editor in insert mode. The editor will prompt you for input by displaying a 1 on the screen, and once you respond by entering your text and then pressing the enter key (carriage return), it will prompt with the next line number. EDLIN

continues to prompt for new lines until you enter CTRL-Break, when it leaves insert mode and displays an asterisk prompt again.

## Making Changes

You can type over a line to make changes, or insert and delete characters within it. First you must select the line for editing. This is done by simply typing the number of the line. EDLIN displays the line contents and its number on the screen and positions the cursor under it, at the first character. If you want to completely replace the line, just type over it and end by pressing enter. If the new line is longer than the old one you do NOT have to use insert to add the extra characters. (You don't have to delete extra characters if the new line is shorter either. EDLIN accepts the enter key as the end of the line and discards the extra text.)

If you want to change part of the line instead of retyping it, use the right arrow to move the cursor to the appropriate location and then press the DEL or INS keys to add or delete text. The right arrow key will type out characters one by one as it moves, and the F3 function key can be pressed to type out the entire line. If the right arrow doesn't seem to work, press the Num Lock key once. Remember that DEL does not remove the characters from the screen while you're typing. You have to count the characters you're erasing. (Yes, it's a pain in the neck, but that's the way it works.) When you're through making changes press the enter key to exit from the line.

# Deleting Lines

Lines are deleted by typing the line number, followed by the letter D. For example, if you wanted to delete line number 1225, you would type 1225D. You can also delete a series of lines by giving EDLIN the beginning and ending line numbers, separated by a comma: 1225,1253D. EDLIN automatically adjusts line numbers as lines are added or deleted, so always delete lines from the bottom of the file toward the top, if possible. If you are careless while deleting from the top down you may find you've deleted the wrong lines. For example, if you want to delete lines 100, 102, and 103 and begin by deleting line 100, you'll find that line 102 has now become 101 and 103 has become 102, while a totally innocent line has moved into the ranks as 103.

# Inserting Lines

Insertions are done with the I command, in the same way that you begin entering lines into a file. The only trick to remember is that insertions are always done *before* the line number you specify. If you type 1000I, then the new line you insert will become 1000 and the existing 1000 will become 1001. EDLIN doesn't allow you to add a specific number of blank lines which you can fill in later. All insertions are done dynamically, one at a time, as you type the text. To get out of insert mode, press CTRL-Break.

# Searching for Strings

The command S, followed by a text string, tells EDLIN that you want to see where that string occurs in the

file. For example, Slabel3 searches for "label3." It will either display the line and its number or display "NOT FOUND." If it does locate the string and you suspect there may be others, merely press the S key and EN-TER again. EDLIN will continue to search through the file for the next occurence. You can also ask EDLIN to search through a specific range of line numbers, by entering the beginning and ending line numbers, separated by a comma: 1225,2000 Slabel3. Adding a question mark between the ending line number and the S command will cause EDLIN to prompt "O.K.?" after each instance it finds. If you want it to stop the search at that position, press enter or Y. Pressing any other key will cause it to continue the search.

# Editing Large Files

In the case of very large files, which will not fit in memory, EDLIN automatically reads in from the disk until 75 percent of available memory has been filled. In order to edit the remainder of the file you must first write the current contents of memory back to the diskette (with the W command) and then append the next file section from the diskette. The command A reads in the file until memory is once again 75 percent full. This write and append sequence can be repeated as many times as necessary, until the end of the file is reached. You can also write or append a specific number of lines by typing the number before the command: 100 W or 100 A. If the number of lines exceeds 75 percent of available memory than only the allowable number of lines will be processed.

# **Debugging Your Program**

A fairly good debugger, called—reasonably enough— DEBUG, comes with your IBM PC DOS system disk. This program can be used to check registers, singlestep thrugh instructions, and dump memory. It also includes a disassembler so that the source code can be checked while the program is running. However, the names of the original labels are not available and they are represented by addresses. This makes it imperative that you have a current hard-copy listing of your program before you begin debugging.

There are 18 DEBUG commands, summarized in Figure 4.5. All of them are single letters. In order to use these commands the program you want to investigate must run under DEBUG, which is done by typing DE-BUG program-name (or DEBUG B:program-name). Once the program has finished DEBUG remains in effect until you type the letter Q, But you must reinvoke DEBUG to test a second program.

Figure 4.5—DEBUG Commands

COMMAND	DESCRIPTION	FORMAT
Α	Assemble statements	A address
С	Compare memory	C range address
D	Dump memory	D address or D range
E	Change memory	E address data
F	Change memory blocks	F range list
G	Go execute (This commands allows yo breakpoints within the execute it.)	
н	Hex add/subtract	H value value
I	Read and display input byte	I portaddress
L	Load file or sectors	L address drive sector sector
м	Move a memory block	M range address
Ν	Define files and parameters	d: path filename.ext
0	Send an output byte	0 portaddress byte
Q	Quit DEBUG	Q
R	Display registers and flags (all registers are displayed unless a single one is speci- fied.)	R registername
S	Search for character	S range list
Т	Trace, by single step or to a given address	T=address value
U	Unassemble instructions	U address or U range
W	Write a file or disk- ette sectors	W address drive sector sector


# Chapter 5 PROGRAMMING IN THE .EXE ENVIRONMENT

As you have seen, we can emulate the programming environment commonly found in the previous generation of 8-bit personal computers by leaving all of the segment registers set to the start of the program segment prefix. With just a little more understanding, however, we can take full advantage of the 8088 architecture's capability to address more than 64K, separate code from data, and directly address hardware dependent areas such as the screen refresh buffers.

## **Registers on Entry**

Unlike a .COM file, an .EXE file contains relocation information in addition to the actual code and data. When the DOS loader recognizes this type of file, it sets the segment registers based upon the definitions supplied by the programmer. Figure 5.1 shows the register assignments on entry to the program. Note that, although the DS and ES registers still point to

Figure 5.1—.EXE Memory Map

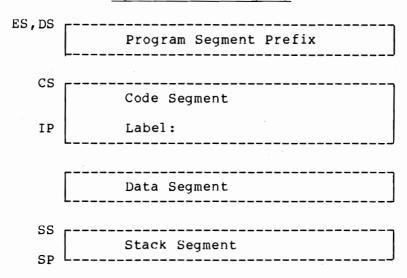

the program segment prefix, the CS and SS registers point to the code and stack segments, respectively. The instruction pointer (IP) now points to the designated entry point instead of an arbitrary hex 100, and the data segment has no initial addressability. The segments are not necessarily loaded in the order shown and, in theory, could be scattered throughout memory.

#### **Segment Definitions**

The actual position of the segments in memory depends on the segment definitions in the application program. Each definition consists of an assembly language statement with five fields. The syntax of this statement is summarized in Figure 5.2. Figure 5.2—Segment Definition

SEGNAME SEGMENT

Align Type -----PARA BYTE WORD PAGE

PUBLIC COMMON AT expression STACK MEMORY

'Class'

Combine Type

•••

SEGNAME ENDS

# Segment Name

The first field is the segment name. In the current DOS versions, the linkage editor processes segments in the order it encounters them. Since the macroassembler sorts its symbol table, this means that, unless overridden, the segments will be loaded into memory in alphabetical order. However, you shouldn't rely on this fact because it may change in future releases of the linker. The segment name is followed by the reserved word *segment* in the second field.

# Align Type

The third field is the alignment type, which is used by the linkage editor to determine the starting position for the segment. The available choices are summarized in Figure 5.3. In actual fact this parameter is not very useful. Since the segment registers can only point to paragraph boundaries, the byte and word parameters are not appropriate. Likewise, since the indexed addressing modes are not sensitive to page boundaries,

Figure 5.3—Align Types

- PARA (default) Segment begins on paragraph boundary
- BYTE Segment can begin anywhere
- WORD Segment begins on a word boundary
- PAGE Segment begins on a page boundary (the address is divisible by 256)

the page option does not ease the programming task. This parameter, therefore, should always be set to "PARA."

# Combine Types

At first glance, it would seem that if we write our entire program as one assembly language module, the combine type would not matter. This *is* true for the PUBLIC and COMMON combine types, but not in other cases. These commands are summarized in Figure 5.4.

PUBLIC specifies that separately assembled segments with the same name will be concatenated (joined together) at link time. This is the normal specification for code segments, and will allow the combined code to be addressed from a single CS register setting.

COMMON specifies that segments of the same name will share the same space. This is the equivalent function to the COMMON data area specification in FOR-TRAN. A data segment used to pass parameters from program to program should be specified as COMMON. Data segments which contain local variables used only in one program should instead specify PUBLIC.

AT, followed by an arithmetic expression, specifies

that the described segment is not actually to be loaded into memory. What it does is set up symbolic pointers to an area of memory which has already been loaded by some other process. This technique is required for addressing the program segment prefix, which is created by DOS. It is also useful for working directly with some of the DOS or hardware-maintained data areas, such as the interrupt vector tables or the screen refresh buffers.

STACK indicates that this segment is the stack segment. A separate stack segment is not allowed for .COM files, but it is required for .EXE files. If you don't include a stack segment you will get an error message when you try to link the program.

MEMORY specifies that this segment is to be loaded at a higher memory address than the rest of the segments. This overrides the default load sequence. Obviously, only one segment can be specified with the MEMORY parameter and mean anything. The results of specifying this parameter are affected by the /DSALLO-CATION and /HIGH parameters specified when invoking the linkage editor. In DOS 1.x versions the MEM-

#### Figure 5.4—Combine Types

- PUBLIC Segments will be concatinated to others of the same name.
- COMMON Segments will begin at the same address.
- AT expression Segment will be located at the paragraph number evaluated from the expression (DSECT).
- STACK Segment is part of the stack segment.
- MEMORY Segment will be located at a higher address that all other segments being linked together.

ORY parameter was useful for ordering the segments, so that the programmer could dynamically allocate memory above the end of the defined variables. Starting in DOS 2.0, there are DOS function calls which provide dynamic memory allocation in a more generalized way.

# •Class Entry

The final parameter in the SEGMENT statement is a name enclosed in single quotation marks, which is used by the linkage editor to group segments. The class parameter is another way to control the order in which segments will be loaded into memory. Specifically, all segments within a load module which have the same class parameter will be loaded contiguously into memory.

As we have already discussed, it is rarely, if ever, necessary to manually position segments in memory. Because of this, we recommend that you use the class parameter only for documentation purposes. That is, all code segments should have the class "CODE," data segments should have the class "DATA," stack segments should have the class "STACK," and so forth.

# **Establishing Addressability to Segments**

In the case of .COM files, the programmer never needs to set the segment registers. The only responsibility you have is to inform the assembler of the action which the loader has already taken. When you work with .EXE files, the same is true for the code segment, but the data segment has no initial addressability. Before attempting to access any variables defined in the data

segment, you must point the DS register to it and then tell the assembler what you done. Both of these actions are vital. Figure 5.5 shows a code fragment that does this. Remember that the 8088 architecture does not allow the direct loading of a segment register with an immediate value. Therefore, we first load the value of DSEG (supplied by the linkage editor) into the AX register, and then transfer it into the DS register.

Figure 5.5—Establishing Addressability to Segments

;DEFINE	DATA SEGMEN	Т			
DSEG APREFIX LOGO DSEG		PARA PUBLIC 'D Ø 'SKELETON PROG	ATA' ;SEGMENT PREFIX ADDRESS RAM EXECUTED',13,10,'\$'		
;((	code omitted	for clarity)			
;DEFINE	CODE SEGMEN	T			
(code omitted for clarity)					
;ESTABL	ISH LINKAGE				
	MOV	AX, DSEG	;ADDRESS OF DATA SEGMENT ;NOW POINTS TO DATA SEGMENT		
	MOV ASSUME	DS,AX DS:DSEG	; TELL ASSEMBLER		

#### **Use of Dummy Segments**

In the .COM environment, the program segment prefix was the first 256 bytes of the same segment that contained the code and data. In .EXE programs it is in its own segment. Therefore, variables within this segment that are of interest to the programmer have to be defined using the AT expression form of the segment statement.

A code fragment illustrating this is shown in Figure 5.6. Since DOS initially sets the ES register to point to the program segment prefix you only have to use an

ASSUME statement to let the assembler know that these variables are to be accessed with the ES register. The assembler will automatically generate an ES override prefix on all accesses to these variables.

Figure 5.6—Addressing a Dummy Segment

DEFINE		GMENT PREFIX	
•	SEGMENT	АТ Ø	
	ORG	8ØH	
	DB	?	;COMMAND LINE COUNT
CMDSTR	DB	80 DUP (?)	COMMAND LINE BUFFER
PREFIX	ENDS		
; DEFINE	CODE SEGME	NΤ	
;			
ASSUME	CS:CSEG,	SS:STACK,ES:PRE	FIX
( ೧୯	ode omitted	for clarity)	
;SCAN II	NPUT PARAME	TER LINE	
	MOV	DI, OFFSET CMDS	STR
	MON	СН,0	
	MON	CL, CMDCNT	;LENGTH OF PARAMETER STRING
	CMP	CX,Ø	ANY PARAMETERS?
	JNZ	SCANØ	YES
;SET UP	DEFAULT PAR	AMETERS HERE	,
	JMP	SCANX	
SCANØ:	MOV	AL,ES:[DI]	GET FIRST PARAMETER CHAR.
	AND	AL,ØDH	CONVERT TO UPPER CASE
;HANDLE	PARAMETERS	HERE	
SCANN:	INC	DI	
	LOOP	SCANØ	
SCANX:	NOP		

## **Returning to DOS**

A serious side effect of having the program segment prefix in a separate segment is that most of the choices presented earlier for returning control to DOS will no longer work. This is because of the requirement that the CS register point to the program segment prefix at termination time. In the EXE environment, of course, the CS register is pointing at our own code segment.

Figure 5.7 shows a simple way to solve this dilemma. During initialization, the program saves the ES register (which DOS has preset to point to the program segment prefix) into a variable called APREFIX. The timing on this save is critical. It must be done after DS has been changed to point to our data segment, but before ES has been altered. To terminate, the program places this saved address on the stack, followed by a word (two bytes) of zeros. An intersegment return (forced by the fact that it occurs within a FAR procedure) then causes control to be transferred to the INT 20 instruction within the program segment prefix. This technique has the additional advantage that it ensures that the stack has been cleaned up before the program attempts to exit.

<b>F</b> ·	-	-	D · ·		DOC
Figure	5	/	-Returning	z to	DOS
				,	000

	MOV	APREFIX, ES	;SAVE PREFIX SEGMENT
;RETURN	TO DOS		
DONE:	MOV PUSH SUB PUSH RET	AX,APREFIX AX AX,AX AX,AX	

Figure 5.8 shows the sample program, which has now been updated to run in the .EXE environment. The first thing that had to be done was to define the stack segment. As pointed out previously, this does not mean that the stack will appear first in memory. Actually, because of the naming conventions which we have chosen, it will be placed at the high end of the load module. We have initialized the stack so that it contains an iteration of the word STACK followed by three blanks. Doing this lets you see clearly on a memory dump exactly where the stack is and how much of it has been used.

#### Figure 5.8—Sample Program

PAGE 62,132 TITLE SKELETON ASSEMBLY PROGRAM PAGE DEFINE STACK SEGMENT ;-----------SEGMENT PARA STACK 'STACK' STACK DB 64 DUP('STACK ') STACK ENDS ;-----; DEFINE PROGRAM SEGMENT PREFIX ;-----PREFIX SEGMENT AT Ø ORG 80H CMDCNT DB ? CMDSTR DB 80 DUP ? ;COMMAND LINE COUNT 80 DUP (?) ;COMMAND LINE BUFFER PREFIX ENDS ;-----; DEFINE DATA SEGMENT ;-----DSEG SEGMENT PARA PUBLIC 'DATA' APREFIX DW Ø ;SEGMENT PREFIX ADDRESS 'SKELETON PROGRAM EXECUTED', 13, 10, '\$' LOGO DB DSEG ENDS ;-----; DEFINE CODE SEGMENT ;-----SEGMENT PARA PUBLIC 'CODE' CSEG START PROC FAR ASSUME CS:CSEG,SS:STACK,ES:PREFIX ;ESTABLISH LINKAGE FROM DOS MOV AX, DSEG MOV DS, AX ASSUME DS: DSEG ; ADDRESS OF DATA SEGMENT ;NOW POINTS TO DATA SEGMENT ;TELL ASSEMBLER MOV APREFIX, ES ;SAVE PREFIX SEGMENT SCAN INPUT PARAMETER LINE MOV DI,OFFSET C DI,OFFSET CMDSTR CH,Ø MOV CL,CMDCNT CX,Ø SCANØ MOV ; LENGTH OF PARAMETER STRING ;ANY PARAMETERS? CMP ;YES JNZ ;SET UP DEFAULT PARAMETERS HERE JMP SCANX MOV AL,ES:[DI] ;GET 1ST PARAMETER CHAR AND AL,ØDH ;CONVERT TO UPPER CASE SCANØ: ;HANDLE PARAMETERS HERE SCANN: INC DI LOOP SCANØ SCANX: NOP ;START OF MAIN PROGRAM ;-----CALL CLRSCN

Figure 5.8 (con't.)

	MOV CALL	DX,OFFSET PRINT	LOGO		
RETURN	TO DOS				
DONE:	MOV PUSH SUB PUSH RET ENDP	AX,APREFIX AX AX,AX AX,AX AX	ĸ		
SUBROU	TINES				
CLRSCN	PROC PUSH MOV INT POP RET	AX AX,2 10H AX		;CLEAR	SCREEN
CLRSCN PRINT	ENDP PROC PUSH MOV INT POP RET	AX AH,9 21H AX			
PRINT CSEG	ENDP ENDS END	START			

The next section defined was the program segment prefix. The segment will not actually be at zero, of course, but this specification reminds us that this is a dummy segment which will overlay our definitions on the actual segment built by DOS.

Next the data segment is defined. It is good programming practice to define all of the segments that contain data labels before you define the code segment. The assembler doesn't handle forward references as well as it might. Most of the time, the result is just inefficient code, but sometimes the assembler gets confused enough that it generates phase errors between passes one and two.

The code segment starts out by establishing address-

ability to the data segment and then saving the address of the program segment prefix. Actually, in this simple example, we leave the PSP address in the ES register of the duration of the program. In more ambitious programs you would probably drop addressability to the PSP as soon as you had finished processing the passed parameters. The ES register would then be freed for use in string processing.

After a quick pass through the parameters supplied on the command line, the program issues subroutine calls to clear the screen and print the acknowledgment message. The only difference here between this example and the previous one is that the PRINT subroutine has been generalized by having the caller place the message address into the DX register before issuing the CALL statement.

The final action performed in the program is to clean up the stack and return to DOS.



# Part II

# Programming with DOS Calls

# Chapter 6 DOS CONSOLE SERVICES

All DOS function calls are made by placing the function number into the AH register and issuing an INT 21H instruction. Nine of the function calls (shown in Figure 6.1) deal specifically with the console, that is, the keyboard and the display.

#### Figure 6.1—DOS Console Services

FUNCTION CALL

DESCRIPTION

1	Keyboard input
2	Display output
6	Direct console I/O
7	Direct input without echo
8	Direct input without echo
9	Print string
А	Buffered keyboard input
В	Check keyboard status
С	Clear keyboard buffer and
	invoke input (AL = 1,6,7,8,A)

# **Print String**

The print string function call should already be familiar, since we have used it in the sample programs. Its use is summarized in Figure 6.2. Note that the string must be terminated with a dollar sign (\$) and that any carriage control desired must be included in the string. In the example, 13 is the ASCII decimal value for a carriage return, and 10 is the ASCII decimal code for a line feed. This function treats the display as if it were a teletypewriter. No provision has been made to control color, intensity, underlining, and so forth. This is true of all the DOS console function calls.

#### Figure 6.2—Print String

AH = 9DS:DX points to the character string (which must be terminated by a dollar sign). Calling Sequence: MOV DX, OFFSET LOGO CALL PRINT (code omitted for clarity) PRINT PROC PUSH AX MOV AH,9 INT 21H ΑX POP RET PRINT ENDP Actual Print Line:

LOGO DB 'SKELETON PROGRAM EXECUTED',13,10,'\$'

# **Buffered Keyboard Input**

The printer equivalent input function to print string is buffered keyboard input. This function lets the application program read an entire line, terminated by a carriage return, from the keyboard without having to worry about handling the individual key strokes, echoing characters to the screen, editing, and so on.

In this case the DS:DX register pair points to a buffer. The first byte of this buffer contains the maximum length of data that can be accepted, including the carriage return at the end. If the user attempts to overrun this length, by typing in more than the allowable number of characters, DOS will sound the audible alarm and discard the extra typed characters.

The second byte of the buffer contains the length of the actual input string, *not* including the carriage return. This value is set by DOS. Note that difference carefully. The carriage return occupies a buffer position, but is not included in the returned count field. Therefore the current count will always be at least one less than the maximum count.

The actual message string starts at byte 3. DOS does not clear or pad the remainder of the buffer, so the application must rely on the count field. Other than the fact that the maximum count field does not appear in the program segment prefix, this is the same technique that is used by DOS to pass any parameters to the program that are typed following the program name on the command line. Figure 6.3 summarizes the buffered keyboard input function.

## **Character Output**

There are several reasons why a programmer might want to output characters directly, instead of using the Figure 6.3—Buffered Keyboard Input

 $AH = \emptyset A$ DS:DX Points to the buffer

l byte l byte

MAX.	CURR.	INPUT	MESSAGE	(return)
COUNT	COUNT			

DS:DX

Note: The current count does not include the carriage return. All editing keys are available.

There is a similarity to the buffer in the program segment prefix.

print string function, and one of them is the way the print string function uses a dollar sign as a required terminator. It is hard to justify that convention on anything except historical grounds! Figure 6.4 shows two different ways in which the character output function call can be used in a subroutine to create a print string function which handles termination differently. In the first example, the calling sequence is identical to a print string call (DS:DX points to the string) except that the string is terminated by a byte of zeros instead of by a dollar sign. The heart of this routine is the LODSB instruction which moves the byte pointed to by the DS:SI register pair into the AL register, and automatically increments SI. This "moves" the DX register along the string byte by byte, as each character is read and printed.

The second example expects the length of the string to be passed in the CX register. No terminator is

#### Figure 6.4—Character Output

AH = 2DL = the character

The system checks for control/break FOLLOWING output.

 Print string terminated by Ø (Expects the message offset in DX.)

PRZER	PROC PUSH PUSH PUSH MOV	AX DX SI SI,DX			
PRZER1:	LODS	_			
	CMP	AL,Ø			
	JZ	PRZERX			
	MOV	DL,AL			
	MOV	AH,2			
	INT	21H			
	JMP	PRZER1	;GET	NEXT	CHARACTER
PRZERX:	POP	SI	•		
	POP	DX			
	POP	AX			
	RET				
PRZER	ENDP				

 Print String of Known Length (expects the message offset in DX and its length in CX)

PRSTR	PROC	
	PUSH	AX
	PUSH	СХ
•	PUSH	SI
	MOV	SI,DX
PRSTR1:	LODSE	3
	MOV	DL,AL
	MOV	AH,2
	INT	21H
	LOOP	PRSTR1
	POP	SI
	POP	СХ
	POP	AX
	RET	
PRSTR	ENDP	

expected. This version makes use of the LOOP instruction, which automatically decrements CX and branches if the result is nonzero.

Other variants can be coded very easily. One com-

mon technique, for example, is to include the length of the string as the first byte of the string itself. Another is to set the high order bit on in the last character of the string. Implementing either of these methods requires only minor modifications to the example shown.

## **Character Input**

There are three function calls (1, 7, and 8) that retrieve a character from the keyboard. All three of them check to see if there is currently a character in the DOS type-ahead buffer. If so, it is returned in the AL register (where it can be tested) and deleted from the buffer. If the buffer is empty, then the functions will wait until a key is pressed and a character is available, and then return it as before.

There are two areas of distinction between these functions. Only function 1 echoes the received character to the screen. Function 1 also checks to see if the user has typed the CTRL-break key combination recently. (If so, control is passed to the routine whose address is specified at offset 14 in the program segment prefix.) Function 8 checks for CTRL-break too, but function 7 does not. Figure 6.5 summarizes these combinations. Logically,

#### Figure 6.5—Character Input Functions

AH = 1, 7, or 8

The next character from the buffer is returned in AL. If the buffer is empty the system waits for a keypress.

FUNCTION	ECHO TO SCREEN	N? CHECK FOR CTRL/BRK?
1	yes	yes
7	no	no
8	no	yes

there should be a fourth combination which echoes to the screen but does not check CTRL-break. No such function is supplied, although it could be built up from the direct console I/O function if you really feel that you need it.

#### **Direct Console I/O**

Sometimes it is desirable to check for the presence of an input character in the DOS type-ahead buffer, but not to wait for one if there's none there. If DL is set to hex FF, then the function will return the next character from the buffer, if any. Otherwise, it will return zero. If DL is set to any other value, then it is interpreted as a character to be written to the screen.

This function does not wait in either case, nor does it check to see if CTRL-break has been issued. This gives the programmer absolute control over the character I/O operation. The rules for this function are summarized in Figure 6.6.

#### Figure 6.6—Direct Console I/O

AH = 6 $DL = \emptyset FFH$ 

> This is an input function. It returns the keyboard character in AL if one is ready. Otherwise it returns a zero.

DL NOT= ØFFH

Writes the character in DL to the screen.

This function never waits, never checks for CTL/BRK

## **Clear Buffer and Input**

This function, illustrated in Figure 6.7, purges the DOS type-ahead buffer, and then links to one of the five

input functions already discussed above. Most of the time it is desirable to allow the user to type input before it is needed, but sometimes this is not appropriate. Consider, for example, a disk I/O error subroutine which wishes to ask the user if a retry is desired. Since such an error is not usually predictable, any information in the buffer is highly unlikely to be the response to the question. This function solves that problem by flushing out all of the input buffer characters before it goes on to normal processing.

Figure 6.7-Clear Input Buffer and Perform Function

 $AH = \emptyset CH$ AL = 1, 6, 7, or A

The keyboard buffer is cleared and the function is invoked from AL. The system is forced to wait for a keystroke.

## **Keyboard Status**

If a program is sophisticated enough to do its own multitasking, by checking several input sources (such as communication lines), then the dispatcher routine may want to know that the console user has pressed a key. However, it may not be the routine that will ultimately process the input. In this case, if the input routine deletes the character from the buffer, then the calling routine must save the returned character and later pass it to the appropriate subroutine. This function, shown in Figure 6.8, solves the problem by leaving the character in the DOS buffer and just returning the status. The keyboard status function could also be used during a long processing routine to check to see if the user has pressed CTRL-break to terminate processing. In that case the calling routine would not

even have to check the returned status, since control would not be returned if the CTRL-break routine was invoked.

Figure 6.8—Keyboard Status

 $AH = \emptyset BH$ 

ØFFH is returned in AL if a character is available. Otherwise, a zero is returned in AL. A check is always made for CTRL/BRK.

# Chapter 7 OTHER CHARACTER CALLS

## **Printer Output**

The IBM PC is designed to support up to three parallel output ports, which are assumed to be printers. DOS recognizes the existence of all three, if present, but the series of character-oriented function calls we are presently studying only supports the first (or standard) printer. This call is identical to function 2, which writes a character to the screen, except that AH is set to 5. In addition, if the printer is not ready, DOS will invoke the critical error handler. This routine will print an error message to the screen and request that the user choose from the three options: Retry, Ignore, or Abort. (This is a change from DOS release 1, where only an error message was issued.)

Since the function is essentially identical to the one for screen output, the print string functions developed in Figure 6.4 will also work for sending strings to the printer just by changing the function number in AH. Another possibility is to modify the function to display the string on the screen and also echo it to the printer if a flag has been set. Figure 7.1 shows an example of this technique.

#### Figure 7.1—Screen Output Echoed to the Printer

Display string terminated by Ø with optional echo						
to printer. (Expects address of string in DS:DX,						
PRTFLG=Ø	PRTFLG=0 for no echo.)					
	PRZE	R PROC				
	PUSH	AX				
	PUSH	DX				
	PUSH	SI				
	MOV	SI,DX				
PRZER1:	LODS	В				
	CMP	AL,0	;END OF STRING?			
	JZ	PRZERX	;YES - DONE			
	MOV	DL,AL	;CHARACTER TO DISPLAY			
	MOV	AH,2	; DISPLAY CHARACTER FUNCTION NUMBER			
	INT	21H	;INVOKE DOS			
	CMP	PRTFLG,0	;ECHO TURNED OFF?			
	JZ	PRZER1	;YES, GO GET NEXT CHARACTER			
	MOV	AH,5	; PRINT CHARACTER FUNCTION NUMBER			
	INT	21H	;INVOKE DOS			
	JMP	PRZER1	;GET NEXT CHARACTER			
PRZERX:	POP	SI				
	POP	DX				
	POP	AX				
	RET					
PRZER	ENDP					

## Serial Port I/O

DOS provides character-oriented calls for the "standard auxiliary device," which is the first of the PC's two serial ports. Function call 3 waits for a character to be received and returns it in AL. Function call 4 writes the character in DL to the serial port. Since these functions have the same format as the other character input and output function calls, programs written to use the keyboard and display screen can be modified easily to operate a communications line, for example.

The drawback with this technique is that these function calls are unbuffered, do not use interrupts, and do not return any status or error codes. For this reason, serious communications applications need to use more sophisticated techniques.

## **Date and Time Routines**

The PC native hardware (except for the PC AT) does not have a clock, just a timer that ticks about 18.2 times per second. A ROM BIOS routine accumulates these counts in a predetermined memory location. DOS, in turn, uses this information to keep a software clock which keeps track of the elapsed time since January 1, 1980. As shown in Figures 7.2 and 7.3, the time and date values are kept in binary, but in a form that makes both calculation and print editing fairly simple.

Figure 7.2—Date Handling

AH = 2A Get date = 2B Set date CX = Year, in binary (1980 - 2099) DH = Month (1=January, 2=February ... 12=December) DL = Day of Month (1 - 31)

Figure 7.3—Time of Day Handling

		2C Get Time 2D Set Time
СН	=	Hours (Ø - 23)
CL	=	Minutes (Ø - 59)
DH	=	Seconds (Ø - 59)
DL	=	1/100 Seconds (0 - 99)

For the set-date call only, one return code is provided. AL = 0 means the set operation was successful, and AL = FF means that the set request was not valid. For set-time only, one return code is provided. AL = 0means that the set was successful. AL = FF means the set-time request was not valid. Figure 7.4 shows a sample program that will display the current date and time much like the date and time commands, except that it does not prompt for new values.

Figure	7	.4—	Time/	Date	Routine
--------	---	-----	-------	------	---------

	62,132 DATETIME - SAMPLE DATE & TIME PROGRAM						
DEFINE	STACK SI	STACK SEGMENT					
STACK		PARA STACK 'STACK' 64 DUP('STACK ')					
STACK	DB ENDS	64 DUP('STACK ')					
;DEFINE	PROGRAM	SEGMENT PREFIX					
PREFIX	SEGMENT ORG	АТ Ø 80н					
CMDCNT	DB	? ;COMMAND LINE COUNT					
CMDSTR	DB	80 DUP (?) ;COMMAND LINE BUFFER					
PREFIX	ENDS						

Charles A. Crayne and Dian Girard

DEFINE	DATA SEGMENT				
DSEG APREFIX LOGO TIME DATE DSEG	DW DB DB DB ENDS	PARA PUBLIC 'DAT 0 'It is now ' '24:00:00.00 on '12-31-1984.',13	;SEGMENT PREFIX ADDRESS		
•	CODE SEC	GMENT			
CSEG START	SEGMENT PROC ASSUME ISH LINKA MOV MOV ASSUME	PARA PUBLIC 'COI FAR CS:CSEG,SS:STACH AGE FROM DOS AX,DSEG DS,AX DS:DSEG APREFIX,ES			
,					
<b>,</b>	CALL MOV INT MOV CALL MOV CALL MOV CALL MOV CALL MOV CALL MOV CALL MOV CALL MOV CALL POP MOV CALL POP MOV CALL POP MOV CALL POP MOV CALL MOV CALL POP	CLRSCN AH, 2AH 21H AX,CX SI,OFFSET DATE+6 CX,4 BINASC AL,DH SI,OFFSET DATE CX,2 BINASC AL,DL SI,OFFSET DATE+3 BINASC AH,2CH 21H CX AL,CH SI,OFFSET TIME CX,2 BINASC CX AL,CL SI,OFFSET TIME+3 CX,2 BINASC AL,DH	; OUTPUT FIELD WIDTH ; CONVERT TO CHARACTERS ; MONTH ; CONVERT TO WORD ; OUTPUT LOCATION ; FIELD WIDTH ; CONVERT TO CHARACTERS ; DAY OF MONTH ; CONVERT TO WORD 3 ; FIELD LOCATION ; CONVERT TO CHARACTERS ; GET TIME FUNCTION ; DOS FUNCTION CALL ; REGISTER USED BY BINASC ; HOURS ; CONVERT TO WORD ; FIELD LOCATION ; FIELD WIDTH ; CONVERT TO CHARACTERS ; RETRIEVE MINUTES ; MINUTES ; CONVERT TO WORD		

CBW MOV CALL MOV CBW MOV CALL	BINASC AL,DL	ET TIME+6 ET TIME+9 DX,OFFSET LC PRINT	;CONVERT TO WORD ;FIELD LOCATION ;CONVERT TO CHARACTERS ;1/100 SECONDS ;CONVERT TO WORD ;FIELD LOCATION ;CONVERT TO CHARACTERS
RETURN			
DONE:	MOV PUSH SUB PUSH RET	AX,APREFIX AX AX,AX AX	
START ;	ENDP		
SUBROU	TINES		
CLRSCN	PROC PUSH MOV INT POP RET	AX AX,2 10H AX	;CLEAR SCREEN
CLRSCN PRINT	ENDP PROC PUSH MOV INT POP RET	AX AH,9 21H AX	
PRINT ;CONVER	ENDP T BINARY	TO ASCII	
BINASC ;CALL W ; ; ;RETURN: ;	ITH	SI = CX = SI =	SIGNED BINARY NUMBER OFFSET OF OUTPUT FIELD WIDTH OF OUTPUT FIELD OFFSET OF IST DIGIT R REGISTERS PRESERVED
	PUSH PUSH PUSH PUSH PUSH	DX CX BX DI AX	
BA1:	MOV MOV INC LOOP MOV	BYTE PTR [SI SI ;POI BA1 ;LOC	YE START OF STRING ],'Ø' ;FILL CHARACTER NT TO NEXT FIELD POSITION DP UNTIL DONE TIALIZE DIVISOR
BA2:	XOR DIV	DX,DX ;CLE	CAR MSB OF DIVIDEND VIDE BY TEN

# Charles A. Crayne and Dian Girard

	ADD DEC MOV CMP JZ OR JNZ	DL,'Ø' SI [SI],DL SI,DI BAX AX,AX BA2	;CONVERT TO ASCII DIGIT ;STEP BACKWARDS THROUGH BUFFER ;STORE DIGIT ;OUT OF SPACE? ;YES - QUIT ;ALL DIGITS PRINTED? ;NO - KEEP TRUCKING
BAX:	POP	AX	
	POP	DI	
	POP	вх	
	POP	СХ	
	POP	DX	
	RET		
BINASC	ENDP		
CSEG	ENDS		
	END	START	

## Chapter 8 INTRODUCTION TO DISK FILE OPERATIONS

In the version 1 DOS releases (1.0, 1.1), the file functions are record oriented. By this we mean that you can think of a file as a collection of fixed length records which are moved between program storage and diskette or hard disk by means of READ and WRITE commands. Information about which block is to be transferred is communicated via fields within a control block, called a File Control Block (FCB). The FCB is physically located within the program's data areas.

DOS 2.0 introduced stream-oriented I/O. In this type of data handling you can think of a file as a stream of characters, with a pointer to the current position. Through use of something called a *file handle*, you can move the pointer and GET or PUT some number of characters. All of the file buffering and deblocking functions are contained within DOS.

Although the stream-oriented I/O functions are generally easier to use than the record-oriented I/O functions, it is necessary to understand them both. Record-oriented I/O has to be used in any application that must be able to run under DOS 1.0 or 1.1, and is also used whenever

## Charles A. Crayne and Dian Girard

you want to directly manage the file buffers, in order to maximize performance. Let's take a look at recordoriented I/O first.

## The File Control Block

The heart of record-oriented I/O is the file control block (FCB), which is shown in Figure 8.1. This control block comes in two flavors, standard and extended. The standard FCB operates on normal file entries. The extended FCB will also work with volume labels, subdirectories, and hidden and system files.

An FCB in which you have set just the drive number, filename, and extension fields is referred to as an *unopened* FCB. When the remaining fields have been

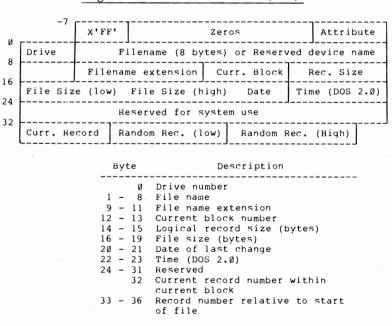


Figure 8.1—File Control Block (FCB)

set by either an OPEN or a CREATE function call, the FCB is referred to as an *open* FCB. Descriptions of the various function calls will indicate whether they require an open or an unopened FCB. The program segment prefix contains space for two FCBs. This is important to remember because DOS will parse the command line looking for file specifications. If found, DOS will set up one or both of these areas as unopened FCBs. FCBs, of course, are not limited to the PSP and can be placed wherever you want to put them.

## The Disk Transfer Address

One piece of information that is not included in the FCB is the address of the file buffer. This address, called the disk transfer address (DTA), is maintained within DOS, but can be set (and in DOS 2 or later can be retrieved) by the programmer.

The DTA is initially set by DOS to point to offset 80H in the PSP. Of course, this area can only be used as the default file buffer if the record size is 128 bytes or less. Figure 8.2 shows how the application program can set and retrieve the DTA value.

#### Figure 8.2—Disk Transfer Address (DTA)

```
Buffer address for all disk transfers
Set initially to 80H in the program segment prefix.
Setting DTA:

AH = 1A
DS:DX = Buffer starting address
Function call = INT 21H

Retrieving DTA:

AH = 2F
Function call = INT 21H
```

The data is returned in ES:BX (DOS 2.0 only)

## **Opening a File**

The OPEN function call asks DOS to search the indicated file directory for a specific file. If the file is found, data from its directory entry is merged into the FCB, otherwise an error is returned. Figure 8.3 summarizes this process. Following the open, the programmer must check the return code, change the record size field (if it is not 128), and set the current record field for sequential operations or set the random record field for random operation.

Figure 8.3—Opening a File

Setting Data: AH = ØFH DS:DX = Address of an unopened FCB Return Codes: 1. ØFF in AL = File not found 2. Ø in AL and: if the drive code was zero (default) the code is changed to the actual drive the current block size is set to zero the record size is set to decimal 128 the date, time, file size, etc. are set

Note that in the FCB the coding for the drive identifier is a little bit different than the convention used elsewhere in DOS. A value of 1 means drive A, 2 indicates drive B, and so on. This allows a zero value to indicate the use of the current default drive. Because the default can be changed during the runnning of a program, OPEN changes the FCB 0 to the value of the current drive. The OPEN call initializes some, but not all, of the remainder of the FCB fields. Unfortunately, some of the fields it does initialize are likely to be different than the ones you want. Because of this you have several programming responsibilities following the OPEN call.

First, you must check the return code in AL. The only good return code is zero. Currently the only error return is OFFH, which indicates that the file was not found. Good programming practice, however, is to check for zero and take an error branch in all other cases. This will ensure compatibility with future releases, which may include additional error conditions.

The OPEN call sets the record size in the file to 128 (80H). This value was picked for compatibility with prior systems which typically used a physical record size of 128 bytes. The IBM PC, however, uses 512-byte sectors. It is good programming practice to always set the record size field, even if the current default is correct.

Finally, the current record field or the random record field (depending upon the type of access you're going to do) must be set to establish the correct file positioning. There are no default settings for these fields, so they must always be set under program control.

### **Reading a File Sequentially**

The Sequential Read call, if successful, transfers the record specified by the current block and current record fields in the FCB to memory at the address specified by the current DTA. (A block is a group of 128 records.) The current record field is then incremented. An entire file can be read, one record at a time, by just reissuing the DOS call. The DTA, on the other hand, is *not* incremented by this call, so that each file record will be read into the same buffer. Loading a file contiguously

into memory could be accomplished by incrementing the DTA address within the program logic, but a better way is provided with the Random Bloc Read call, which will be discussed later.

```
Figure 8.4—Reading a File (Sequential)

AH = 14H

DS:DX = The address of an opened FCB

Function call = INT 21H

Return Codes:

AL = Ø Good read

Ø1 Attempt to read past end of file

Ø2 Attempt to read past end of sector

Ø3 The end of file occurred within the

record that was passed and the record

was padded out with zeros
```

Following the Read call, you should always check the return code in AL. A return code of zero indicates not only that the read was successful, but also that the entire record contained data. One reason that this might not happen is that the end of the file has been reached. If the file size is an exact multiple of the record size, then End of File (EOF) will not be detected when the last record is read, but on an attempt to read the (nonexistent) following record. In this case, no data will be transferred and the return code will be set to 01.

If the file size is not a multiple of the record size, as is usual with text files, then the last file sector will only be partially filled. In this case, DOS will transfer the valid information and pad the rest of the record with zeros. The return code, in this case, is set to 03.

The other currently defined return code is 02. This does not show up often, but when it does it means

you've got a real problem. This is because it has less to do with your programming than with a hardware dependency in the IBM PC. Normally, you do not have to worry about where your program is loaded into memory. That is because, as we have discussed previously, the segment registers provide automatic relocation for all processor memory accesses. Unfortunately the direct memory access (DMA) hardware which is used to control disk reads and writes does not involve the segment registers. This means that most members of the PC family cannot do a data transfer between disk and memory if the record will cross a 64K physical memory boundary. One solution to this problem is to always use a record size which is smaller that 512 bytes. This will cause DOS to first read the physical sector into a DOS buffer and then move the logical record to the program buffer. The Sequential Read call is summarized in Figure 8.4.

You've probably noticed that no error code is provided to report a true hardware read error. This is because (should such an error occur) DOS will invoke the critical error handler routine via interrupt 24H. This routine will only return control to the application program if the error has been successfully handled or can be ignored. Otherwise the program will be terminated via interrupt 23H. If the program is sophisticated enough to handle hardware problems, it can provide its own routines for either the INT 23H or INT 24H calls.

## **Reading a File Randomly**

The Random Read call is summarized in Figure 8.5. It is very similar to the Sequential Read call except that the record to be read is pointed to by the random record field in the FCB. This four-byte field contains

### Charles A. Crayne and Dian Girard

the record number relative to the beginning of the file. That is, the first record is record number zero. When performing this call. DOS first sets the current block and current record fields to agree with the random record field. This allows you to switch back and forth between random and sequential processing on the same file if you want to.

#### Figure 8.5—Reading a File (Random)

AH = 21HDS:DX = The address of an opened FCB

The system takes the value of the random record field (33-36 in FCB) and sets the current block and record fields. It then proceeds as if processing sequentially.

Return Codes:

```
AL = \emptyset
           Good read
```

Ø1

Attempt to read past the end of file Attempt to read past the end of sector 02 An end of file marker occurred within øз the record that was passed and the record was padded out with zeros.

## **Random Block Read**

The Random Block Read call, shown in Figure 8.6, is just a way to load a number of records sequentially into memory with DOS doing some of the bookkeeping. There are only two differences between this call and the Random Read call. Prior to doing a Random Block Read. CX has to be set to the number of blocks to be read. If the return code is zero, then all requested records were read. Otherwise, the return codes mean almost the same as before, but apply to the last record actually read. In addition, CX is set to indicate the

#### Figure 8.6—Random Block Read

AH = 27HDS:DX = The address of an opened FCB CX = The record count (must not be Ø)

CX number of records are read into the buffer at the DTA

Return Codes:

- AL = Ø All records were okay Øl The end of file was reached; the last record was complete.
  - Ø2 The end of segment was reached; as many records as would fit in the segment were read.
  - Ø3 The end of file was reached; the last record is a partial record.

actual number of records read, and the current block and record fields point to the next unread record.

Regardless of AL, CX returns the actual number of records that were read, and the current block and current record fields point to the next unread record.

### Writing a File

For each of the three record-oriented file read calls we've discussed there is a corresponding write call, as shown in Figure 8.7. The only significant difference is that the two return codes which previously reported end of file conditions have been replaced with a single one which indicates that the file write was aborted because there was no room left on the disk. Figure 8.7—Writing a File

AH = Function number DS:DX = The address of an opened FCB All writing is done from the current DTA Write Types:

AH	=	15	Sequential write
		22	Random write
		28	Random block write (if CX is
			Ø on entry then no records are written)

Return Codes:

AL = Ø Successful write Ø1 The diskette is full Ø2 There is not enough space in the disk transfer segment.

### **Closing a File**

It is a good idea to close all files when they are no longer needed. This has to be done by the application program, since for record-oriented operations DOS does not keep track of open files. The function of CLOSE is to update the disk directory. If this is not done, any file which has been changed in size will not have that fact recorded in the directory, leading to loss of information. In addition, if the user physically changes diskettes while there are any open files which have had additional space allocated to them, DOS may later write the file allocation table (FAT) from the previous diskette onto the new diskette, which will destroy access to all files on that diskette. The Close File call is summarized in Figure 8.8.

#### Figure 8.8—Closing a File

### AH = 10DS:DX = The address of an opened FCB

- DOS does not keep track of open files
- All files must be closed individually
- A file close updates the directory
- A file close is not necessary for readonly operations.

Return Codes:

AL	=	Ø	The file directory has been updated
			and the file is closed.
		FF	The file was not in the correct
			directory position.

## End of File (EOF)

If files have been written and closed properly, then DOS knows their physical length. This information is used to signal the program reading the file when the end has been reached. Because of this it is unnecessary, in most cases, to put any kind of special end of file record as the last record in the file, as was common in some prior generation operating systems.

When the file consists of fixed-length records, end of file handling is very straightforward. The CLOSE command set the length into the DOS directory when the file was created or when it was extended. The READ command will return an end of file indication on the first read attempt following the last record in the file.

Variable length records, on the other hand, require slightly different handling. When the file was created, the last WRITE command wrote an entire record, even if the last record was only partially filled. Therefore DOS knows which record is the last record, but not where within that record the valid data stops. Therefore, the application program must adopt some convention which will allow it to recognize the true end of the file. Since text files normally contain only valid ASCII characters, it is an accepted convention to terminate such a file with a special character with a value of 1AH. Variable length binary records usually contain a count field at the beginning of each record, although this convention is not quite as universal as the use of 1AH for ASCII files. EOF techniques summarized in Figure 8.9.

#### Figure 8.9-End of File (EOF) Effects

Fixed Length Records:

- The file size is placed in the directory
- Read supplies a return code
- Close sets the EOF for Write

Variable Length Records:

- Read will pad the last record
- Write will set the size to full record
- ASCII files use hex 1A as the EOF marker

## The Sample File Display Program

Figure 8.10 combines the record-oriented file access calls which we have been discussing into a sample program that displays an ASCII text file on the console. It is the logical equivalent of the TYPE command supplied with DOS, although the error messages are different.

The first notable difference from the previous program examples is in the definition of the program segment prefix (PSP). Previously we defined the unformatted

## Figure 8.10—Sample Program

PAGE TITLE	62,132 Scan - 1	Simple File Displa	ay Program
DEFINE S	TACK SEG		
STACK	SEGMENT DB	PARA STACK 'STACK 64 DUP('STACK	
STACK	ENDS		
DEFINE P		EGMENT PREFIX	
PREFIX	SEGMENT	ΑΤ Ø	
FCB	DB	5CH 32 DUP (?)	
FCBRNO	DB	2	;CURRENT RECORD NUMBER
BUFFER		8ØH	
PREFIX	DB ENDS	128 DUP (?)	;FILE BUFFER
;			
;DEFINE D		ENT 	
DSEG		PARA PUBLIC 'DATA	
.MSG1		'FILE NOT FOUND'	,13,10,'\$'
DSEG	ENDS		
;DEFINE C	ODE SEGM	ENT	
CSEG		PARA PUBLIC 'COD	E '
START	PROC		
	ASSUME	CS:CSEG,SS:STACK	,DS:PREFIX
; ESTABLIS		SABILITY TO DATA :	
;ESTABLIS	MOV	AX.DSEG	; ADDRESS OF DATA SEGMENT
;ESTABLIS	MOV MOV	AX.DSEG	
;	MOV MOV ASSUME	AX,DSEG ES,AX ES:DSEG	; ADDRESS OF DATA SEGMENT ; NOW POINTS TO DATA SEG.
;;START OF	MOV MOV ASSUME MAIN PRO	AX, DSEG ES, AX ES: DSEG DGRAM	; ADDRESS OF DATA SEGMENT ; NOW POINTS TO DATA SEG.
;	MOV MOV ASSUME MAIN PRO CALL	AX, DSEG ES, AX ES, DSEG OGRAM CLRSCN	; ADDRESS OF DATA SEGMENT ; NOW POINTS TO DATA SEG.
;	MOV MOV ASSUME MAIN PRO CALL MOV	AX, DSEG ES, AX ES: DSEG DGRAM CLRSCN DX, OFFSET FCB	;ADDRESS OF DATA SEGMENT ;NOW POINTS TO DATA SEG. ;TELL THE ASSEMBLER
;	MOV MOV ASSUME MAIN PRO CALL MOV MOV	AX, DSEG ES, AX ES:DSEG DGRAM CLRSCN DX, OFFSET FCB AH, 15	; ADDRESS OF DATA SEGMENT ; NOW POINTS TO DATA SEG.
;	MOV MOV ASSUME MAIN PRO CALL MOV MOV INT	AX, DSEG ES, AX ES: DSEG DGRAM CLRSCN DX, OFFSET FCB	;ADDRESS OF DATA SEGMENT ;NOW POINTS TO DATA SEG. ;TELL THE ASSEMBLER
;	MOV MOV ASSUME  CALL MOV MOV INT CMP	AX, DSEG ES, AX ES:DSEG DGRAM CLRSCN DX,OFFSET FCB AH, 15 21H	;ADDRESS OF DATA SEGMENT ;NOW POINTS TO DATA SEG. ;TELL THE ASSEMBLER ;OPEN A FILE
;	MOV MOV ASSUME MAIN PRO CALL MOV INT CMP JZ MOV	AX, DSEG ES, AX ES: DSEG DGRAM CLRSCN DX, OFFSET FCB AH, 15 21H AL, Ø FILEOK DX, OFFSET MSG1	; ADDRESS OF DATA SEGMENT ; NOW POINTS TO DATA SEG. ; TELL THE ASSEMBLER ; OPEN A FILE ; GOOD RETURN?
;	MOV MOV ASSUME MAIN PR( CALL MOV INT CMP JZ MOV PUSH	AX, DSEG ES, AX ES:DSEG OGRAM CLRSCN DX,OFFSET FCB AH, 15 21H AL, Ø FILEOK DX,OFFSET MSG1 DS	; ADDRESS OF DATA SEGMENT ; NOW POINTS TO DATA SEG. ; TELL THE ASSEMBLER ; OPEN A FILE ; GOOD RETURN?
;	MOV MOV ASSUME MAIN PRO CALL MOV INT CCMP JZ MOV PUSH PUSH	AX, DSEG ES, AX ES: DSEG CLRSCN DX, OFFSET FCB AH, 15 21H AL, Ø FILEOK DX, OFFSET MSG1 DS ES	; ADDRESS OF DATA SEGMENT ; NOW POINTS TO DATA SEG. ; TELL THE ASSEMBLER ; OPEN A FILE ; GOOD RETURN? ; YES
;	MOV MOV ASSUME MAIN PRO CALL MOV INT CMP JZ MOV PUSH PUSH POP	AX, DSEG ES, AX ES: DSEG OGRAM CLRSCN DX, OFFSET FCB AH, 15 21H AL, Ø FILEOK DX, OFFSET MSG1 DS ES DS	; ADDRESS OF DATA SEGMENT ; NOW POINTS TO DATA SEG. ; TELL THE ASSEMBLER ; OPEN A FILE ; GOOD RETURN?
;	MOV MOV ASSUME MAIN PRO CALL MOV MOV INT CMP JZ MOV PUSH PUSH POP CALL	AX, DSEG ES, AX ES: DSEG OGRAM CLRSCN DX, OFFSET FCB AH, 15 21H AL, Ø FILEOK DX, OFFSET MSG1 DS ES DS PRINT	; ADDRESS OF DATA SEGMENT ; NOW POINTS TO DATA SEG. ; TELL THE ASSEMBLER ; OPEN A FILE ; GOOD RETURN? ; YES
;	MOV MOV ASSUME MAIN PRO CALL MOV INT CMP JZ MOV PUSH PUSH POP	AX, DSEG ES, AX ES: DSEG OGRAM CLRSCN DX, OFFSET FCB AH, 15 21H AL, Ø FILEOK DX, OFFSET MSG1 DS ES DS	; ADDRESS OF DATA SEGMENT ; NOW POINTS TO DATA SEG. ; TELL THE ASSEMBLER ; OPEN A FILE ; GOOD RETURN? ; YES
;	MOV MOV ASSUME MAIN PRO CALL MOV MOV INT CMP JZ MOV PUSH PUSH POP CALL POP	AX, DSEG ES, AX ES:DSEG DGRAM CLRSCN DX, OFFSET FCB AH, 15 21H AL, Ø FILEOK DX, OFFSET MSG1 DS ES DS PRINT DS	; ADDRESS OF DATA SEGMENT ; NOW POINTS TO DATA SEG. ; TELL THE ASSEMBLER ; OPEN A FILE ; GOOD RETURN? ; YES ; PRINT EXPECTS MSG IN DS:DX
;;START OF	MOV MOV ASSUME  MAIN PRO CALL MOV INT CCMP JZ MOV PUSH PUSH POP CALL POP CALL POP CALL POP JMP MOV	AX, DSEG ES, AX ES: DSEG CLRSCN DX, OFFSET FCB AH, 15 21H AL, Ø FILEOK DX, OFFSET MSG1 DS ES DS PRINT DS DONE	; ADDRESS OF DATA SEGMENT ; NOW POINTS TO DATA SEG. ; TELL THE ASSEMBLER ; OPEN A FILE ; GOOD RETURN? ; YES ; PRINT EXPECTS MSG IN DS:DX ; QUIT
;;START OF	MOV MOV ASSUME  MAIN PRO CALL MOV INT CCMP JZ MOV PUSH PUSH POP CALL POP CALL POP CALL POP JMP MOV	AX, DSEG ES, AX ES: DSEG CLRSCN DX, OFFSET FCB AH, 15 21H AL, Ø FILEOK DX, OFFSET MSG1 DS ES DS PRINT DS DONE' CX, 1	; ADDRESS OF DATA SEGMENT ; NOW POINTS TO DATA SEG. ; TELL THE ASSEMBLER ; OPEN A FILE ; GOOD RETURN? ; YES ; PRINT EXPECTS MSG IN DS:DX ; QUIT ; MARK BUFFER EMPTY
;; ;start of ;	MOV MOV ASSUME  MAIN PR CALL MOV MOV INT CCMP JZ MOV PUSH PUSH PUSH PUSH PUSH POP CALL POP JMP MOV CALL CMP	AX, DSEG ES, AX ES: DSEG CLRSCN DX, OFFSET FCB AH, 15 21H AL, Ø FILEOK DX, OFFSET MSG1 DS ES DS PRINT DS DONE ' CX, 1 FCBRNO, Ø RDBYTE AL, 1AH	; ADDRESS OF DATA SEGMENT ; NOW POINTS TO DATA SEG. ; TELL THE ASSEMBLER ; OPEN A FILE ; GOOD RETURN? ; YES ; PRINT EXPECTS MSG IN DS:DX ; QUIT ; MARK BUFFER EMPTY ; POSITION TO START OF FILE ; READ ONE BYTE FROM FILE ; END OF FILE?
;; ;start of ;	MOV MOV ASSUME  MAIN PRO CALL MOV MOV INT CCMP JZ MOV PUSH POP CALL POP CALL POP CALL POP CALL CMP JZ	AX, DSEG ES, AX ES: DSEG CLRSCN DX, OFFSET FCB AH, 15 21H AL, Ø FILEOK DX, OFFSET MSG1 DS ES DS PRINT DS DONE' CX, 1 FCBRNO, Ø RDBYTE AL, 1AH DONE	; ADDRESS OF DATA SEGMENT ; NOW POINTS TO DATA SEG. ; TELL THE ASSEMBLER ; OPEN A FILE ; GOOD RETURN? ; YES ; PRINT EXPECTS MSG IN DS:DX ; QUIT ; MARK BUFFER EMPTY ; POSITION TO START OF FILE ; READ ONE BYTE FROM FILE
;; ;start of ;	MOV MOV ASSUME  MAIN PRO CALL MOV INT CCMP JZ MOV PUSH POP CALL POP CALL POP JMP MOV MOV CALL CMP JZ MOV	AX, DSEG ES, AX ES: DSEG CLRSCN DX, OFFSET FCB AH, 15 21H AL, Ø FILEOK DX, OFFSET MSG1 DS ES DS PRINT DS DONE ' CX, 1 FCBRNO, Ø RDBYTE AL, 1AH DONE DL, AL	; ADDRESS OF DATA SEGMENT ; NOW POINTS TO DATA SEG. ; TELL THE ASSEMBLER ; OPEN A FILE ; GOOD RETURN? ; YES ; PRINT EXPECTS MSG IN DS:DX ; QUIT ; MARK BUFFER EMPTY ; POSITION TO START OF FILE ; READ ONE BYTE FROM FILE ; END OF FILE? ; YES - QUIT
;; ;start of ;	MOV MOV ASSUME CALL MOV MOV MOV MOV INT CMP JZ MOV PUSH PUSH PUSH PUSH PUSH POP CALL POP JMP MOV CALL CMP JZ MOV MOV	AX, DSEG ES, AX ES: DSEG CLRSCN DX, OFFSET FCB AH, 15 21H AL, Ø FILEOK DX, OFFSET MSG1 DS ES DS PRINT DS DONE' CX, 1 FCERNO, Ø RDBYTE AL, 1AH DONE DL, AL AH, 2	; ADDRESS OF DATA SEGMENT ; NOW POINTS TO DATA SEG. ; TELL THE ASSEMBLER ; OPEN A FILE ; GOOD RETURN? ; YES ; PRINT EXPECTS MSG IN DS:DX ; QUIT ; MARK BUFFER EMPTY ; POSITION TO START OF FILE ; READ ONE BYTE FROM FILE ; END OF FILE?
;; ;start of ;	MOV MOV ASSUME  MAIN PRC CALL MOV MOV INT CALL POP CALL POP CALL POP CALL POP CALL POP CALL CMP JZ MOV CALL CMP JZ MOV MOV INT	AX, DSEG ES, AX ES: DSEG CLRSCN DX, OFFSET FCB AH, 15 21H AL, Ø FILEOK DX, OFFSET MSG1 DS ES DS PRINT DS DONE ' CX, 1 FCBRNO, Ø RDBYTE AL, 1AH DONE DL, AL	; ADDRESS OF DATA SEGMENT ; NOW POINTS TO DATA SEG. ; TELL THE ASSEMBLER ; OPEN A FILE ; GOOD RETURN? ; YES ; PRINT EXPECTS MSG IN DS:DX ; QUIT ; MARK BUFFER EMPTY ; POSITION TO START OF FILE ; READ ONE BYTE FROM FILE ; END OF FILE? ; YES - QUIT

RETURN	TO DOS			· · · · · · · · · · · · · · · · · · ·
DONE:	PUSH XOR PUSH RET ENDP	DS AX,AX AX		
SUBROUT	NES			
CLRSCN	PROC PUSH MOV INT POP RET	AX AX,2 10H AX		;CLEAR SCREEN
CLRSCN PRINT	ENDP PROC PUSH MOV INT POP RET	AX AH,9 21H AX		
PRINT Rdbyte	ENDP PROC LOOP PUSH MOV	RDBYT2 DX DX,OFFSET	FCB	;NO PHYSICAL READ IF CX > 1
	MOV INT POP	AH,14H 21H DX	100	;SEQUENTIAL READ
·	CMP JZ CMP JZ MOV RET	AL,Ø RDBYT1 AL,3 RDBYT1 AL,1AH		;GOOD RETURN? ;YES ;EOF IN CURRENT SECTOR? ;YES, OK ;MARK AS EOF
RDBYT1:	MOV	CX,128 SI,OFFSET	BUFFER	;SHOW FULL BUFFER
RDBYT2:	LODSB RET			;GET CHAR FROM FILE BUFFER
RDBYTE CSEG	ENDP ENDS END	START		

parameter area so that we could scan any passed information. In this case, we make use of the fact that DOS will parse that same information and build an unopened FCB if it encounters what looks like a file name. Therefore, we have defined labels for that FCB. We also have defined a label for the default file buffer. Since our FCB and file buffer are contained within the PSP, the only thing that is defined in our data segment

is the error message, which will be issued if the open call can not locate the desired file.

The code segment begins by establishing addressability to the data segment. Since most accesses will be to the PSP, we have reversed the usual convention and have set the ES register to point to our data segment and left the DS register pointing to the PSP. This will cause us a little problem if we need to issue the error message (since our message print subroutine expects the message to be pointed to by DS:DX), but will help program efficiency if everything runs normally.

After clearing the screen, the program attempts to open the FCB in the PSP. If no file name was entered on the command line, or if DOS can not find that file. then the open will fail. In this case, we issue the error message and exist. Note that in order to do this with our standard PRINT subroutine, we have to temporarily point DS to our data segment. We do this with the PUSHes and POPs surrounding the call to PRINT. This works, but is a little bit dangerous in that we have not informed the assembler that we have played games with the data segment register. (This is the sort of thing that lets you make a mistake in addressability that the assembler cannot catch, resulting in a bug that may be difficult to track down. If you decide to do it, be sure and fully document what you've done, and double check your code.)

If the open is okay, we enter the main program loop. The problem here is that we are going to read the file 128 bytes at a time, but we have to write to the console one character at a time. This is because the contents of a text file consist of variable length lines terminated by a carriage return and line feed sequence. The problem is solved by creating a RDBYTE subroutine that will return one character at a time. The main program logic only needs to loop until end of file, signaled by the presence of a 1AH character, is encountered. It then returns to DOS by pushing the address of the PSP (in DS) onto the stack followed by a word of zeros and then executing an intersegment return. This is the same technique we discussed previously.

The RDBYTE subroutine executes a LOOP instruction to test the count in CX. This is also a bit dangerous since it relies on the fact that the main routine is aware of this use of CX and will preserve its value. The subroutine would not be portable to other programs where the main routine did not take this into account. A better technique would be to define a count variable in the data segment and to save and load CX each time the subroutine is entered. This enhancement is left as an exercise to the reader.

If CX is equal to 1, then the buffer is empty and must be read. In this case, the Sequential Read call is issued to fill the buffer. Although the file should end with a 1AH character, there is no guarantee of that it will. So we check the return code from DOS. If an attempt to read beyond the physical end of file has been signaled, then we inform the main routine by generating and returning the EOF character. Otherwise, we set the SI register to point to the beginning of the buffer, and reset CX. The same comments about saving and restoring the CX register within the subroutine also apply to SI.

If the buffer was not empty, or if we have just refilled it, then we obtain the next character from the buffer and place it into AL by executing a LODSB instruction, which also automatically increments SI.

## Chapter 9 STREAM-ORIENTED I/O

DOS 2.0 introduced an entirely new way of viewing I/O operations. Although the IBM documentation does not use the term, DOS implemented what is called streamoriented I/O. The primary difference is that instead of the programmer viewing a file as a collection of fixed length records, the programmer views the file as a continuous stream of characters. Each read or write request transfers the requested number of bytes without regard for physical media boundaries.

When the file is actually a character-oriented device, such as a console, character printer, or communication line, this method seems very natural. Such devices work almost entirely with variable length text strings which are delimited by special characters such as carriage returns, line feeds, horizontal and vertical tab characters, and so on.

With block mode devices like disk drives, on the other hand, record-oriented I/O seems more intuitively correct. Intuition can be misleading, however. Many disk files are text files, for example, with no natural record boundaries. Such files are best treated as continuous streams of characters just like they would be on character devices.

There are also many nontext files which can be handled better as stream files. These are files with variable length records. Such files have not been very common on small computers because the operating systems have not made them very easy to work with, but they are quite common on mainframes. Variable length records typically have the record length as the first two bytes of the record. With stream-oriented I/O, the program can ask to read the first two bytes to get the length and then use that length to get the rest of the record. With record-oriented I/O, the programmer would have to read a predetermined length into a buffer and then deblock the record under program control.

### **File Handles**

In record mode files the basic anchor point was the File Control Block (FCB). Stream mode files do not have a FCB. Instead, the programmer identifies the file via a 16-bit value called a *handle*, or sometimes a *token*. The file handle is supplied to the program as the result of a successful attempt to open or create a file. The program then supplies this value on all subsequent file requests.

Five file handles have been predefined, and are shown in Figure 9.1. These five pseudo devices are always available, and are not opened by the program. The standard input and output devices normally are the two parts of the console, the keyboard and the display. The reason for using the predefined handles, rather than the DOS console services functions, is that the standard input and output devices can be redirected.

Redirection is another concept that was first introduced in DOS 2.0, although it will be familiar to UNIX

Figure 9.1—File Handles

#### Handle

#### Description

Ø	Standard	Input Device
1	Standard	Output Device
2	Standard	Error Device
3	Standard	Auxiliary Device
4	Standard	Printer Device

fans. When a program is invoked, either by the command process or through a DOS Exec function request, the invoker can specify the actual files that are to be treated as the standard devices. This is very useful when using .BAT files to string together several programs, since the output of one program can be used as the input to the next program.

The function of the standard error output device is primarily to allow a program to continue sending error messages to the console even when the rest of the console output has been redirected to another file or device. The standard auxiliary device is usually the communications line and the standard printer device is usually the first attached printer, although all of the standard definitions are under the control of the parent process.

## **ASCIIZ Strings**

In record mode requests, the file name was passed to DOS via a fixed length field in the FCB. Provision was made to specify a specific drive, but not a path name. In stream mode, file names are passed as an ASCIIZ string, which is a character string containing (if required) the driver identifier, fully qualified directory path, and file name, followed by a byte of zeros. For example, the assembler statement:

### Charles A. Crayne and Dian Girard

## FNAME DB 'C: RBBS DOWNLOAD UTILITY.DOC',0

defines an ASCIIZ string specifying a file in a second level directory on drive C.

## **Error Return Codes**

Record mode requests typically return a one byte code in AL to indicate success or failure. Stream mode requests use a somewhat different scheme. If the request is successful, then the carry flag is cleared and the value in AX is dependent upon the specific function requested. If the requests is unsuccessful, then the carry flag is set and AX contains one of the binary error codes shown in Figure 9.2. Not every possible error code is applicable to every function call, of course. It is

Figure 9.2—Error Return Codes

#### DESCRIPTION

1 2 3 4 5	Invalid function number File not found Path not found Too many open files Access denied				
6	Invalid handle				
7	Memory control blocks destroyed				
8	Insufficient memory				
9	Invalid memory block address				
10	Invalid environment				
11	Invalid format				
12	Invalid access code				
13 14 15 16 17 18	Invalid data unassigned Invalid drive was specified Attempt to remove the current directory Not the same device No more files				

90

CODE

the programmers responsibility to test the carry flag upon return from the function call in order to determine what meaning to give to the contents of AX.

## **Opening a File**

Any normal or hidden file whose name matches the specified name can be opened with the parameters shown in Figure 9.3. If successful, the function will return a file handle in AX. This value must be saved by the program and supplied in all subsequent file requests. In record mode, the open function sets the date, time, and attribute fields in the FCB. In stream mode there is no FCB, of course, but there are additional functional calls which will obtain or set the desired information.

Figure 9.3—Opening a File

```
Registers at Invocation:
AH
         3DH
      =
DS:DX = Address of ASCIIZ string with file name
AT.
     =
         Access code
            \emptyset = Open for read only
            1 = Open for write only
            2 = Open for reac and write
Returns if Successful:
AΧ
      = File handle
Read/Write pointer set to beginning of file
Applicable Error Codes:
          = File not found
       2
       4
          = Too many open files
       5
          = Access denied
      12 = Invalid access code
```

#### Charles A. Crayne and Dian Girard

## Creating a File

Like record mode requests, the stream Open request will only open an existing file. The Create request (summarized in Figure 9.4) can be used to create a new file. In addition, it can be used with an existing file in order to set it to zero length prior to rewriting it.

Figure 9.4—Creating a File

Registers at Invocation: АΗ = 3CHDS:DX = Address of ASCIIZ string with file name CX = File Attribute (hex)  $\emptyset \emptyset$  = Normal file Øl = Read only  $\emptyset 2$  = Hidden file Ø4 = System file Ø8 = Volume label  $1\emptyset = Sub-directory$  $2\emptyset$  = Archive bit Returns if Successful: AX = File handleFile opened for Read/Write Applicable Error Codes: 3 = Path not found 4 = Too many open files

5 = Access denied

The Access Denied error code can have two meanings, depending on the context of the call. If the program is trying to create a new file, then it means that the directory is full. If the program is trying to reset an existing file, than it means that the existing file has been marked read-only.

## **Reading a File**

The three record mode Read requests (sequential, random, and block) have been combined into one in stream mode. This is possible because the function call specifies the number of bytes to read and the buffer address (see Figure 9.5). Note that end of file is not an error condition. Instead, the number of bytes actually read is returned in AX. If this value is zero, then the program has tried to read past the end of the file. If it is greater than zero but less than the requested amount, there are two possible reasons. If the file is a disk file, then the program has just read the remainder of the file. However, if the file is actually a device, then the number of bytes transferred depends upon the characteristics of the device. For example, the keyboard will terminate the transfer when a carriage return is encountered.

#### Figure 9.5—Reading a File

Registers at Invocation:					
AH = 3FH BX = File handle					
CX = Number of bytes to read DS:DX = Buffer address					
Returns if Successful:					
AX = Number of bytes read					
Applicable Error Codes:					
5 = Access denied 6 = Invalid handle					

## Writing a File

The stream Write function is essentially identical to Read. The programmer has the responsibility to check AX on return to see if all the bytes requested were actually written. Any difference should be considered an error. The most common reason for this difference is that the disk is now full.

## **Positioning a File**

The Read and Write stream functions calls are essentially sequential. That is, the read/write pointer associated with the file is advanced automatically by the number of bytes read or written. To have random access capabilities, we need the Lseek function illustrated in Figure 9.6. As shown, there are three different ways to use this function. Method value 0 allows positioning to an absolute value. This could be used to simulate random access to fixed length records. The CX:DX reg-

```
Figure 9.6—Positioning a File (Lseek)
```

ister pair would be loaded with the relative record number times the fixed record length.

A method value of 1 specifies relative positioning. This might be used to skip fields within a record or to advance to the next record by skipping the remainder of the current record. The final method could be used with a negative offset to position to the last record in a file, or with a zero offset as one way to determine the length of the file.

## **Closing a File**

Unlike the record mode case, DOS is aware of which stream mode files have been opened by the program. If control is returned through the DOS Exit function call (4CH), then DOS will close all open files and flush all of the internal buffers relating to them. Nevertheless, it is good programming practice to close files when they are no longer needed. The Close function is shown in Figure 9.7.

Figure 9.7—Closing a File

Registers at Invocation:

AH = 3EH BX = File handle

Returns if Successful:

The file will be closed and all internal buffers flushed.

Applicable Error Codes:

6 = Invalid handle

## A Sample Stream-Oriented I/O Program

The file scan program from the record mode discussion has been rewritten to use the stream mode function calls exclusively, and is listed in Figure 9.8. Note that the program therefore requires DOS release 2 or later to function. Furthermore, although it is possible to check the DOS release level from the program and issue an appropriate message if not suitable, we have not done so for this sample. Therefore, if run on a DOS 1.x system, the program will blow up!

#### Figure 9.8—The Sample Program

PAGE 62,132 TITLE Scan2 - File Display Program Using Stream I/O PAGE ; DEFINE STACK SEGMENT · -----DB 64 DUP('STACK ') STACK ENDS ; DEFINE PROGRAM SEGMENT PREFIX ;------PREFIX SEGMENT AT Ø ORG 80H UPARM DB 128 DUP (?) ;UNFORMATTED PARM AREA PREFIX ENDS ;-----; DEFINE DATA SEGMENT :------DSEG SEGMENT PARA PUBLIC 'DATA' CHAR DB ', ;0 FNAME DB 80 DUP ('') ;F ' ' ;ONE BYTE BUFFER 80 DUP (' ') ;FILE NAME INCLUDING PATH 16,'FILE NOT FOUND',13,10 22,'NO FILE NAME ENTERED',13,10 DB DB MSG1 MSG2 DSEG ENDS ;-----; DEFINE CODE SEGMENT ;---------CSEG SEGMENT PARA PUBLIC 'CODE' PROC FAR ASSUME CS:CSEG,SS:STACK,DS:PREFIX START ; ESTABLISH ADDRESSABILITY TO DATA SEGMENT MOV AX, DSEG MOV ES, AX ASSUME ES: DSEG ; ADDRESS OF DATA SEGMENT ;NOW POINTS TO DATA SEGMENT ;TELL ASSEMBLER

	OF MAIN			
;				
	CALL	CLRSCN		
	MOV			;FILE NAME PASSED BY DOS
	MOV LODSB	DI, OFFSET	FNAME	;FILE NAME FIELD IN OUR DS ;GET PARM STRING LENGTH
		AL,Ø		ANY NAME SUPPLIED?
	JZ	NOFILE		;NO - SAY SO
	XOR	CX,CX		;MAKE SURE HIGH BYTE IS ZERO
	MOV	CL,AL		; INSERT STRING LENGTH
TSTBNK:		027.12		GET CHARACTER
	CMP	AL, '		; IS IT BLANK?
	JNZ	NOBLNK		;NO - GO MOVE NAME
		TSTBNK		SKIP LEADING BLANKS
NOFILE:		ES		DATA SEGMENT
	POP	DS		NOW ALSO IN DS
	MOV	SI, OFFSET	MSG2	NO FILE MESSAGE
	JMP	BADFIL		GO ISSUE MESSAGE
NOBLNK:	STOSB			STORE IN FILE NAME
	LODSB			GET NEXT CHARACTER
	LOOP	NOBLNK		;LOOP UNTIL DONE
	XOR	AX,AX		;CLEAR REGISTER
	STOSB			;TERMINATE STRING
		ES		; POINTER TO DATA SEGMENT
		DS		;NOW ALSO IN DS
		DS:DSEG		;TELL ASSEMBLER
;ATTEMP	T TO OPE			
	MOV	AH, 3DH		;FILE OPEN REQUEST
	MOV	AL,Ø		;READ ONLY
	MOV			;FILE NAME
	INT	21H FILEOK		;DOS FUNCTION CALL
	JNC	FILEOK		;NO ERROR BRANCH
DADETI -	MOV	SI, OFFSET	MSGI	FILE OPEN ERROR MESSAGE
BADFIL:	MOV	BX,2		STANDARD ERROR DEVICE
	LODSB	АН,40Н		;WRITE DEVICE REQUEST ;GET MESSAGE LENGTH
	MOV	CL,AL		; PUT IN COUNT REGISTER
	MOV	CH,Ø		CLEAR HIGH ORDER BYTE
	MOV	DX,SI		; POINT TO MESSAGE
	INT	21H		; INVOKE DOS
		AL,16		SET ERROR RETURN CODE
	JMP	DONEX		RETURN TO DOS
FILEOK:	MOV	BX,AX		SAVE FILE HANDLE
	MOV	DX,OFFSET	CHAR	; POINT TO ONE CHAR BUFFER
READ:	CALL	RDBYTE		;READ ONE BYTE FROM FILE
		CHAR,1AH		;END OF FILE?
	JZ	DONE		;YES - QUIT
		PRBYTE		PRINT BYTE TO STD OUTPUT
	JMP			;GET NEXT FILE BYTE
;; RETURN				
;				
DONE:	MOV	AL,Ø		;GOOD RETURN CODE ;EXIT REQUEST
DONEX:	MOV	AL,Ø AH,4CH		;EXIT REQUEST
	INT	21H		;INVOKE DOS
	ENDP			
;				
;SUBROU	TINES			
;				

CLRSCN	PROC		CLEAR SCREEN				
CERDEN	PUSH	AX	, chemic bonebic				
	MOV	AX,2					
	INT	10H					
	POP	AX					
	RET						
CLRSCN	ENDP						
PRBYTE							
		A POINTER TO A C	CHARACTER IN DX. IT WRITES THE				
CHARACTER TO THE STANDARD OUTPUT DEVICE. NO ERROR CHECKING							
IS PER							
,	PUSH	AX					
	PUSH	BX	;SAVE REGS				
	PUSH	CX	ON ENTRY				
	MOV	АН, 40Н	WRITE REQUEST				
	MOV	BX,1	STD OUTPUT DEVICE				
	MOV	CX,1	COUNT				
	INT	21H	INVOKE DOS				
	POP	СХ					
	POP	вх					
	POP	AX					
	RET						
PRBYTE	ENDP						
RDBYTE							
			N BX AND THE LOCATION OF				
; A ONE	BYTE BUF	FER IN DX. ALL R	EGISTERS ARE PRESERVED				
	PUSH	AX	;SAVE REGS ON ENTRY				
	PUSH	вх					
	PUSH	CX					
	PUSH	DX	DEAD DECUECO				
	MOV	AH, 3FH	;READ REQUEST :ONE BYTE ONLY				
	MOV INT	CX,1 21H	INVOKE DOS				
	JC	FEOF	TREAT ANY ERROR AS END OF FILE				
	CMP	AX,Ø	EOF?				
	JNZ	RDBYT1	;NO - RETURN				
FEOF:	PUSH	SI	, no nerona				
1 201 .	MOV	SI,DX	CAN NOT USE DX AS INDEX REG				
	MOV	BYTE PTR [SI],12	•				
	POP	SI	•				
RDBYT1:	PUP	DX					
	POF	СХ					
	POP	вх					
	POP	AX					
	RET						
RDBYTE	ENDP						
CSEG	ENDS						
	END	START					

The program begins, as before, by defining the stack, data, and program segment prefix segments. The primary difference is that the only field currently defined in the program segment prefix is the unformatted parameter area. This is because DOS can not parse a

filename and build an unopened FCB if the filename contains any path information. Therefore, our program will have to accept the file name in unformatted form.

The next step is to obtain addressability to the data segment in the ES register. The DS register is left addressing the program segment prefix. This combination was chosen to match the register conventions for the string handling instructions which we will use to move the file name to our data segment.

Next we check to see if any filename information was passed on the command line. This is done by checking the count field at the beginning of the unformatted parameter area in the PSP. If this is nonzero, then we skip any leading blanks. If any count still remains, we move the rest of the string to the FNAME field in our data segment. At this point, we have no further need of the PSP, so we set DS equal to ES via a push/pop sequence. This technique is used because the 8088 architecture contains no instructions which will move one segment register directly to another.

The first DOS function call is now issued to attempt to open the file. If the attempt fails, the carry flag will be set on return and we will fall through the JNC FILEOK instruction. In that case, we write an error message to the standard error output device by using the predefined handle of 2. This will allow the error message to appear on the screen even if the standard output has been redirected to another file or device, such as a printer. Since the stream-oriented functions work with a length parameter, the format of the error messages in the data segment has been changed to provide the length of the message as the first byte. The LODSB instruction that picks up this length also advances the SI register to the first character of the actual message.

If the Open request was successful, then the function call returned the file handle in AX. This value is now moved to BX, which is the proper register to use in subsequent Read requests. This is fine for short programs, but a better practice in the general case would be to save it somewhere in the data segment and reload it each time just before the file handling request is issued.

The program now enters the main loop, alternatively calling RDBYTE and PRBYTE until done. When the program detects that RDBYTE has returned an end-offile character, the program exits by loading a zero into AL and issuing the Exit function call. This call closes all open files and passes the return code back to DOS so that it can be tested by the parent process.

The RDBYTE subroutine saves all of the registers which it will use and then issues a Read function call for one byte. DOS maintains an internal buffer pool and only performs a physical read if there is no more information in the current buffer. Therefore, most of the time, the Read request will just move one character from the DOS buffer to the program's data field, CHAR.

This program is intended to be used with text files, which will have an end-of-file character as the last byte in the file. However, this can not be guaranteed, so the subroutine will supply such a character if it gets an end-of-file indication from DOS. Additionally, for simplicity, it treats any other error condition as end of file, rather than analyzing the error and producing an appropriate error message.

The PRBYTE subroutine is quite straightforward. It saves its registers on the stack and then sets up a Write function call to write one character to the standard output device, by using the predefined handle of 1. This will allow the output to be redirected to a printer or other file if specified on the command line. Following the DOS call, PRBYTE restores its registers and returns without any error checking.

A good exercise for the reader would be to enhance the program to accept the input file name from the standard input device if it is not provided on the command line.

## Chapter 10 DIRECTORY OPERATIONS

Most programs operate on the data contained in a file. The file name itself is either hard coded into the program or passed to it as an invocation parameter. For such programs, the DOS services of OPEN, CLOSE, CREATE, and DELETE are sufficient. However, there is also a class of utility programs which operate on data about files such as the file name, size, attributes, etc. DOS also offers functions to assist the programmer in writing such utilities.

#### **Record-Oriented Directory Functions**

The primary record-oriented directory functions are:

Search for the first entry (AH = 11H0)

Search for the next entry (AH = 12H).

Each requires as input either a normal or an extended FCB, except that the file name can contain one or more question marks. Each question mark indicates that any character will match that position. Thus, a string of 11 question marks will match any file name, a string of 8

question marks followed by an unambiguous extention will match all file names with that file type, etc. This type of matching is often referred to as "class logic."

If the supplied FCB was a normal FCB, then the search will find only normal file entries. Volume labels, subdirectory names, hidden files, and systems files will be skipped. If the supplied FCB is an extended FCB then the attribute byte in the extended FCB is used to determine which directory entries will be examined. This is an inclusive search except for the volume label bit. That is, if you set the attribute byte to (hidden + system + directory) then all file and directory entries will be searched, but if the volume label bit is set then only the volume label will be returned. Only these bits control the search. The read only and archive attribute bits are ignored for this purpose. The hex definitions of these attribute bits are shown in Figure 10.1

#### Figure 10.1—Attribute Definitions

Ø1	Read Only	Ø8	Volume Label
Ø2	Hidden File	10	Sub-directory
Ø4	System File	2Ø	Archive

For each match encountered, DOS reads the corresponding directory entry into the current data transfer area (DTA). For a normal search FCB, DOS prefixes this information with the drive identifier. For an extended search FCB, DOS copies the first part of the FCB up through the drive identifier. Therefore, the returned information can be examined either as a directory entry, or opened as a normal or extended FCB. Use of these functions is best shown by an example.

Figure 10.3 (see page 104) is a program which will display the contents of a disk directory in much the same

way as does the standard DIR function, but with a few differences. First, this program will display system and hidden files as well as normal entries. Also, instead of displaying the file's creation date and time, it will display the file attributes using the single-letter abbreviations shown in Figure 10.2. And finally, the program reports the sum of the actual file lengths encountered instead of the remaining free space.

Figure 10.2—Attribute Indicators

к	File has been marked for Read Only access
Н	Hidden File (Excluded from normal searches)
S	System File (Excluded from normal searches)
А	Archive (Turned on when file is written to)

The program begins by establishing addressability to its data segment in ES while retaining addressability to the PSP in DS. This allows it to move information passed on the command line into its own FCB in its data segment. Once this has been accomplished, the PSP is no longer needed and DS is also pointed to the program's data segment.

After checking the validity of the supplied drive id and setting the current DTA to point to the established feedback area, the program issues the search first request. If this request fails for any reason then it complains and quits. Otherwise, it enters a loop in which it displays the desired directory information on the screen and issues a search next request. The program only exits from the loop when no more entries are returned. The program then displays the number of files and the accumulated total file size, and returns to DOS.

Figure 10.3—Directory List Program

PAGE 62,132 TITLE MDIR - SAmple Directory Display Program PAGE ; DEFINE STACK SEGMENT ;------STACK SEGMENT PARA STACK 'STACK' DB 64 DUP('STACK ') STACK ENDS DEFINE PROGRAM SEGMENT PREFIX ;-------PREFIX SEGMENT AT Ø ;SUPPLIED FILE EXTENSION ; DEFINE DATA SEGMENT DSEG SEGMENT PARA PUBLIC 'DATA' APREFIX DW Ø :ADDRESS OF PSP ;CONSTANT FOR DIVISION C10 DW 10 ; CONSTANT FOR DIVISION 10000 C10000 DW ;NUMBER OF FILES FOUND FILES DW TSIZE DD ø Ø ;TOTAL ; ØFFH ;EXTEND 5 DUP (Ø) ;FILLER 22 ;HIDDEN ; TOTAL SIZE OF FILES FOUND ;EXTENDED FCB FLAG XFCB DB DB DB ;HIDDEN + SYSTEM + DIRECTORY SDRIVE DB Ø ;DEFAULT DRIVE 8 DUP ('?') ;FILE SEARCH NAME 3 DUP ('?') ;FILE SEARCH EXTENS 23 DUP (?) ;FILLER 7 DUP (?) ;ECHOED FCB PREFIX SNAME DB ;FILE SEARCH EXTENSION SEXT DB DB DB DIR DDRIVE DB ; ECHOED DRIVE NUMBER Ø FILE NAME FILE NAME EXTENTION DNAME DB 8 DUP (?) 3 DUP (?) DEXT DB FILE ATTRIBUTE FLAGS DFLAGS DB Ø 10 DUP (?) DB ;FILLER TIME DW DATE DW Ø ;FILE CREATION TIME ø ;FILE CREATION DATE CLUSTER DW ø ;STARTING CLUSTER NUMBER DSIZE DD DB MSG1 DB MSG2 MSG3 DB PNAME DB 8 DUP ('') ; FILE NAME DB 3 DUP (' ') ;FILE EXTENSION PEXT DB DB

8 DUP ('') PSIZE DB ;FILE SIZE DB PFLAGS DB 5 DUP (' ') ;ATTRIBUTE FLAGS 10,13,'\$' DB ;END OF LINE PTOTAL DB File(s) PTSIZE DB . bytes total size',13,10,'\$' DSEG ENDS ;------;DEFINE CODE SEGMENT ;-----SEGMENT PARA PUBLIC 'CODE' CSEG START PROC FAR ASSUME CS:CSEG,SS:STACK,DS:PREFIX PUSH AX ; SAVE VALIDITY FLAGS ESTABLISH ADDRESSABILITY TO DATA SEGMENT 

 MOV
 AX, DSEG
 ; ADDRESS OF DATA SEGMENT

 MOV
 ES,AX
 ; NOW POINTS TO DATA SEGMENT

 ASSUME
 ES:DSEG
 ; TELL ASSEMBLER

 MOV
 APREFIX,DS
 ; SAVE ADDRESS OF PSP

 ;NOW POINTS TO DATA SEGMENT CHECK FOR QUALIFIERS ON SEARCH MOV AL, QDRIVE; GET DRIVE ID MOV SDRIVE, AL ; AND PLACE IN FCB CMP QNAME,''; ANY NAME SUPPLIED JZ CKEXT; NO - CHECK EXTENS ; ANY NAME SUPPLIED? MOV SI,OFFSET QNAME ;NAME SUPPLIED MOV DI,OFFSET SNAME ;NAME SUPPLIED MOV CX,8 REP MOVEN REP MOVSB ; MOVE FILE NAME CMP QEXT,'' ;ANY EXTENSION? JZ ENDPSP ;NO - DONE WITH MOV SI,OFFSET QEXT MOV DI,OFFSET SEXT MOV CX,3 REP MOVED CKEXT: ; LENGTH OF EXTENSION REP MOVSB ; MOVE FILE EXTENSION ENDPSP: PUSH ES POP DS ASSUME DS:DSEG :TELL ASSEMBLES ;START OF MAIN PROGRAM ;-------CALL CLRSCN CHECK DRIVE VALIDITY ;RETRIEVE DRIVE FLAGS POP AX CMP AL,Ø JZ SETDTA ;VALID? JZ SETDTA ;YES - CONTINUE MOV DX,OFFSET MSG2 ;INVALID DRIVE MSG CALL PRINT ;PRINT MSG TO SCRE JMP DONE ;QUIT ;YES - CONTINUE ; PRINT MSG TO SCREEN SET DTA TO DIRECTORY FEEDBACK AREA SETDTA: MOV DX, OFFSET DIR ; FEEDBACK AREA АН, 1АН ;SET DTA MOV DOS REQUEST INT 21H MOV DX, OFFSET XFCB ; EXTENDED FCB ADDRESS MOV AH,11H ;SEARCH FIRST INT 21H CMP AL,Ø ;GOOD RETURN?

	JZ MOV	FILEOK DX,OFFSET MSG1	;YES
FILEOK:	MOV MOV INT CMP JZ	PRINT DONE PRTDIR DX,OFFSET XFCB AH,12H 21H AL,Ø FILEOK	;QUIT ;PRINT DIRECTORY ENTRY ;EXTENDED FCB ADDRESS ;SEARCH NEXT ;DOS REQUEST ;GOOD RETURN? ;YES - GO DISPLAY
;PRINT /	ACCUMULA' MOV	TED TOTALS AX,FILES	;TOTAL FILES FOUND
	XOR MOV	DX,DX SI,OFFSET PTOT	;CLEAR HIGH ORDER WORD AL
	MOV CALL	CX,5 BINASC	;CONVERT TO ASCII
	MOV MOV	AX,TSIZE DX,TSIZE+2	;LOW WORD OF TOTAL SIZE ;HIGH WORD OF TOTAL SIZE
	MOV	SI, OFFSET PTSI CX,8	
	CALL	BINASC	;CONVERT TO ASCII
	MOV CALL	DX, OFFSET PTOT PRINT	AL
;; RETURN	TO DOS		
DONE:	MOV PUSH XOR PUSH	AX,APREFIX AX AX,AX AX	;ADDRESS OF PSP ;PLACE ON STACK
START	RET ENDP		
SUBROU			
CLRSCN	PROC PUSH	AX AX,2 10H AX	;CLEAR SCREEN
CLRSCN PRINT		AX	
	MOV INT POP RET	AH,9 21H Ax	
PRINT PRTDIR	ENDP PROC		
	PUSH PUSH	AX SI	
	PUSH PUSH	DI DX	
;MOVE FI		TO PRINT LINE SI,OFFSET DNAM DI,OFFSET PNAM	

	MOV	CX,8	
	REP MOV		MOVE FILE NAME
: MOVE F		NSION TO PRINT L	
,	MOV	SI, OFFSET DEXT	
	MOV	DI, OFFSET PEXT	
	MOV	CX,3	
	REP MOV	SB	
; MOVE F	ILE SIZE	TO PRINT LINE	
	TEST	DFLAGS, 16	; DIRECTORY?
	JZ	MOVSIZ	NO - MOVE SIZE INFO
	MOV	SI, OFFSET MSG3	; <dir></dir>
	MOV	DI, OFFSET PSIZE	
	MOV	CX,8	
	REP MOV	SB	
	JMP	TST1	SKIP SIZE CALCULATION
MOVSIZ:	MOV	AX,DSIZE	;LOW ORDER PART OF SIZE
	MOV	DX,DSIZE+2	;HIGH ORDER PART OF SIZE
	ADD	TSIZE,AX	;ACCUMULATE TOTAL SIZE
	ADC	TSIZE+2,DX	;OF FILES FOUND
	INC	FILES	;COUNT FILES FOUND
	MOV	SI, OFFSET PSIZE	
	MOV	CX,8	;WIDTH OF OUTPUT FIELD
	CALL	BINASC	;CONVERT TO ASCII
		ATTRIBUTE INDICA	
TST1:	MOV	DI, OFFSET PFLAGS	5
	MOV	AL,''	
	TEST	DFLAGS,1	;READ ONLY?
	JZ	TST2	;NO
÷	MOV	AL,'R'	
TST2:	STOSB		; PUT CHAR IN STRING
	MOV	AL,''	
	TEST	DFLAGS,2	;HIDDEN FILE?
	JZ	TST4	; NO
<b>mcm</b> 4	MOV	AL,'H'	
TST4:	STOSB Mov	AL,''	
	TEST	DFLAGS,4	;SYSTEM FILE?
	JZ	TST32	;NO
	MOV	AL,'S'	, NO
TST32:	STOSE	AL, 5	
10152.	MOV	AL,''	
	TEST	DFLAGS, 32	;ARCHIVE?
	JZ	TSTX	;NO
	MOV	AL, 'A'	,
TSTX:	STOSB		
	MOV	DX, OFFSET PNAME	OUTPUT LINE
	CALL	PRINT	,
	POP	DX	
	POP	DI	
	POP	SI	
	POP	AX	
	RET		
PRTDIK	ENDP		
BINASC	PROC		
			AX TO PRINTABLE FORM
; AND PL	ACES IT	IN A FIELD POINT	ED TO BY SI WITH THE
FIELD	WIDTH IN	CX. LEADING ZERO	DS ARE SUPPRESSED.

	PUSH	DX	
	PUSH	СХ	
	PUSH	BX	
	PUSH	DI .	
	PUSH	AX	
	MOV	DI,SI	;SAVE START OF STRING
BAl:	MOV	BYTE PTR [SI],'	; FILL CHARACTER
	INC	SI	; POINT TO NEXT FIELD POSITION
	LOOP	BA1	;LOOP UNTIL DONE
	DIV	C10000	;DIVIDE BY 10,000
	MOV	BX,AX	;SAVE QUOTIENT
	MOV	AX,DX	;MOVE REMAINDER BACK TO AX
BA2:	MOV	CX,4	;NUMBER OF DIGITS TO PRINT
BA3:	XOR	DX,DX	;CLEAR HIGH ORDER WORD
	DIV	C10	;DIVIDE BY TEN
	ADD	DL,'Ø'	;CONVERT TO ASCII DIGIT
	DEC	SI	;STEP BACKWARDS THROUGH BUFFER
	CMP	SI,DI	;OUT OF SPACE?
	JB	BAX	;YES - QUIT
	MOV	[SI],DL	;STORE DIGIT
	OR	AX,AX	;ALL DIGITS PRINTED?
	JNZ	BA4	;NO - KEEP TRUCKING
	OR	вх,вх	; ANY MORE WORK?
	JZ	BAX	;NO - CAN QUIT
BA4:	LOOP	BA3	;NEXT DIGIT
BA5:	OR	вх,вх	; MORE WORK TO DO?
	JZ	BAX	;NO - CAN QUIT
	MOV	Ах, ВХ	;GET NEXT 4 DIGITS
	XOR	вх,вх	;SHOW NO MORE DIGITS
	JMP	BA2	;KEEP ON TRUCKING
BAX:	POP	AX	
	POP	DI	
	POP	вх	
	POP	СХ	
	POP	DX	
	RET		
BINASC	ENDP		
CSEG	ENDS		
	END	START	

## **Stream-Oriented Directory Operations**

The corresponding stream-oriented function calls are: FIND FIRST (AH = 4EH) FIND NEXT (AH = 4FH)

The primary advantage of using these calls is that they will accept directory path information, while the

record-oriented functions only work on the current directory. This information is passed as a variablelength ASCII string containing the fully qualified diretory information. The filename portion of this string can contain global filename characters. The string is terminated by a byte of zeros.

Since no FCBs are used in stream-oriented functions, the directory information is supplied at the current DTA in a format which contains the information necessary for DOS to keep track of its current position in the directory. This information must be unchanged when the FIND NEXT call is issued. The format of the feedback area is shown in Figure 10.4.

	Figure 10.4—Directory Feedback Area		
Position	Length	Item	
Ø	21	Reserved for DOS	
22	1	File attribute bits	
23	2	File creation time	
25	2	File creation date	
27	4	File size	
31	13	File name and extension	

The sample program in Figure 10.3 has been modified to use the stream-oriented function calls, and now appears as Figure 10.5. Other than the changed format of the feedback area, the primary difference is in string handling. If the user specifies a fully qualified string, including a filename with global file characters, then it is just a case of moving that string from the PSP to the data segment. On the other hand, if the user uses a

shorthand form with just a drive identifier or a directory path, then the program must add "\*.\*" to the supplied path information. The difficulty arises when the specified string is something like "D $\Rightarrow$  ROOT $\Rightarrow$  HECTOR". Is "HECTOR" a file name or a directory name? This version of the program assumes that the last portion of the supplied string is a filename unless it ends in ":" or " $\Rightarrow$ ". Therefore, to list the filenames in a directory named "GAMES", the user must specify something like "B $\Rightarrow$ GAMES $\Rightarrow$ ". Modification of this assumption is left as an exercise for the reader.

PAGE ;			am with Stream I/O
; STACK	SEGMENT DB ENDS	PARA STACK 'STAC 64 DUP('STACK	
;DEFINE	PROGRAM	SEGMENT PREFIX	
PREFIX UPARM PREFIX	DB	AT Ø 80H 128 DUP (?)	;UNFORMATTED PARM AREA
DEFINE	DATA SEC	GMENT	
DSEG APREFIX Cl0 Cl0000 FILES TSIZE SNAME DFLAGS TIME DATE DSIZE DNAME MSG1	SEGMENT DW DW DW DD DB DB DB DB DW DW DD DD DB DB DB DB DB DB	PARA PUBLIC 'DA7 Ø 10 10000 Ø 80 DUP (0) 21 DUP (?) Ø Ø Ø	;ADDRESS OF PSP ;CONSTANT FOR DIVISION ;CONSTANT FOR DIVISION ;NUMBER OF FILES FOUND ;TOTAL SIZE OF FILES FOUND ;SEARCH NAME FIELD ;DOS WORKSPACE ;FILE ATTRIBUTE FLAGS ;FILE CREATION TIME ;FILE CREATION DATE ;FILE SIZE ;FILE NAME FOUND

Figure 10.5—Modified Directory List Program

PNAME	DB DB	8 DUP ('') ;	FILE NAME
PEXT	DB DB DB	3 DUP ('') ;	FILE EXTENSION
PSIZE	DB DB	8 DUP ('') ;	FILE SIZE
PFLAGS	DB DB		ATTRIBUTE FLAGS END OF LINE
PTOTAL PTSIZE DSEG	DB DB ENDS	<pre>File(s)' bytes t</pre>	otal size',13,10,'\$'
•	CODE SE	GMENT	
CSEG START		PARA PUBLIC 'CODE FAR CS:CSEG,SS:STACK,	
;ESTABL		ESSABILITY TO DATA	SEGMENT
			ADDRESS OF DATA SEGMENT
			NOW POINTS TO DATA SEGMENT TELL ASSEMBLER
	MOV		SAVE ADDRESS OF PSP
	MOV	SI, OFFSET UPARM ;	FILE NAME PASSED BY DOS
	MOV		FILE NAME FIELD IN OUR DS
	LODSB CMP		GET PARM STRING LENGTH ANY NAME SUPPLIED?
	JZ		NO - DONE WITH PSP
	XOR		CLEAR HIGH ORDER BYTE
	MOV		INSERT STRING LENGTH
TSTBNK:	LODSB	;(	GET CHARACTER
	CMP		IS IT BLANK?
	JNZ		NO - GO MOVE NAME
NODINK	LOOP		SKIP LEADING BLANKS
NOBLNK:	STOSB LODSB		STORE IN FILE NAME GET NEXT CHARACTER
	LOOP		LOOP UNTIL DONE
	XOR		CLEAR REGISTER
	STOSB	;	TERMINATE STRING
ENDPSP:	PUSH	ES	
	POP		ADDRESS OF DATA SEGMENT
	ASSUME		TELL ASSEMBLER
	OF MAIN		
;			
	CALL	CLRSCN	
;APPLY		TO SEARCH STRING	
		DI, OFFSET SNAME	
DEFØ:		BYTE PTR [DI],Ø ;	
	JZ	DEF1 ; DI	YES
		÷ -	KEEP LOOKING
DEF1:		DI, OFFSET SNAME ;	
		DEF3 ;	YES - GO MOVE DEFAULT
		DI ;	BACK UP ONE CHARACTER
	CMP	BYTE PTR [DI],':'	
	JZ	DEF2 ;	YES - USE DEFAULT

	CMP	BYTE PTR [D	I],'\	DIRECTORY ONLY?
	JNZ	SETDTA		;NO - DON'T TOUCH ANYTHING
DEF2:	INC	DI		POINT BACK TO END OF STRING
DEF3:	MOV	SI, OFFSET M	SG2	; ' * . * '
	MOV	CX,4		
	REP MOV	SB		MOVE DEFAULT STRING
;SET DT	A TO DIR	ECTORY FEEDB.	ACK A	REA
SETDTA:	MOV	DX, OFFSET D	IR	FEEDBACK AREA
	MOV	AH, 1AH		SET DTA
	INT	21H		DOS REQUEST
	MOV	DX.OFFSET S		FILE SEARCH NAME
	MOV	CX,22		HIDDEN + SYSTEM + DIRECTORY
	MOV	AH,4EH		FIND FIRST MATCH
	INT	21H		
	JNC	FILEOK		;YES
	MOV	DX, OFFSET M		
	CALL	PRINT		
	JMP	DONE		;QUIT
FILEOK:	CALL	PRTDIR		PRINT DIRECTORY ENTRY
	MOV	AH,4FH		SEARCH NEXT
	INT	21H		DOS REQUEST
	JNC	FILEOK		YES - GO DISPLAY
; PRINT	ACCUMULA	TED TOTALS		
•		AX, FILES		TOTAL FILES FOUND
	XOR	DX, DX		CLEAR HIGH ORDER WORD
	MOV	SI, OFFSET P		
	MOV	CX,5		
	CALL	BINASC		CONVERT TO ASCII
	MOV	AX, TSIZE		LOW WORD OF TOTAL SIZE
	MOV	DX,TSIZE+2		HIGH WORD OF TOTAL SIZE
	MOV	SI, OFFSET P	TSIZE	
	MOV	CX,8		
	CALL	BINASC		;CONVERT TO ASCII
	MOV	DX, OFFSET P		
		PRINT		
;				
	TO DOS			
•				
DONE:	MOV	AX, APREFIX		; ADDRESS OF PSP
	PUSH	AX		PLACE ON STACK
	XOR	AX,AX		
	PUSH	AX		
CONDO	RET			
START	ENDP			
;				
; SUBROU'				
;				
CLRSCN	PROC	• • •		CLEAR SCREEN
	PUSH	AX		
	MOV	AX,2		
	INT	10н Ах		
	POP	<b>A</b> A		
CLRSCN	RET ENDP			
PRINT	PROC	A V		
	PUSH			
	MOV	AH,9		
	INT	21H		• • • •
	POP	AX		
	RET			

PRINT	ENDP		
PRTDIR	PROC		
	PUSH	AX	
	PUSH	SI	
	PUSH	DI	
	PUSH	DX	
;MOVE F		TO PRINT LINE	
	MOV	SI, OFFSET DNAME	
	MOV	DI, OFFSET PNAME	5
MOVØ:	MOV LODSB	CX,12	;GET CHARACTER
10000:	OR	AL,AL	TEST FOR END
	JNZ	MOV1	GO STORE CHARACTER
	MOV	AL,''	; PAD CHARACTER
	REP STOS	•	; PAD WITH BLANKS
	JMP	TSTDIR	DONE
MOV1:	STOSB		STORE CHARACTER
	LOOP	MOVØ	KEEP TRUCKING
;MOVE F	ILE SIZE	TO PRINT LINE	
TSTDIR:	TEST	DFLAGS, 16	;DIRECTORY?
	JZ	MOVSIZ	;NO - MOVE SIZE INFO
	MOV	SI, OFFSET MSG3	; <dir></dir>
	MOV	DI, OFFSET PSIZE	<u>.</u>
	MOV	CX,8	
	REP MOVS		CHID OTHE ONLOUT METON
MOUCTZ	JMP	TST1	SKIP SIZE CALCULATION
MOVSIZ:	MOV	AX, DSIZE	LOW ORDER PART OF SIZE
	ADD	DX,DSIZE+2 TSIZE,AX	HIGH ORDER PART OF SIZE ACCUMULATE TOTAL SIZE
	ADC	TSIZE+2,DX	OF FILES FOUND
	INC	FILES	COUNT FILES FOUND
	MOV	SI, OFFSET PSIZE	
	MOV	CX,8	;WIDTH OF OUTPUT FIELD
	CALL	BINASC	CONVERT TO ASCII
;TURN O	N OR OFF	ATTRIBUTE INDIC	CATORS
TST1:	MOV	DI, OFFSET PFLAC	S
	MOV	AL, ''	
	TEST	DFLAGS,1	;READ ONLY?
	JZ	TST2	;NO
<b>TCT</b> 2.	MOV	AL,'R'	; PUT CHAR IN STRING
TST2:	STOSB MOV	AL, ''	FOI CHAR IN SIRING
	TEST	DFLAGS,2	;HIDDEN FILE?
	JZ	TST4	;NO
	MOV	AL, 'H'	•
TST4:	STOSB	•	
	MOV	AL, '	
	TEST	DFLAGS,4	;SYSTEM FILE?
	JZ	TST32	; NO
	MOV	AL,'S'	
TST32:	STOSB		
	MOV	AL,''	ND GUTUDO
	TEST	DFLAGS, 32	; ARCHIVE?
	JZ	TSTX	; NO
<b>TCTV</b> -	MOV	AL,'A'	
TSTX:	STOSB MOV	DX, OFFSET PNAME	
	CALL	PRINT	S JOUIPUI LINE
	POP	DX	
	POP	DI	

	POP	SI	
	POP	AX	
	RET		
PRTDIR	ENDP		
BINASC	PROC		
;CONVER	TS A BIN	ARY NUMBER IN DX	AX TO PRINTABLE FORM
•			ED TO BY SI WITH THE
;FIELD			OS ARE SUPPRESSED.
	PUSH	DX	
	PUSH	CX	
	PUSH	BX	
	PUSH PUSH	DI AX	
	MOV	DI,SI	;SAVE START OF STRING
BA1:	MOV	BYTE PTR [SI],	•
2	INC	SI	POINT TO NEXT FIELD POSITION
	LOOP	BAI	LOOP UNTIL DONE
	DIV	C10000	DIVIDE BY 10,000
	MOV	BX,AX	SAVE QUOTIENT
	MOV	AX,DX	;MOVE REMAINDER BACK TO AX
BA2:	MOV	CX,4	;NUMBER OF DIGITS TO PRINT
BA3:	XOR	DX,DX	;CLEAR HIGH ORDER WORD
	DIV	C10	;DIVIDE BY TEN
	ADD	DL,'Ø'	;CONVERT TO ASCII DIGIT
	DEC CMP	SI SI,DI	;STEP BACKWARDS THROUGH BUFFE ;OUT OF SPACE?
	JB	BAX	;YES - QUIT
	MOV	[SI],DL	STORE DIGIT
	OR	AX,AX	;ALL DIGITS PRINTED?
	JNZ	BA4	NO - KEEP TRUCKING
	OR	вх,вх	;ANY MORE WORK?
	JZ	BAX	;NO - CAN QUIT
BA4:	LOOP	BA3	;NEXT DIGIT
BA5:	OR JZ	BX,BX BAX	MORE WORK TO DO?
	MOV	AX,BX	;NO - CAN QUIT ;GET NEXT 4 DIGITS
	XOR	BX,BX	SHOW NO MORE DIGITS
	JMP	BA2	KEEP ON TRUCKING
BAX:	POP	AX	
	POP	DI	
	POP	вх	
	POP	СХ	
	POP	DX	
BINASC	RET		
CSEG	ENDP ENDS		
0010	ENDS	START	
	2110	0	

# A Copy Program with Space Checking

Information obtained from directory searches is not limited to displaying or printing. This same search capability can be used, for example, to build a copy program which is a little bit more bulletproof than the standard copy function. First, we will have the program check to see if there is enough space on the target drive before attempting the copy. If there isn't, we will give the user the options of skipping that particular file, changing the target diskette and retrying the operation, or gracefully terminating the program. Second, if an error occurs while a particular file is being copied, the program will write an error message and continue with the next file.

To accomplish the space checking, we make use of DOS call 36H. This call returns all of the information on sector and cluster sizes necessary to calculate both the total size of a disk or diskette and also the remaining free space. Figure 10.6 summarizes this call.

#### Figure 10.6—Get Disk Free Space Function

At Entry:

AH=36H

DL= Drive # ( $\emptyset$  = Default Drive, 1 = A, ...)

Returns:

```
AX=FFFFH if invalid
else
AX= Number of sectors per cluster
BX= Number of free clusters
CX= Number of bytes per sector
DX= Number of clusters per drive
```

Figure 10.8 shows the copy program, which is an enhancement to the previous directory list program. As each filename meeting the global search characteristics is found, the directory information is displayed as before. Then the program attempts to create a file with the same name and attributes on the target device. If this is successful, then the original file is opened for input. The file is then copied from the source to the target. Both input and output files are then closed. A check for errors is made at each step in the process. If an error is detected, the COPY subroutine returns with the carry flag set, the DOS error code in AL (Figure 9.2) and a value in AH (Figure 10.7) which shows which part of the routine encountered the error.

#### Figure 10.7—MCOPY Error Codes

AH Meaning

· 1	Failure during	file create request
2	Failure trying	to open input file
3	Failure trying	to read input file
4	Failure trying	to write output file

This program illustrates the issues encountered in most practical programs. To make a program truly "user friendly" requires more code in the error-handling routines than it does in the main line sections. Ideally, our copy program should not only detect all of the different possible errors, but should also analyze them and take corrective action. However, for the sake of space, error correction has been abbreviated. The actions which the program actually takes are discussed below.

If there is not enough free space on the target disk, the program will display the remaining space and ask the user what to do. The user can replace the diskette at this time without fear of corrupting the file directory.

If there is sufficient space, but the attempt to create the new directory entry fails, then the directory is probably full. The program issues a message that the file could not be created and waits for instructions as before. Again, the user can skip the file (probably useless in this case), change the target diskette and retry (the usual action), or terminate the program. On any other error, the program will issue a generic error message and move on to the next file. In this case, a partial file has been created on the target disk which will later have to be manually deleted by the user.

Note that all of the errors discussed above are logical errors. That is because DOS itself intercepts physical errors and asks the users to retry, ignore, or abort. To be really bulletproof, the program should use the set interrupt vector function (AH=25H) to take over interrupt 23H (CTRL-Break exit address) and interrupt 24H (Critical error handler). Other enhancements left to the reader include allowing the user to set various flags to indicate if the archive bit should be turned off in the source directory upon successful copy, if the date and time from the source file should be used in the output directory instead of the current date and time, and if hidden or system files should NOT be copied.

#### Figure 10.8—Copy Program With Space Checking

PAGE TITLE PAGE		Copy Program with Space Checking
,	STACK SI	
	SEGMENT DB ENDS	PARA STACK 'STACK' 64 DUP('STACK ')
DEFINE	PROGRAM	SEGMENT PREFIX
PREFIX	SEGMENT ORG DB	AT Ø 6CH Ø ;SPECIFIED TARGET DRIVE

UPARM PREFIX	ORG DB ENDS		;UNFORMATTED PARM AREA
DEFINE	DATA SEC	GMENT	
JEEG APREFIX Cl0 Cl0000 TDRIVE FILES TSIZE RDHAND WRHAND SPTR TPTR SNAME TNAME DIR DFLAGS TIME DATE DSIZE DNAME MSG1 MSG2	SEGMENT DW DW DB DW DD DD DW DW DW DW DW DB DB DB DB DB DB DB DB DB DB DB DB DB	PARA PUBLIC 'DA' Ø 10 10000 Ø Ø Ø Ø SNAME TNAME 80 DUP (Ø) 80 DUP (Ø) 21 DUP (?) Ø Ø Ø 13 DUP (' ') 'File Not Found	; ADDRESS OF PSP ; CONSTANT FOR DIVISION ; CONSTANT FOR DIVISION ; TARGET DRIVE ; NUMBER OF FILES FOUND ; TOTAL SIZE OF FILES FOUND ; INPUT FILE HANDLE ; OUTPUT FILE HANDLE ; END OF STRING POINTER ; END OF STRING POINTER ; SEARCH NAME FIELD ; TARGET DIRECTORY ; DOS WORKSPACE ; FILE ATTRIBUTE FLAGS ; FILE CREATION DATE ; FILE CREATION DATE ; FILE NAME FOUND
	DB DB ENDS	'Only' Bytes 'Retry, Skip, on 'Invalid File Sy 13,10,'\$' 'Cannot Create ( 'Error During F: 8 DUP ('') ' 3 DUP ('') ' 8 DUP ('') ' 5 DUP ('') 10,13,'\$' ' File(s)' ' bytes 512 DUP (?)	Left on Target Drive',13,10,'\$ r Abort (R,S,A) \$' pecification',13,10,'\$' Dutput File',13,10,'\$' ile Copy',13,10,'\$' ;FILE NAME ;FILE EXTENSION ;FILE SIZE ;ATTRIBUTE FLAGS ;END OF LINE total size',13,10,'\$' ;SECTOR BUFFER
; DEFINE ; CSEG START	CODE SEG SEGMENT PROC ASSUME PUSH ISH ADDRI MOV ASSUME MOV	GMENT PARA PUBLIC 'COI FAR CS:CSEG,SS:STACH AX ESSABILITY TO DAT AX,DSEG ES,AX ES:DSEG	K,DS:PREFIX ;SAVE VALIDITY FLAGS

CALL MOV DEC JCXZ MOV CALL JCXZ CALL MOV ENDPSP: PUSH POP	DI, OFFSET SNAME AL, Ø ENDPSP CX, CX CL, AL SKPBNK ENDPSP NOBLNK SPTR, DI CX ENDPSP DI, OFFSET TNAME SKPBNK ENDPSP NOBLNK TPTR, DI ES DS	; FILE NAME PASSED BY DOS ; FILE NAME FIELD IN OUR DS ; GET PARM STRING LENGTH ; ANY NAME SUPPLIED? ; NO - DONE WITH PSP ; CLEAR HIGH ORDER BYTE ; INSERT STRING LENGTH ; SKIP LEADING BLANKS ; IF NOTHING LEFT ; MOVE UNTIL BLANK ; SAVE END OF STRING POINTER ; ADJUST FOR SEPARATING BLANK ; IF NOTHING LEFT ; POINT TO TARGET STRING ; SKIP ADDITIONAL BLANKS ; IF NOTHING LEFT ; MOVE REST OF 2ND STRING ; SAVE END OF STRING POINTER ; ADDRESS OF DATA SEGMENT ; TELL ASSEMBLER
;	S:DSEG	;TELL ASSEMBLER
START OF MAIN	PROGRAM	
;CALL	CLRSCN	
;CHECK DRIVE VA		
POP	AX	;RECOVER VALIDITY FLAGS
OR		;COMBINE FLAGS
JZ	DEF	; OK
MOV	DX, OFFSET MSG5	; INVALID DRIVE SPECS
MOV CALL JMP	DONE	
DEF: MOV	DI, OFFSET SNAME BYTE PTR [DI], Ø DEF1 DI	
DEFØ: CMP	BYTE PTR [DI],0	;END OF STRING?
JZ	DEFI	;YES
	DEFØ	KEEP LOOKING
DEF1: CMP	DI,OFFSET SNAME DEF3 DI	;NULL STRING?
JZ	DEF3	;YES - GO MOVE DEFAULT
DEC	<i>D</i> 1	, bhek of our emmanered
	BYTE PTR [DI],': DEF2	:' ;DRIVE ONLY? ;YES - USE DEFAULT
CMP	BYTE PTR [DI],'	DIRECTORY ONLY?
JNZ	SETDTA	;NO - DON'T TOUCH ANYTHING
DEF2: INC	DI	POINT BACK TO END OF STRING
DEF3: MOV	SI, OFFSET MSG2	;'*.*'
MOV REP MOVS	CX,4	;MOVE DEFAULT STRING
	ECTORY FEEDBACK A	
SETDTA: MOV	DX, OFFSET DIR	
MOV	AH, 1AH	;SET DTA
1 10 1	2111	;DOS REQUEST
MOV MOV		;FILE SEARCH NAME :HIDDEN + SYSTEM
MOV	•	;FIND FIRST MATCH
INT	21H	
JNC	FILEOK	;YES
	DX,OFFSET MSG1 PRINT	
CALL	PRINT	

FILEOK:		DONE PRTDIR CKSPCE	;QUIT ;PRINT DIRECTORY ENTRY ;CHECK AVAILABLE SPACE
ASK:		GOCOPY ASKOP AL,'S' SKIP	;COPY FILE ;ASK WHAT TO DO ;SKIP? ;SKIP THIS FILE
	CMP JZ CMP	AL,'R' FILEOK AL,'A'	RETRY? RECHECK SPACE ABORT?
GOCOPY:		NOMORE ASK COPY SKIP	;QUIT ;ASK QUESTION AGAIN ;COPY FILE ;GOOD COPY - GO DO NEXT FILE
	CMP JNZ	AH,1 BADFIL DX,OFFSET MSG7	;ERROR DURING CREATE? ;NO - FILE IS BAD
BADFIL:	CALL JMP	PRINT ASK DX,OFFSET MSG8	;ASK FOR GUIDENCE
	CALL	PRINT	
SKIP:	MOV INT JNC	AH,4FH 21H FILEOK	;SEARCH NEXT ;DOS REQUEST ;YES - GO DISPLAY
PRINT		TED TOTALS	,
NOMORE:		AX,FILES	;TOTAL FILES FOUND
		DX,DX	;CLEAR HIGH ORDER WORD
		SI, OFFSET PTOTA	L
	MOV CALL	CX,5 BINASC	;CONVERT TO ASCII
	MOV	AX.TSIZE	LOW WORD OF TOTAL SIZE
	MOV	DX,TSIZE+2 SI,OFFSET PTSIZ	;HIGH WORD OF TOTAL SIZE
			E
	MOV	CX,8 BINASC	;CONVERT TO ASCII
	CALL MOV	DX,OFFSET PTOTA	
	CALL		
	TO DOS		
DONE:	MOV	AX,APREFIX	;ADDRESS OF PSP
	PUSH	AX	; PLACE ON STACK
		AX,AX AX	
	RET	AV	
START			
; ;SUBROU	TINES		
; CLRSCN	PROC		CLEAR SCREEN
02.000		AX	,
		AX,2	
	POP	AX	
	RET		
CLRSCN			
PRINT	PROC PUSH	A Y	
	MOV	АХ АН,9	
	INT	21H	
	POP	AX	

		RET		
1	PRINT	ENDP		
1	PRTDIR	PROC		
		PUSH	АХ	
		PUSH	SI	
		PUSH	DI	
		PUSH	DX	
	MOVE FI		TO PRINT LINE	
	,	MOV	SI, OFFSET DNAME	
		MOV	DI, OFFSET PNAME	
		MOV	CX,12	
1	MOVØ:	LODSB ·	0.112	;GET CHARACTER
•		OR	AL,AL	TEST FOR END
		JNZ	MOV1	GO STORE CHARACTER
		MOV	AL,	PAD CHARACTER
		REP STO		; PAD WITH BLANKS
		JMP	MOVSIZ	; DONE
	nov1:	STOSB	104312	STORE CHARACTER
•	1011.	LOOP	MOVØ	;KEEP TRUCKING
	MOVE ET		TO PRINT LINE	TEEP IROCKING
				LOW ODED DADE OF STRE
ł	MOVSIZ:		AX, DSIZE	;LOW ORDER PART OF SIZE
		MOV	DX,DSIZE+2	;HIGH ORDER PART OF SIZE
		MOV MOV	SI, OFFSET PSIZE	
			CX,8 BINASC	WIDTH OF OUTPUT FIELD
		CALL		;CONVERT TO ASCII
	FIORN OF		ATTRIBUTE INDICA	
		MOV	DI, OFFSET PFLAGE	
		TEST	AL, '	UEND ONLYS
		JZ	DFLAGS,1 TST2	READ ONLY?
		MOV	AL,'R'	;NO
9	rst2:	STOSB	AL, R	DUT CHAR IN STRING
	1312:	MOV	AL,''	;PUT CHAR IN STRING
		TEST	DFLAGS,2	;HIDDEN FILE?
		JZ	TST4	;NO
		MOV	AL,'H'	, NO
1	rst4:	STOSB		
		MOV	AL, ''	
		TEST	DFLAGS,4	;SYSTEM FILE?
		JZ	TST32	;NO
			AL,'S'	,
1	rst32:	STOSE		
		MOV	AL, ''	
		TEST	DFLAGS, 32	;ARCHIVE?
		JZ	TSTX	NO
		MOV	AL, 'A'	
1	rstx:	STOSB		
		MOV	DX, OFFSET PNAME	:OUTPUT LINE
		CALL	PRINT	,
		POP	DX	
		POP	DI	
		POP	SI	
		POP	AX	
		RET		
ł	PRTDIR	ENDP		
	BINASC	PROC		
			ARY NUMBER IN DX .	AX TO PRINTABLE FORM
				ED TO BY SI WITH THE
				S ARE SUPPRESSED.
		PUSH	DX	

		2	
	PUSH	СХ	
	PUSH	вх	
	PUSH	DI	
	PUSH	AX	
	MOV	DI,SI	;SAVE START OF STRING
BA1:	MOV	BYTE PTR [SI],'	;FILL CHARACTER
2	INC		
		SI	; POINT TO NEXT FIELD POSITION
	LOOP	BA1	;LOOP UNTIL DONE
	DIV	C10000	;DIVIDE BY 10,000
	MOV	BX,AX	;SAVE QUOTIENT
	MOV	AX, DX	MOVE REMAINDER BACK TO AX
BA2:	MOV	CX,4	;NUMBER OF DIGITS TO PRINT
BA3:	XOR	DX,DX	CLEAR HIGH ORDER WORD
	DIV	C1Ø	; DIVIDE BY TEN
	ADD	DL, 'Ø'	CONVERT TO ASCII DIGIT
	DEC	SI SI	
			; STEP BACKWARDS THROUGH BUFFER
	CMP	SI,DI '	;OUT OF SPACE?
	JB	BAX	;YES - QUIT
	MOV	[SI],DL	STORE DIGIT
	OR	AX,AX	ALL DIGITS PRINTED?
	JNZ	BA4	
			;NO - KEEP TRUCKING
	OR	вх,вх	;ANY MORE WORK?
	JZ	BAX	;NO - CAN QUIT
BA4:	LOOP	BA3	;NEXT DIGIT
BA5:	OR	BX, BX	MORE WORK TO DO?
	JZ	BAX	•
			;NO - CAN QUIT
	MOV	AX,BX	;GET NEXT 4 DIGITS
	XOR	BX,BX	;SHOW NO MORE DIGITS
	JMP	BA2	;KEEP ON TRUCKING
BAX:	POP	AX	,
	POP	DI	
	POP	BX	
	POP	CX	
	POP	DX	
	RET		
BINASC	ENDP		
MISC	PROC		
SKPBNK:			;GET CHARACTER
	CMP		•
		AL,''	; IS IT BLANK?
	JNZ	SKPBNX	;NO - GO MOVE NAME
	LOOP	SKPBNK	SKIP LEADING BLANKS
SKPBNX:	RET		
NOBLNK:	STOSE		STORE IN FILE NAME
	LOOP	NOBLN1	
		NUBLNI	; IF ANY MORE CHARACTERS
	RET		
NOBLN1:	LODSB		GET NEXT CHARACTER
	CMP	AL,''	;FOUND A BLANK?
	JNZ	NOBLNK	;NO - GO STORE
	RET	NODENK	, NO - GO STORE
040 000		•	
CKSPCE:		AX	
	PUSH	вх	
	PUSH	СХ	
	PUSH	DX	
	MOV	DL, TDRIVE	TARCET DRIVE
			; TARGET DRIVE
	MOV	АН, З6Н	;GET DISK FREE SPACE
	INT	21H	;DOS REQUEST
	MUL	СХ	CALC BYTES PER CLUSTER
	MUL	ВХ	CALC BYTES AVAILABLE
	CMP	DX,DSIZE+2	; ENOUGH SPACE?
	JA		•
	JA	CKSPC2	;YES

	JB	CKSPC1		; NO
	CMP	AX, DSIZE		CHECK LOW ORDER WORD
	JAE	CKSPC2		OK
CKSPC1:	MOV	SI,OFFSET	MSG3A	;SPACE FIELD IN MSG3
	MOV	CX,8		;FIELD WIDTH
	CALL	BINASC		;CONVERT TO ASCII
	MOV	DX, OFFSET	MSG3	; REMAINING SPACE MSG
	CALL STC	PRINT		; DISPLAY MESSAGE
	JMP	CKSPCX		;SHOW OUT OF SPACE ;RETURN
CKSPC2:		CROPCA		SHOW SPACE OK
CKSPCX:		DX		, bliow briter ok
	POP	CX		
	POP	ВΧ		
	POP	AX		
	RET			
ASKOP:	MOV	DX, OFFSET	MSG4	;RETRY, SKIP, ETC.
	CALL	PRINT		
	MOV	AX,ØCØ1H		; READ RESPONSE
	INT AND	21H AL,ØDFH		;DOS REQUEST ;UC XLATE
	PUSH	AX		JUC XERIE
	MOV	DX, OFFSET	MSG6	CRLF
	CALL	PRINT		,
	POP	AX		
	RET			
	NPUT FIL	Ε ΤΟ ΟυΤΡυΊ		
COPY:	MOV		DNAME	;FILE NAME FOUND
	MOV	DI,SPTR		;END OF SOURCE DIRECTORY
COPYM1:	STOSE			
	CMP	AL,0		;MOVE TO OUTPUT STRING ;END?
	JNZ	COPYM1		;KEEP TRUCKING
	MOV		DNAME	USE SAME NAME FOR OUTPUT
	MOV	DI, TPTR		;END OF DIRECTORY STRING
COPYM2:	LODSB	•		
	STOSB			;MOVE TO OUTPUT STRING
	CMP	AL,Ø		;END?
	JNZ	COPYM2		;NO - KEEP IT MOVING
	MOV	DX,OFFSET	TNAME	
	XOR MOV	CX,CX		
				CLEAR HIGH BYTE
		CL, DFLAGS		FILE ATTRIBUTE
	MOV	AH,3CH		;FILE ATTRIBUTE ;CREATE FILE
		АН, ЗСН		FILE ATTRIBUTE
	MOV INT	AH,3CH 21H		;FILE ATTRIBUTE ;CREATE FILE ;DOS REQUEST
	MOV INT JNC MOV RET	AH, 3CH 21H COPY1 AH, 1		;FILE ATTRIBUTE ;CREATE FILE ;DOS REQUEST ;GOOD RETURN ;FAILURE DURING CREATE
COPY1:	MOV INT JNC MOV RET MOV	AH, 3CH 21H COPY1 AH, 1 WRHAND, AX		;FILE ATTRIBUTE ;CREATE FILE ;DOS REQUEST ;GOOD RETURN
	MOV INT JNC MOV RET MOV NPUT FIL	AH, 3CH 21H COPY1 AH, 1 WRHAND, AX E	CNAME	;FILE ATTRIBUTE ;CREATE FILE ;DOS REQUEST ;GOOD RETURN ;FAILURE DURING CREATE ;SAVE HANDLE
	MOV INT JNC MOV RET MOV NPUT FIL MOV	AH, 3CH 21H COPY1 AH, 1 WRHAND, AX E DX, OFFSET	SNAME	;FILE ATTRIBUTE ;CREATE FILE ;DOS REQUEST ;GOOD RETURN ;FAILURE DURING CREATE ;SAVE HANDLE ;SOURCE NAME
	MOV INT JNC MOV RET MOV NPUT FIL MOV MOV	AH, 3CH 21H COPY1 AH, 1 WRHAND, AX E DX, OFFSET AL, Ø	SNAME	;FILE ATTRIBUTE ;CREATE FILE ;DOS REQUEST ;GOOD RETURN ;FAILURE DURING CREATE ;SAVE HANDLE ;SOURCE NAME ;INPUT ONLY
	MOV INT JNC MOV RET MOV NPUT FIL MOV	AH, 3CH 21H COPY1 AH, 1 WRHAND, AX E DX, OFFSET	SNAME	;FILE ATTRIBUTE ;CREATE FILE ;DOS REQUEST ;GOOD RETURN ;FAILURE DURING CREATE ;SAVE HANDLE ;SOURCE NAME ;INPUT ONLY ;OPEN REQUEST
	MOV INT JNC MOV RET MOV NPUT FIL MOV MOV	AH, 3CH 21H COPY1 AH, 1 WRHAND, AX E DX, OFFSET AL, Ø AH, 3DH	SNAME	;FILE ATTRIBUTE ;CREATE FILE ;DOS REQUEST ;GOOD RETURN ;FAILURE DURING CREATE ;SAVE HANDLE ;SOURCE NAME ;INPUT ONLY
	MOV INT JNC MOV RET MOV NPUT FIL MOV MOV INT	AH, 3CH 21H COPY1 AH, 1 WRHAND, AX E DX, OFFSET AL, Ø AH, 3DH 21H	SNAME	;FILE ATTRIBUTE ;CREATE FILE ;DOS REQUEST ;GOOD RETURN ;FAILURE DURING CREATE ;SAVE HANDLE ;SOURCE NAME ;INPUT ONLY ;OPEN REQUEST ;DOS REQUEST
;OPEN I	MOV INT JNC MOV RET MOV PUT FIL MOV MOV INT JNC MOV RET	AH, 3CH 21H COPY1 AH, 1 WRHAND, AX E DX, OFFSET AL, Ø AH, 3DH 21H COPY2 AH, 2	SNAME	;FILE ATTRIBUTE ;CREATE FILE ;DOS REQUEST ;GOOD RETURN ;FAILURE DURING CREATE ;SAVE HANDLE ;SOURCE NAME ;INPUT ONLY ;OPEN REQUEST ;DOS REQUEST ;GOOD RETURN ;FAILURE DURING OPEN
;OPEN I COPY2:	MOV INT JNC MOV RET MOV MOV MOV INT JNC JNC RET MOV	AH, 3CH 21H COPY1 AH, 1 WRHAND, AX E DX, OFFSET AL, Ø AH, 3DH 21H COPY2	SNAME	;FILE ATTRIBUTE ;CREATE FILE ;DOS REQUEST ;GOOD RETURN ;FAILURE DURING CREATE ;SAVE HANDLE ;SOURCE NAME ;INPUT ONLY ;OPEN REQUEST ;GOOD RETURN
;OPEN I COPY2: ;COPY F	MOV INT JNC MOV RET MOV NPUT FIL MOV MOV INT JNC MOV RET MOV ILE	AH, 3CH 21H COPY1 AH, 1 WRHAND, AX E DX, OFFSET AL, Ø AH, 3DH 21H COPY2 AH, 2 RDHAND, AX	SNAME	;FILE ATTRIBUTE ;CREATE FILE ;DOS REQUEST ;GOOD RETURN ;FAILURE DURING CREATE ;SAVE HANDLE ;SOURCE NAME ;INPUT ONLY ;OPEN REQUEST ;DOS REQUEST ;GOOD RETURN ;FAILURE DURING OPEN ;SAVE HANDLE
;OPEN I COPY2:	MOV INT JNC MOV RET MOV MOV MOV INT JNC JNC RET MOV	AH, 3CH 21H COPY1 AH, 1 WRHAND, AX E DX, OFFSET AL, Ø AH, 3DH 21H COPY2 AH, 2	SNAME	;FILE ATTRIBUTE ;CREATE FILE ;DOS REQUEST ;GOOD RETURN ;FAILURE DURING CREATE ;SAVE HANDLE ;SOURCE NAME ;INPUT ONLY ;OPEN REQUEST ;DOS REQUEST ;GOOD RETURN ;FAILURE DURING OPEN

COPY4:	CMP JZ CALL JNC MOV PUSH MOV INT MOV MOV	AX,Ø COPY4 WRBUFF COPY3 AH,4 AX BX,RDHAND AH,3EH 21H BX,WRHAND AH,3EH 21H	;END OF FILE? ;YES - GO CLOSE FILES ;WEITE ONE SECTOR ;KEEP IT MOVING ;FAILURE DURING WRITE ;SAVE RETURN CODE ;INPUT FILE ;CLOSE ;OUTPUT FILE ;CLOSE ;DOS REQUEST ;OUTPUT FILE ;CLOSE
. TNCDEM	INT ENT TOTA		;DOS REQUEST
; INCREM	MOV	AX, DSIZE	
	MOV		
	ADD	DX,DSIZE+2	
	ADC	TSIZE, AX	;ACCUMULATE TOTAL SIZE
	INC	TSIZE+2,DX	; OF FILES FOUND
	POP	FILES AX	;COUNT FILES FOUND ;GET RETURN CODE
	CMP		•
	JZ	AX,Ø COPY5	;NORMAL END OF FILE? ;YES
	STC	COFIS	SHOW ERROR RETURN
COPY5:	RET		, SHOW ERROR RETORN
RDBUFF:		BX.	
	PUSH	CX ·	
	PUSH	DX	
	MOV	BX, RDHAND	; INPUT FILE HANDLE
	MOV	CX,512	ONE SECTOR
	MOV	DX, OFFSET BUFFEI	
	MOV	AH, 3FH	;READ FILE
	INT	21H	;DOS REQUEST
	POP	DX	
	POP	CX	
	POP RET	ВХ	
WRBUFF:		вх	
WRBUFF:	PUSH	СХ	
	PUSH	DX	
	MOV	BX,WRHAND	;OUTPUT FILE HANDLE
	MOV	CX,AX	;WRITE BUFFER
	MOV	DX, OFFSET BUFFER	
	MOV	АН, 40Н	WRITE FILE REQUEST
	INT	21H	DOS REQUEST
	JC	WRBUFX	ERROR ON WRITE
	CMP	AX,CX	WRITE OK?
	JZ	WRBUFX	;YES
	STC		NO - MARK ERROR
WRBUFX:		DX	
	POP	CX	
	POP	вх	
MICO	RET		
MISC	ENDP		
CSEG	ENDS	(m) om	
	END	START	

# Part III

# Programming With BIOS Calls

## Chapter 11 VIDEO OUTPUT

The primary reasons for coding in assembly language enhanced function and improved execution speed—are also the incentives for coding BIOS interrupts instead of DOS calls. The price you pay is loss of compatibility. Most computers which are based on the Intel 8086/8088 family of microprocessors will run MS DOS, the generic version of PC DOS. The number of machines which have implemented the same calling sequences as IBM at the BIOS level, however, is much smaller. As a general rule, therefore, software which is written for distribution (even if limited only to friends) should be written using DOS function calls whenever practical.

There are several areas, however, where the DOS function calls are woefully inadequate. The most obvious of these is in dealing with the display screen. Modern display technology treats the screen as a two-dimensional surface, with data fields directly accessible by row and column coordinates. In addition, each field, or even each individual character, has attributes such as color, intensity, automatic underlining, and so forth. Finally, the screen surface can be logically subdivided into multiple windows which can be individually scrolled up or down, or made to appear and disappear as required.

DOS, on the other hand, thinks of the screen as a "glass" teleprinter, which prints bright characters on a dark background, left to right, top to bottom, just as a typewriter prints on a piece of paper. DOS 2.0 did supply a device driver named ANSI.SYS, which allows keyboard redefinition, cursor positioning, and some screen attribute manipulation under program control. Not only is this function limited in scope and somewhat awkward to use, but since it is an optional feature requiring user action to implement, it does not solve the compatibility issue since there is no guarantee that it will be present in any given machine environment. To truly unlock the power of the IBM display adapters requires that the programmer drop down to at least the BIOS call level.

## **Display Adapter Characteristics**

No level of programming can cause the hardware to do more than it is physically capable of. Since IBM has more than one type of display adapter for the PC (four as of this writing), we need to briefly review the basic differences.

Ignoring for a moment the more recent announcements, IBM offers a choice of two display adapters. The Monochrome adapter operates in character mode only, with one screen of 25 rows of 80 characters. Each character has a corresponding attribute character which does not take up a screen position. The standard character is green on a dark background. Different attribute bits specify the nondisplay, highlight, underline, reverse video, and blink characteristics. It is important to understand that although the word monochrome

means essentially the same thing as black and white, the IBM Monochrome adapter is quite different—from a programming standpoint—than a Color/Graphics adapter with a black and white monitor attached.

The Color/Graphics adapter also has a character mode, or more precisely, multiple character submodes. It has eight independent pages of 25 rows of 40 characters, or four independent pages of 25 rows of 80 characters. Each page keeps track of its own cursor position. The active page (the one currently displayed) can be selected under program control to give the appearance of an instantaneous rewrite of the screen.

The Color/Graphics adapter gives up the hardware underline capability in order to support 16 foreground and 8 background colors (counting black and white as colors). On a RGB monitor, the color attributes are always honored. The adapter can, however, turn off the color burst signal fed to a composite monitor. This capability, combined with the two different screen sizes, gives four different character modes. In addition, the adapter can operate in one of three different graphic modes.

#### **Determining the Current Environment**

Since code written for distribution needs to be able to run on different adapter/display combinations, it is important to be able to determine (and sometimes alter) the current video state. Figure 11.1 shows the register settings involved. Note that the Monochrome adapter has its own unique code. This allows us to distinguish between the Monochrome adapter and Color/Graphics adapter in  $80 \times 25$  black and white mode. The current video mode can be altered by issuing the same interrupt with AH set to 0 and AL set to the desired value (using the same codes returned by the get mode call).

Figure 11.1—Get Video Mode

Registers at Invocation of INT 10H: AH = 15 (0fH) Returns:

AL =	Ø –	4Øx25	Character	Black & white
	1 -	4Øx25	Character	Color
	2 -	8Øx25	Character	Black & white
	3 -	8Øx25	Character	Color
	4 -	32Øx2ØØ	Dots	Color
	5 -	320×200	Dots	Black & white
	6 -	640x200	Dots	Black & white
	7 -	8Øx25	Character	Monochrome Adaptor
AH =	The	number of a	character colum	ns on the screen.
BH =	The o	current act	tive display pa	ge.

#### **Cursor Positioning**

The current cursor position can be determined by issuing the video BIOS interrupt (10H) with register AH set to 3, and BH set to the relative page number (always 0 for the Monochrome adapter). This call returns the current row in DH and the current column in DL. (Position 0,0 is the upper left corner of the screen.) Additionally, the starting and ending lines for the cursor shape are returned an CH and CL. A new cursor position can be set by issuing the interrupt with AH = 2 and DH/DL set to the desired row and column. As before, BH contains the page number. The sample program for this chapter includes subroutines to perform these functions.

### Scrolling Windows

Neither of the IBM display adapters has any hardware scrolling capabilities. The video BIOS routines, however, provide some very powerful scrolling functions. The BIOS calls will scroll either up or down any arbitrary rectangular section of the screen by the number of lines specified. As the scroll takes place, the new blank line(s) which appear at the top or bottom of the screen are preset to the desired attribute. This allows a window to be maintained in a particular color, for example, without the rest of the program being aware of it. The register parameters for the scrolling functions are shown in Figure 11.2.


#### Figure 11.2—Video Scrolling

Registers at invocation of INT 10H: AH = 6 Scroll active, page UP 7 Scroll active, page DOWN BH = The attribute to be used on blank line CH,CL = Row, column of upper left corner of window DH,DL = Row, column of lower right corner of window

### **Attribute Characters**

Each character position on the screen has associated with it an attribute character, which does not take a screen position. There are essentially two different techniques for manipulating these attribute characters. One method is to write the screen character and its corresponding attribute character at the same time. This would be appropriate where a character or field has different attributes than its neighbors. For example, a

data entry program that wished to highlight fields found to be in error would use this technique. The other method is to preset the attribute characters in various

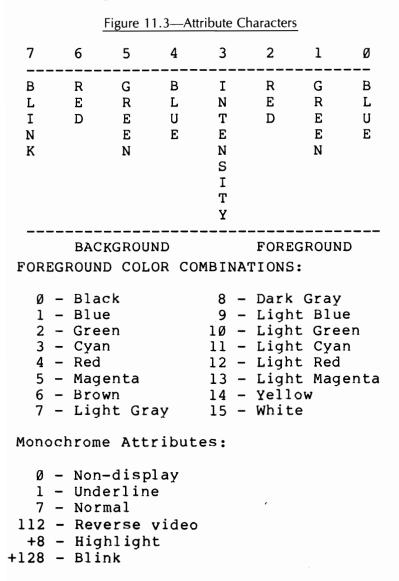

portions of the screen and then write only the screen characters when the screen is updated. A program which maintained one or more windows would likely use this method.

The attribute characters themselves are bit-mapped as shown in Figure 11.3. Note that the blink bit and the intensity bit apply to the foreground only. (By foreground, we mean the dots that make up the displayed character itself. Background means the rest of the character cell.)

The use of any of the nondefault attributes raises some compatibility issues between the Monochrome and the Color/Graphics adapters. For example, characters which are written to display as blue on the Color/Graphics adapter will display as underlined on the Monochrome adapter. A more subtle problem exists on the Color/Graphics adapter when attached to a noncolor monitor. Shades of colors that are quite readable all too often merge into indistinguishable shades of gray in this case.

### Writing to the Screen

The two video function calls that write to the screen are very similar. Both write a character or a string of identical characters to the active screen at the current cursor position. The cursor is not advanced by this action and must be controlled with the set cursor call. All 256 possible character combinations are valid display characters. Therefore, any combination that the program wants to treat as control characters must be trapped by the program prior to issuing the video call. The most common characters that are usually trapped are carriage return, line feed, and horizontal tab. Register conventions for these calls are illustrated in Figure 11.4.

# 132 Charles A. Crayne and Dian Girard Figure 11.4—Video Write Functions

Registers at invocation of INT 10H:

AH = 9 - Write character and attribute

- AL = The character to write
- BH = Display page
- BL = Attribute character (AH = 9 ONLY)
- CX = Count of characters to write

### **Other Character Mode Functions**

In addition to the functions already discussed, there are several other video function calls which can be used in character mode. Many editor programs use an underlining cursor for overtyping and a block cursor for inserting. The shape of the cursor can be set with the Set Cursor Type call. The active page can be changed with the Select Active Page call. Both the Monochrome and Color/Graphic adapters have hardware provisions for supporting a light pen, although the light pen will not work if the adapter is attached to a monitor with a slow decay phosphor, such as that used on the IBM Monochrome display. Finally, sometimes the program needs to determine the current contents of a screen position. The register conventions for these functions are shown in Figure 11.5.

#### The Sample Program

Figure 11.6 shows our old friend, the SCAN program, modified to use the video BIOS calls instead of DOS

```
Figure 11.5—Miscellaneous Video Calls
Set Cursor Type
     AH = 1
     CH = Start line for cursor (\emptyset - 31)
     CL = End line for cursor (Ø-31)
     Setting the start line greater than the
     cell size will turn off the cursor.
Read Light Pen Postion
     AH = 4
     Returns:
     AH = \emptyset - Light pen not triggered.
     AH = 1 - Valid data in following registers:
         DH,DL = Row, column of light pen position
         CH = Raster line (\emptyset - 199)
         BX = Pixel column (\emptyset - 319, 639)
Set Active Display Page
      AH = 5
      AL = New page value (\emptyset-7 for 4\emptyset x 25, \emptyset-3 for
                              80x25)
Read Attribute/Character
      AH = 8
      BH = Display page
      Returns:
            AL = Character read
            AH = Attribute of character read
```

calls. The program is essentially unchanged up to the point that it determines that the file name is valid. It

then checks the current video state using the GETVID subroutine. This subroutine saves both the current mode and the screen size. If the program is running on either the Monochrome adapter or on the Color/Graphics adapter with the mode set to black and white then the program will use normal video in the text window and reverse video in the title bar. Otherwise the attribute settings are altered to use color.

Next, the program divides the video screen up into two windows. The top line on the screen becomes the title bar. The rest of the screen becomes the text window. The name of the file being displayed, along with path descriptors (if any), is displayed in the title bar. This window will remain unchanged for the duration of program execution.

The program then enters a loop, reading from the disk and writing to the screen via the DISPCH subroutine until the entire file has been displayed. The program then exits, as before, by issuing a DOS EXIT call with a return code of zero to indicate successful completion.

PAGE	Scan3 -	File Display Program Using Video Bios Calls
;DEFINE	STACK S	
STACK	SEGMENT DB ENDS	PARA STACK 'STACK' 64 DUP('STACK ')
;;DEFINE		SEGMENT PREFIX
UPARM PREFIX	ENDS	
DEFINE	DATA SE	
•	SEGMENT	PARA PUBLIC 'DATA' 79 ;MAXIMUM VIDEO COLUMN

Figure 11.6—The Sample Program

CHAR FNAME MSG1	DB DB DB DB DB DB ENDS		NOT FOU LE NAMI	;CURRENT VIDEO MODE ;TEXT ATTRIBUTE VALUE ;TITLE BAR ATTRIBUTE ;ONE BYTE BUFFER ;FILE NAME INCLUDING PATH JND',13,10 E ENTERED',13,10
	CODE SE	GMENT		
CSEG START ; ESTABL	SEGMENT PROC ASSUME ISH ADDR MOV MOV ASSUME	PARA PUBLIC 'CODE' FAR CS:CSEG,SS:STACK,DS:PREFIX ESSABILITY TO DATA SEGMENT AX,DSEG ;ADDRESS OF DATA SEGMENT ES,AX ;NOW POINTS TO DATA SEGMENT ES:DSEG ;TELL ASSEMBLER		
	OF MAIN	PROGRAM		
,	LODSB CMP JZ XOR	DI,OFFSET AL,Ø NOFILE CX,CX	UPARM FNAME	;FILE NAME PASSED BY DOS ;FILE NAME FIELD IN OUR DS ;GET PARM STRING LENGTH ;ANY NAME SUPPLIED? ;NO - SAY SO ;MAKE SURE HIGH BYTE IS ZERO
TSTBNK:	CMP JNZ	CL,AL AL,'' NOBLNK		;INSERT STRING LENGTH ;GET CHARACTER ;IS IT BLANK? ;NO - GO MOVE NAME SEVEN LEADING BLANKS
NOFILE:	POP MOV	TSTBNK ES DS SI,OFFSET	MSG2	;SKIP LEADING BLANKS ;DATA SEGMENT ;NOW ALSO IN DS ;NO FILE MESSAGE
NOBLNK:	STOSB LODSB LOOP XOR STOSB	BADFIL NOBLNK AX,AX ES DS DS:DSEG		;GO ISSUE MESSAGE ;STORE IN FILE NAME ;GET NEXT CHARACTER ;LOOP UNTIL DONE ;CLEAR REGISTER ;TERMINATE STRING ;POINTER TO DATA SEGMENT ;NOW ALSO IN DS ;TELL ASSEMBLER
;ATTEMP	T TO OPE	N FILE		
	MOV MOV MOV INT JNC	AH, 3DH AL,Ø DX,OFFSET 21H FILEOK	FNAME	;FILE OPEN REQUEST ;READ ONLY ;FILE NAME ;DOS FUNCTION CALL ;NO ERROR BRANCH
BADFIL:	MOV MOV LODSB MOV MOV MOV INT MOV JMP	SI, OFFSET BX,2 AH,40H CL,AL CH,0 DX,SI 21H AL,16 DONEX	MSG1	FILE OPEN ERROR MESSAGE STANDARD ERROR DEVICE WRITE DEVICE REQUEST GET MESSAGE LENGTH PUT IN COUNT REGISTER CLEAR HIGH ORDER BYTE POINT TO MESSAGE INVOKE DOS SET ERROR RETURN CODE RETURN TO DOS
FILEOK:	MOV	BX,AX		;SAVE FILE HANDLE

CLEAR: READ:	JZ MOV CALL CALL CALL MOV CMP JZ CALL JMP	DX, OFFSET CHA GETVID VIDMOD, 3 CLEAR VIDMOD, 1 CLEAR BGND, 72H FGND, 1CH CLRSCR TITLE RDBYTE AL, CHAR AL, 1AH DONE DISPCH READ	R ;POINT TO ONE CHAR BUFFER ;GET CURRENT VIDEO STATE ;GRAPHICS OR MONOCHROME? ;YES - USE DEFAULTS ;COLOR ON? ;NO ;GREEN ON GRAY ;LIGHT RED ON BLUE ;CLEAR VIDEO WINDOW ;PUT FILE NAME AT TOP OF SCREEN ;READ ONE BYTE FROM FILE ;GET CHARACTER ;END OF FILE? ;YES - QUIT ;PRINT BYTE TO VIDEO SCREEN ;GET NEXT FILE BYTE
RETURN	TO DOS		
DONE: DONEX: START	MOV MOV INT ENDP	AL,0 AH,4CH 21H	;GOOD RETURN CODE ;EXIT REQUEST ;INVOKE DOS
SUBROU	TINES		
VIDSUBS GETVID:	PROC PUSH	AX	;VIDEO SUBROUTINES ;GET VIDEO STATE ;VIDEO REQUEST ;CURRENT VIDEO MODE ;NUMBER OF COLUMNS ;MAXIMUM COLUMN NUMBER
CLRSCR: SCROLL:	PUSH PUSH PUSH MOV MOV JMP PUSH	AX BX CX DX AX,0600H CX,0 CLRSC1 AX BX	;CLEAR WINDOW ;START=ROW 1 COL 1 ;SKIP SCROLL SETUP
CLRSC1:	MOV MOV MOV MOV INT MOV CALL MOV INT POP POP	CX DX AX,0601H CX,0100H BH,FGND DH,24 DL,VIDCOL 10H DX,1800H SETCSR AH,11 21H DX CX BX AX	;SCROLL UP ONE LINE ;START=ROW 1 COL 1 ;TEXT ATTRIBUTE ;END=ROW 25 ;END=MAX COL NO. ;VIDEO BIOS REQUEST ;ROW 25 COL 1 ;SET CURSOR ;CHECK INPUT STATUS ;DOS SERVICE REQUEST

# THE SERIOUS ASSEMBLER

.

SETCSR:	PUSH MOV INT POP POP RET	AX BX BX,0 AH,2 10H BX AX	;PAGE Ø ;SET CURSOR ;VIDEO BIOS REQUEST
GETCSR:	PUSH PUSH MOV MOV INT POP POP RET	BX CX AH,3 BH,0 10H CX BX	;READ CURSOR POSITION ;VIDEO PAGE Ø ;VIDEO BIOS REQUEST
DISPCH:	PUSH PUSH PUSH CMP JZ CMP JZ CMP JNZ MOV INT ADD AND CMP JA MOV INT	AX BX CX DX AL,10 DISPC4 AL,13 DISPC2 AL,9 DISPC1 AH,3 10H DL,8 DL,8 DL,0F8H DL,VIDC0L DISPC2 AH,2 10H	;LINE FEED CHAR? ;YES - IGNORE ;CARRIAGE RETURN ;GO SCROLL ;TAB CHAR? ;GO DISPLAY CHAR ;GET CURRENT CURSOR POS ;VIDEO BIOS REQUEST ;EXPAND TAB ;TRUNCATE TO BOUNDRY ;PAST END OF SCREEN? ;YES - GO SCROLL ;SET CURSOR ;VIDEO BIOS REQUEST
DISPC1:	JMP MOV MOV INT CALL CMP JNZ	DISPC4 AH,10 BH,0 CX,1 10H GETCSR DL,VIDCOL DISPC3	;DONE ;WRITE CHAR ;PAGE Ø ;ONE CHARACTER ;VIDEO BIOS REQUEST ;READ CURSOR POSITION ;END OF PHYSICAL LINE? ;NO PROBLEM
DISPC2:	CALL JMP	SCROLL DISPC4	SCROLL UP SCREEN
DISPC3:	INC CALL	DL SETCSR	; INCREMENT CURSOR POSITION ; SET CURSOR POSITION
DISPC4:	POP POP POP POP RET	DX CX BX AX	
TITLE:	PUSH PUSH PUSH PUSH MOV CALL MOV MOV MOV INC	AX BX CX DX DX,Ø SETCSR AH,9 BH,Ø CL,VIDCOL CL	;TOP OF SCREEN ;SET CURSOR ;WRITE CHAR AND ATTRIBUTE ;VIDEO PAGE ;MAX COLUMN ;SCREEN WIDTH

	MOV MOV INT MOV CALL CALL POP POP POP POP RET	CH,Ø AL,'' BL,BGND 10H SI,OFFSET FNAME PRINT SCROLL DX CX BX AX	;BLANK ;TITLE BAR ATTRIBUTE ;VIDEO BIOS CALL ;FILE NAME ;PRINT FILE NAME ;START LISTING AT BOTTOM
PRINT:	LODSB CMP JNZ RET	AL,Ø PRINT1	;GET CHAR ;END OF STRING? ;NO - CONTINUE
PRINT1:		DISPCH PRINT	;DISPLAY CHARACTER ;GET NEXT CHARACTER
VIDSUBS	ENDP		
RDBYTE			
; RDBYTE	EXPECTS	A FILE HANDLE I	N BX AND THE LOCATION OF
; A ONE		FER IN DX. ALL R	EGISTERS ARE PRESERVED
	PUSH	AX	;SAVE REGS ON ENTRY
	PUSH	вх	
	PUSH	СХ	
	PUSH	DX	
	MOV	AH, 3FH	; READ REQUEST
	MOV	CX,1	; ONE BYTE ONLY
	INT	21H	; INVOKE DOS
	JC	FEOF	TREAT ANY ERROR AS END OF FILE
	CMP	AL,Ø RDBYT1	;EOF? ;NO - RETURN
FEOF:	JNZ PUSH	SI	NO - REIORN
FEOF:	MOV	SI,DX	;CAN NOT USE DX AS INDEX REG
	MOV	BYTE PTR [SI],1	
	POP	SI	,
	JMP	RDBYT1	; RETURN
RDBYT1:		DX	•
	POP	СХ	
	POP	вх	
	POP	AX	
	RET		
RDBYTE	ENDP		
CSEG	ENDS		
	END	START	

The DISPCH subroutine, after saving registers on the stack, checks for special characters. Since this example is designed to display files in which each line is terminated by both a carriage return and a line feed, the routine treats carriage return as a new line character and invokes the SCROLL subroutine to scroll the window. Line feed characters are treated as redundant and discarded. Horizontal tab characters are handled by doing a direct cursor movement to the next tab

position, defined in this case as a multiple of 8 columns. A program that allowed the user to set tab positions arbitrarily would use a table lookup function at this point.

All other characters are written to the screen. Since the video BIOS call does not move the cursor position, the routine obtains the current cursor position and tests for the end of the current line. If the last position of the line has just been filled, SCROLL is called. Otherwise, the column position is incremented and the BIOS routine is called to update the cursor position.

When SCROLL is called, it points to the text window by specifying the upper left corner, which is fixed, and the lower right corner, which is dependent upon the screen width. It then requests that the window be scrolled up one line, specifying the attribute character that should be used to initialize the new blank line at the bottom of the window.

The use of the BIOS calls creates one minor problem. DOS normally only checks to see if the operator has keyed the CRTL-break abort sequence during a DOS console request. The SCROLL subroutine solves this problem by issuing a DOS CHECK INPUT request after each window scroll operation. There is no need to check the result of this call, since—if CRTL-break has been signaled— control will never be returned from the DOS call.

If you have the proper equipment configuration available, test this program on the Monochrome display and in the various combinations of screen width and color on and off on the Color/Graphics adapter, and verify that the program properly adapts itself to the various environments.

# Chapter 12 GRAPHICS

As we have seen, DOS thinks of the display screen as a character printer. Graphics through DOS calls is, therefore, limited to what can be built with the various graphic characters provided—mostly in the upper half of the extended ASCII character set. If your machine is equipped only with the IBM Monochrome Display Adapter, that is all the graphics function you have. The Color/Graphics adapter, on the other hand, has an all points addressable mode which allows treating the screen as an array of dots. The maximum resolution of the original adapter is 640 dots horizontally by 200 dots vertically in one color, or  $320 \times 200$  in four colors. Newer boards from IBM and other vendors have greatly increased both the number of colors and the total number of dots.

There are two ways to take advantage of the all points addressable capability. The first makes use of the fact that the IBM BIOS provides a routine which writes normal text to the screen in  $320 \times 200$  and  $640 \times 200$  graphics modes. This routine makes use of a character table in ROM. The table, however, only de-

fines the ASCII characters from 0-7FH. For the upper half of the extended ASCII codes, the routine assumes that someone has set the 1FH interrupt vector to the segment and offset values of their own table. The routine then uses this table with no validity checking.

To build such a table, we only need to know that the system routine divides the screen up into character cells of  $8 \times 8$  dots each. For building special graphics characters, all 64 dots may be freely used. If we are building a custom character font, however, we need to leave some room between letters. The normal uppercase letter is built in a 5-dot-wide by 7-dot-high character cell which occupies the upper left portion of the  $8 \times 8$  total cell. Lower case letters use the bottom row of dots to form descenders. Of course, these are all just guidelines. You are free to use any dots at any time for any purpose. How it looks on the screen is the only real requirement.

Since a cell is  $8 \times 8$  and since a byte has 8 bits, it takes 8 bytes to specify each of the 128 cells in a table. Each byte represents one row of dots, starting from the top. Figure 12.1 shows the encoding for the standard backslash character. The '1's in the matrix represent the dots which will be turned on. The '0's are dots that will be turned off.

	10.1	<b>D</b>	Character		
FIGURO	1 2 1	-Karkelach	( haracter	( PII	Man
riguic	12.1	-Dackslasli	Character	CCII	iviap

DB

ØCØH,6ØH,3ØH,18H,ØCH,6,2,Ø

; BACKSLASH

11000000	CØ
01100000	6Ø
00110000	3Ø
00011000	18
00001100	ØC
00000110	Ø6
00000010	Ø2
00000000	ØØ

Of course we are not limited to one table. Once the character has been written to the screen, the table is no longer needed. Thus we can mix any number of fonts alphabetic or graphic—on a single screen just by changing the pointer to the appropriate table before writing the character.

Figure 12.2 shows a sample program which displays the Hebrew alphabet. The program begins by checking the current video mode (Figure 11.1). If the system is currently running on the Monochrome Adapter, then the program will complain and quit. In all other cases, the program will save the current mode and reinitialize the screen in  $320 \times 200$  graphics mode. This is done even if already in that mode, since this also acts as a clear screen function. Next, it gets and saves the current system 1FH interrupt vector and replaces it with the address of its own table. The saving and later restoring of the previous pointer is a nice touch, but it's usually unnecessary since no standard system table exists and most other user programs are not going to expect to come back later and find their pointer still there.

After displaying a message to let the user know how to terminate, the program enters a loop reading the keyboard. Each character typed is first checked to see if it is the ESC character. If so, the program restores the previous video environment and exits to DOS. Otherwise, it relocates most printable character up into the range where they will be displayed from the custom character set. Control characters, and a few punctuation marks, are left unchanged. Of course, no real program would translate in so simplistic a fashion, but it does illustrate the technique.

The other method of handling graphics is to adapt our programs to write one dot at a time. This is done by first issuing the BIOS function call to put the

#### Figure 12.2—Hebrew Character Set Example

PAGE 60,132 TITLE CHARSET - Demonstration of Alternate Character Sets PAGE \_\_\_\_\_ DEFINE STACK SEGMENT ------SEGMENT PARA STACK 'STACK' STACK DΒ 64 DUP('STACK • ) STACK ENDS ------; DEFINE DATA SEGMENT SEGMENT WORD PUBLIC 'DATA' DSEG APREFIX DW ø ; ADDRESS OF PSP ; PREVIOUS VIDEO MODE OLDMODE DB Ø OLDCHAR DD Ø ; PREVIOUS GRAPHICS POINTER Program Requires Graphics Adapter', 13, 10, '\$' MSG1 DB 'Press ESC to Exit',13,10,'\$' MSG2 DB ;----; HEBREW GRAPHIC CHARACTER EXTENSIONS (INTERRUPT 1FH) ..... \_\_\_\_\_ : For use without vowels: HEBREW DB 000H,022H,012H,01AH,02CH,024H,022H,000H ; aleph DB 000H,03CH,004H,014H,004H,004H,03EH,000H ; bet DB 000H,03CH,004H,004H,004H,004H,03EH,000H ; vet DB 000H,00CH,004H,004H,004H,01CH,014H,000H aimel ; DB 000H,03EH,004H,004H,004H,004H,004H,004H,000H dalet ; DB 000H,03EH,002H,022H,022H,022H,022H,020H hav DB 000H,018H,008H,008H,008H,008H,008H,000H ; vav DВ 020H,01CH,00AH,008H,008H,008H,008H,000H ; zavin DB 000H,07EH,022H,022H,022H,022H,022H,000H chet ; DВ 000H,02EH,02AH,022H,022H,022H,01CH,000H tet ; DB 000H,01CH,004H,004H,000H,000H,000H,000H : vod DB 000H,03CH,002H,012H,002H,002H,03CH,000H kaf ; DB 000H,03CH,002H,002H,002H,002H,03CH,000H chaf : DB 000H,03EH,004H,004H,004H,004H,004H,004H final chaf : DB 020H,020H,03EH,002H,004H,008H,010H,000H lamed DB 000H,02EH,012H,022H,022H,022H,02EH,000H mem ; DB 000H,03EH,012H,012H,012H,012H,01EH,000H final mem ; DH 000H,00CH,004H,004H,004H,004H,01CH,000H ; nun DB 000H,018H,008H,008H,008H,008H,008H,008H final nun : DB 000H,03EH,012H,012H,012H,012H,01CH,000H sameh : DB 000H,022H,022H,012H,00AH,006H,03CH,000H avin DB 000H,03EH,022H,02AH,032H,002H,03EH,000H pay : DB 000H,03EH,022H,022H,032H,002H,03EH,000H fav ; 000H,03EH,022H,032H,002H,002H,002H,002H final fav DB ; DB 000H,022H,014H,008H,004H,002H,03EH,000H tzadee ; DB 000H,024H,024H,028H,030H,020H,020H,020H final tzadee ; DB 000H,03EH,002H,022H,024H,028H,020H,020H kof DB 000H,03CH,004H,004H,004H,004H,004H,000H resh : DB 000H,02AH,02AH,02AH,02AH,032H,03EH,000H shin/sin ; DB 000H,03EH,022H,02AH,022H,022H,062H,000H ; tav DВ 000H,03EH,022H,022H,022H,022H,062H,000H ; tav ; ; For use with vowels: DB 000H,000H,022H,012H,01AH,02CH,024H,022H ; aleph DB 000H,000H,03CH,004H,014H,004H,004H,03EH ; bet DB 000H,000H,03CH,004H,004H,004H,004H,03EH ; vet DB 000H,000H,00CH,004H,004H,004H,01CH,014H ; gimel DB 000H,000H,03EH,004H,004H,004H,004H,004H dalet : DB 000H,000H,03EH,002H,022H,022H,022H,022H ; hay DB 000H,000H,018H,008H,008H,008H,008H,008H ; vav DB 000H,020H,01CH,00AH,008H,008H,008H,008H zavin ; DВ ØØØH,ØØØH,Ø7EH,Ø22H,Ø22H,Ø22H,Ø22H,Ø22H ; chet DB 000H,000H,02EH,02AH,022H,022H,022H,01CH ; tet

	DB	000H,000H,01CH,0	04H,004H,000H,000H,000H ; yod
	DB	000H,000H,03CH,0	02H,012H,002H,002H,03CH ; kaf
	DB	000H,000H,03CH,0	02H,002H,002H,002H,03CH ; chaf
	DB	000H,000H,07EH,0	04H,004H,004H,004H,004H ; final chaf
	DB	004H,004H,004H,0	04H,000H,000H,000H,000H ; its tail
	DB		02H,002H,004H,008H,010H ; lamed
	DB	000H,000H,02EH,0	12H,022H,022H,022H,02EH ; mem
	DB	000H,000H,03EH,0	12H,012H,012H,012H,01EH ; final mem
	DB	000H,000H,00CH,0	04H,004H,004H,004H,01CH ; nun
	DB	000H,000H,018H,0	08H,008H,008H,008H,008H ; final nun
	DB		08H,000H,000H,000H,000H ; its tail
	DB		12H,012H,012H,012H,01CH ; sameh
	DB		22H,012H,00AH,006H,03CH ; ayin
	DB		22H,02AH,032H,002H,03EH ; pay
	DB		22H,022H,032H,002H,03EH ; fay
	DB		22H,022H,032H,002H,002H ; final fay
	DB		02H,000H,000H,000H,000H ; its tail
	DB		14H,008H,004H,002H,03EH ; tzadee
	DB		22H,024H,028H,030H,020H ; final tzadee
	DB		20H,000H,000H,000H,000H ; its tail
	DB	000H,000H,07EH,0	02H,042H,042H,044H,048H ; kof
	DB		40H,000H,000H,000H,000H ; its tail
	DB	000H,000H,03CH,0	04H,004H,004H,004H,004H ; resh
	DB		2AH,02AH,02AH,032H,03EH ; shin
	DB	020H,000H,02AH,0	2AH,02AH,02AH,032H,03EH ; sin
	DB		22H,02AH,022H,022H,062H ; tav
	DB		22H,022H,022H,022H,062H ; tav
	DB		08H,000H,000H,000H,000H ; shvah
	DB	000H,01CH,008H,0	08H,000H,000H,000H,000H ; kamatz
	DB	000H,03AH,010H,0	12H,000H,000H,000H,000H ; kamatz + shvah
	DB	000H,01CH,000H,0	00H,000H,000H,000H,000H ; patach
	DB		02H,000H,000H,000H,000H ; patach + shvah
	DB		08H,000H,000H,000H,000H ; segol
	DB		12H,000H,000H,000H,000H ; segol + shvah
	DB		00H,000H,000H,000H,000H ; chirik
	DB		00H,000H,000H,000H,000H ; tzereh
	DB		02H,000H,000H,000H,000H ; kubutz
	DB		08H,008H,008H,008H,008H ; cholam
	DB		00H,000H,000H,000H,000H ; just the dot
	DB		08H,008H,028H,008H,008H ; shuruk
	DB		00H,008H,000H,000H,000H ; center dot
	DB	46*8 DUP(000H)	
DSEG	ENDS		
	CODE SEC		
;			
CSEG	SEGMENT	BYTE PUBLIC 'COD	Ε'
START	PROC	FAR	
	ASSUME	CS:CSEG,DS:DSEG,	ES:DSEG,SS:STACK
	MOV		ADDRESS OF DATA SEGMENT
	MOV		NOW POINTS TO DATA SEGMENT
	MOV		SAVE PREFIX ADDRESS FOR EXIT
	MOV		NOW POINTS TO DATA SEGMENT ALSO
;GET ANI	D SAVE TI	HE CURRENT VIDEO	
	MOV	AH,15	GET CURRENT VIDEO MODE
	INT	1ØH	VIDEO BIOS CALL
	MOV		SAVE MODE
	CMP		CHECK FOR MONO ADAPTER
	JNZ		GRAPHICS ADAPTER IN CONTROL
			NOT GRAPHICS MESSAGE
	CALL		DISPLAY MESSAGE
	JMP		TERMINATE PROGRAM
GRAPH:	MOV		MEDIUM RES COLOR
	MOV	AH,Ø	SET MODE
	INT		VIDEO BIOS CALL
;			
		TE CHARACTER SET	
;			

#### THE SERIOUS ASSEMBLER

:GET OL	D CHARAC	TER POINTER	
,	PUSH		;CALL DESTROYS ES
			TABLE VECTOR
			GET VECTOR
	INT	218	DOS REQUEST
	MOV	OLDCHAR, BX	SAVE OLD TABLE
	MOV		ENTRY ADDRESS
	POP	ES	,
		DX.OFFSET HEBREW	START OF TABLE
	MOV	AH, 25H	SET INTERRUPT VECTOR
	INT		DOS REQUEST
;WRITE	EXIT MSG	TO SCREEN	
		DX, OFFSET MSG2	;EXIT MSG
	CALL	PRINT	DISPLAY ON SCREEN
;WAIT F	OR KEYPRE		•
WAIT:	MOV	AH,7	GET CHAR WITHOUT ECHØ
			DOS REQUEST
			;ESC?
		RESTORE	;YES - QUIT
			; INTERCEPTED RANGE?
		DISPLAY	:NO
	ADD	AL.80	FORCE USE OF TABLE
DISPLAY	: MOV	DL,AL	CHARACTER TO WRITE
	MOV		OUTPUT CHAR
	INT		DOS FUNCTION CALL
	JMP		READ NEXT KEY
:			
		DEO MODE	
;			
RESTORE	: MOV	AL,OLDMODE	;PREVIOUS VIDEO MODE ;SET MODE FUNCTION
	MOV	AH,Ø	SET MODE FUNCTION
	INT	1ØH	;VIDEO BIOS CALL
	MOV	DX,OLDCHAR	; PREVIOUS TABLE OFFSET
	PUSH	DS	;NEED DS FOR CALL
	MON	DS,OLDCHAR+2	PREVIOUS TABLE SEGMENT
	MOV	AH,25H	;SET INTERRUPT VECTOR
	INT	21H	;PREVIOUS VIDEO MODE ;SET MODE FUNCTION ;VIDEO BIOS CALL ;PREVIOUS TABLE OFFSET ;NEED DS FOR CALL ;PREVIOUS TABLE SEGMENT ;SET INTERRUPT VECTOR ;DOS REQUEST
	FOF	03	
; RETURN	TO DOS		
DONE:	MOV	AX, APREFIX	ADDRESS OF PSP
	PUSH	AX	PLACE ON STACK
		AX,AX	;OFFSET = ZERO
			PLACE ON STACK
	RET		RETURN TO DOS
START	ENDP		
;SUBROU			
; PRINT	PROC		;DISPLAY TO SCREEN
FRINT		N V/	
		AX	DUINT STRING FUNCTION
		AH,9	PRINT STRING FUNCTION
		210	;DOS REQUEST
		AX	
DUTNE	RET		
PRINT CSEG	ENDP		
CDEG	ENDS		
	END		

adapter into the desired graphics mode, and then issuing another BIOS call for each dot to be written. The trick, of course, is choosing the correct algorithm to select the dots to be turned on to form the desired shape.

The sample program in Figure 12.3 illustrates techniques to draw lines, circles, and ellipses. Most other shapes can be fashioned from these primitives. The program begins, as did the previous example, by getting and saving the current video mode. Again as before, if the current mode is the Monochrome Adapter, then the program complains and gives up. Otherwise, it sets the mode to  $320 \times 200$  color.

Next, just to liven up the screen a bit, we set the color palette to a choice of green, red, or yellow on a blue background. This involves issuing the video BIOS call (interrupt 10H) with AH = 11 (set palette), BH = 0 (palette number), and BL = 1 (background color). The palette and background color numbers are the same as those described in the BASIC "COLOR" statement. Then we draw a white circle and set of red lines.

The heart of the program is the POINT subroutine. This code first performes a validity check on the x and y coordinates of the requested point as passed in the DI (Row) and SI (column) registers. If all is well, it then sets up the appropriate registers and issues the BIOS interrupt call. Note that the value for color is taken from a variable in the data segment rather than being passed as a parameter. This was done so that the program could set the color once and then issue a sequence of point calls which would all use the same color. Not obvious from the example is the fact that if the high-order bit of COLOR is set then the dot is exclusive "or"-ed with the current screen contents. This technique is valuable in animation, because it allows a moving object to temporarily overlay the background scene rather than erasing it.

The subroutine called CIRCLE actually generates an ellipse. A circle is, of course, simply a special case in

which the aspect ratio is 1:1. In fact, to draw something which looks like a circle on the color monitor, we actually have to draw an ellipse. This is because the dot spacing is not the same in the horizontal and vertical directions. The sample program uses an aspect ratio of 5:6 to attempt to correct for this visual distortion. A different ratio may look better on your own monitor, depending upon how it is adjusted.

Since CIRCLE requires more temporary variables than can be held all at once in the various registers, it has been written to use the stack for both its passed parameters and its local storage. This technique means that the subroutine can be separately compiled and linked with another program without the calling program having to allow for any working storage for the subroutine. It also makes the subroutine re-entrant, although that is only of concern in multi-tasking environments.

In polar coordinates, a circle is defined by the pair of relationships  $X = R^*$ Cosine Theta and  $Y = R^*$ Sine Theta. This relationship does not lend itself well to a good algorithm when working with integer dot positions, however. Instead, we prefer to step along one coordinate one dot at a time and calculate the other coordinate. For that part of the circle that lies in the range of 0 to 45 degrees, we use the following algorithm: Y = Y + 1X = X - Tan(1/ASPECT). For the range 45 to 90 degrees, we step X and calculate Y. The other three quadrants need no calculation. As each point in the first quadrant is calculated, we take advantage of symmetry to locate the corresponding point in the other three quadrants. Additionally, any time that the calculated coordinate is more than one dot position away from the previous point, the routine fills in the intermediate points. This not only makes a more solid-looking cirle, but is critical if a fill routine is to be invoked later.

#### Charles A. Crayne and Dian Girard

The line routine could also have been written to use the stack for passing parameters, but is shown here as it might be called from another assembly language routine with the parameters already in the registers. It starts out by normalizing the order of the line ends. That is, it will always draw the line from left to right regardless of which end was specified first. This allows all possible lines to be considered as one of four cases; whether the line slopes up or down, and whether the slope is greater than or less than 45 degrees.

Consider Case 1. (Y2 - Y1) is positive and greater than  $(X2 \times X1)$ . In this case, we step along the Y axis one dot at a time. We then approximate the slope of the line by adding (X2 - X1) into an accumulator and comparing it to (Y2 - Y1). If less, then we write a dot at the current X position and try again. If greater or equal, then we increment X, write a dot, subtract (Y2 - Y1) from the accumulator and loop. The effect of this is to build a solid line out of little stairsteps. The other cases are essentially identical except for which coordinate we step along and whether we increment or decrement the other coordinate.

If none of the above makes sense to you, don't worry about it. The routines work, as the sample program demonstrates. Just copy them and use them as they are.

Figure 12.3—Sample	<b>Graphics Program</b>	using BIOS Calls
--------------------	-------------------------	------------------

# THE SERIOUS ASSEMBLER

DSEG COLOR DIR APREFIX OLDMODE MSG1 MSG2 DSEG	DB DW DW DB DB DB ENDS	Press Any Key	;ADDRESS OF PSP ;PREVIOUS VIDEO MODE as Graphics Adapter',13,10,'\$' to Exit','\$'
·; DEFINE	CODE SE	GMENT	· · · · · · · · · · · · · · · · · · ·
; CSEG START	SEGMENT PROC ASSUME MOV	BYTE PUBLIC 'CON FAR CS:CSEG,DS:DSEG AX,DSEG DS,AX	DE' ,ES:DSEG,SS:STACK ;ADDRESS OF DATA SEGMENT ;NOW POINTS TO DATA SEGMENT ;SAVE PREFIX ADDRESS FOR EXIT ;NOW POINTS TO DATA SEGMENT ALSO
;GET AN	D SAVE T MOV INT MOV CMP JNZ MOV CALL	10H OLDMODE,AL AL,7 GRAPH DX,OFFSET MSG1 PRINT	MODE ;GET CURRENT VIDEO MODE ;VIDEO BIOS CALL ;SAVE MODE ;CHECK FOR MONO ADAPTER ;GRAPHICS ADAPTER IN CONTROL ;NOT GRAPHICS MESSAGE ;DISPLAY MESSAGE ;TERMINATE PROGRAM
GRAPH:	JMP MOV INT MOV MOV MOV INT	вн,ø	MEDIUM RES COLOR SET MODE VIDEO BIOS CALL SET COLOR PALETTE GREEN/RED/YELLOW ON BLUE BACKGROUND VIDEO BIOS CALL
CREATE	A FEW S		
'		IN THE CENTER OF COLOR, 3	
;CALL C	IRCLE(X,	Y,RADIUS,NUMER,D AX,160	ENOM) ;X ORIGIN
	PUSH	AX AX AX,100	Y ORIGIN
		AX	;RADIUS
	PUSH	AX	
	MOV PUSH	AX,5 AX	;ASPECT NUMERATOR
	PUSH	AX,6 AX	;ASPECT DENOMINATOR
	MOV MOV MOV MOV MOV	CIRCLE DIAGONAL LINES COLOR,2 SI,20 DI,180 AX,300 BX,20	; X1 ; Y1 ; X2 ; Y2
LOOP:		SI DI AX BX LINE	

POP ΒХ AX POP DI SI SI,20 AX,20 LOOP POP POP ; MOVE X1 TO RIGHT ; MOVE X2 TO LEFT ADD SUB JNZ DRAW NEXT LINE WRITE EXIT MSG TO SCREEN MOV DX, OFFSET MSG2 ; EXIT MSG PRINT ; DISPLAY ON SCREEN CALL ;WAIT FOR KEYPRESS MOV AH, ØCH ;CLEAR BUFFER MOV AL,7 ;WITHOUT ECHO INT 21H ;DOS REQUEST ;CLEAR BUFFER AND INPUT -----RESTORE OLD VIDEO MODE MOVAL,OLDMODE; PREVIOUS VIDEO MODEMOVAH,Ø; SET MODE FUNCTIONINT1ØH; VIDEO BIOS CALL ;------; RETURN TO DOS DONE: MOV AX, APREFIX ; ADDRESS OF PSP PUSH AX ; PLACE. ON STACK XOR AX, AX ; OFFSET = ZERO PUSH AX ; PLACE ON STACK DET : PETURN TO DOS RET RETURN TO DOS START ENDP ;SUBROUTINES POINT PROC NEAR PUSH AX ;[SI=X,DI=Y] PUSH BX PUSH CX PUSH DX PUSH SI PUSH DI CLIP POINTS OUTSIDE SCREEN DINTS OUTSIDE SCREEN CMP SI,0 ;LEFT EDGE JL POINTX CMP SI,319 ;RIGHT EDGE JA POINTX CMP DI,0 ;TOP JL POINTX CMP DI,199 ;BOTTOM JA POINTX MOV DX,DI ;ROW MOV DX,DI ;ROW MOV CX,SI ;COLUMN MOV AL,COLOR ;COLOR VALUE MOV AH,12 ;WRITE DOT INT 10H ;VIDEO BIOS CALL POP DI DI POINTX: POP POP SI POP DX POP СХ ВХ POP POP AX RET POINT ENDP

; Draws a circle at center at center (X,Y) with aspect ratio ; numer/denom; radius in column units

CIRCLE	PROC	NEAR	
	PUSH	BP	;SAVE CALLER'S FRAME POINTER
	MOV	BP,SP	;ESTABLISH LOCAL FRAME
	SUB	SP,14	;RESERVE LOCAL STORAGE
;ESTABL	ISH LABE	LS FOR PARAMETER	S ON STACK
XX	EQU	WORD PTR [BP+12	
YY	EQU	WORD PTR [BP+10	
RADIUS	EQU	WORD PTR [BP+8]	;RADIUS OF CIRCLE
NUMER	EQU	WORD PTR [BP+6]	;NUMERATOR OF ASPECT
DENOM	EQU	WORD PTR [BP+4]	; DENOMINATOR OF ASPECT
XP	EQU	WORD PTR [BP-2]	; PREVIOUS X CO-ORDINATE
YP ASPECT	EQU	WORD PTR [BP-4]	; PREVIOUS Y CO-ORDINATE
IASPECT	EQU	WORD PTR [BP-6] WORD PTR [BP-8]	;ASPECT RATIO * 1000 ;INVERSE ASPECT * 1000
Cløøø	EQU	WORD PTR [BP-10	
CURX	EQU	WORD PTR [BP-12	
CURY	EQU	WORD PTR [BP-14	
CONT	MÖV	AX, NUMER	;GET ASPECT NUMER
	MOV	C1000,1000	SCALE FACTOR
	IMUL	C1000	SCALE BY 1000
	IDIV	DENOM	:AX=ASPECT*1000
	MOV	ASPECT, AX	SAVE ASPECT
	MOV	AX, DENOM	GET DENOM IN AX
	IMUL	C1000	SCALE DENOMINATOR
	IDIV	NUMER	AX=INV ASPECT*1000
	MOV	IASPECT, AX	SAVE
;Y=Y+1	X=X-TAN (	INV ASPECT)	
	MOV	AX,RADIUS	;GET RADIUS
	MOV	XP,AX	;1st PREVIOUS X
	IMUL	C1000	;SCALE
	MOV	CURY,Ø	;ZERO INIT Y VALUE
CR5:	PUSH	AX	
	PUSH ADD	DX Ax,500	; ROUND
	ADC	DX,0	ROUND
	IDIV	C1000	;RESCALE X
	MOV	BX,AX	;lst quad
	PUSH	BX	NEW CALCULATED X
CR5A:	ADD	AX,XX	ADD X ORIGIN
	MOV	DI,YY	Y ORIGIN
	SUB	DI,CURY	
	MOV	SI,AX	;GET X TO PLOT
	CALL	POINT	;CALL POINT ROUTINE
	SUB	SI,BX	;GET 2nd QUAD
	SUB	SI,BX	;X+ORIGIN
	CALL	POINT	
	ADD	DI,CURY	;GET 3rd QUAD
	ADD	DI,CURY	;Y+ORIG
	CALL ADD	POINT SI,BX	;GET 4th QUAD
	ADD	SI,BX	;X+ORIGIN
	CALL	POINT	, ATOMICIA
	INC	BX	
	CMP	BX,XP	;X GAP?
	JAE	CR6	;NO
	MOV	AX, BX	SET INTERMEDIATE POINT
	JMP	CR5A	GO PLOT IT

;CX NOW AT ORIGINAL POINT

# Charles A. Crayne and Dian Girard

		•	
CR6:	POP	вх	;CALCULATED X
	MOV	XP,BX	PREVIOUS X
	INC	CURY	NEW Y
	MOV	AX,CURY	•
	IMUL		; Y
		IASPECT	
	IDIV	BX	; TAN*INV ASPECT
	XOR	DX,DX	; REMAINDER
	MOV	CURX,AX	;CURX=TAN*INV ASPECT
	IDIV	IASPECT	; AX=TAN
	CMP	AX,1	;TAN=1?
	POP	DX	
	POP	AX	
	JAE	CR7	;GO TO NEXT SECTOR
	NEG	CURX	;TO DEC X
	ADD	AX,CURX	;NEW X VALUE
	ADC	DX,-1	NEGATIVE CARRY
	JMP SHO		PLOT NEW POINT
; PLOT	45 TO 9Ø	DEGREES	
CR7:	MOV	AX,CURY	;NEXT Y
	MOV	YP,AX	; INIT PREVIOUS Y
	IMUL	C1000	; DX : AX=Y*1000
	MOV	CURY, BX	;LAST X VALUE
	DEC	CURY	NEXT X
CR8:	PUSH	AX	, NEAT A
chu.	PUSH	DX	
	ADD	AX,500	POUND
	ADC		; ROUND
		DX,Ø	
	IDIV MOV	C1000	
	PUSH	BX,AX BX	;1st QUAD Y
CR8A:			AND V ODICIN
CROA:	ADD	AX,YY	; ADD Y ORIGIN
	MOV	SI,XX	;X ORIGIN
	ADD	SI,CURY	
	MOV	DI,AX	;Y
	CALL	POINT	
	SUB	SI,CURY	;2nd QUAD
	SUB	SI,CURY	; X
	CALL	POINT	
	SUB	DI,BX	;3rd QUAD
	SUB	DI,BX	; Y
	CALL	POINT	
	ADD	SI,CURY	;4th QUAD
	ADD	SI,CURY	; X
	CALL	POINT	
	DEC	вх	
	CMP	BX,YP	;GAP?
	JBE	CR9	; NO
	MOV	AX,BX	
	JMP	CR8A	;PLOT INTERMEDIATE POINT
CR9:	POP	вх	
	MOV	YP,BX	;SAVE PREVIOUS Y
	SUB	DI,YY	Y-Y ORIGIN
	NEG	DI	Y ORIGIN ADJUST
	XCHG	SI,DI	;SI=Y
	CMP	CURY,Ø	;90 DEG?
	JS	CR11	YES, EXIT
	DEC	CURY	NEW X
	MOV	AX,CURY	,
	IMUL	ASPECT	;ASPECT*1000
	IDIV	SI	APLECT. INAN
	TDIV	01	

CR10: CR11: CIRCLE	MOV POP CMP JNS MOV ADD ADC JMP MOV POP RET RET ENDP	CURX,AX DX AX BX,BX CURX,Ø CRIØ BX,-1 AX,CURX DX,BX CR8 SP,BP BP 10	;DELTA Y ;SIGN CHECK ;POSITIVE ;NEGATIVE CARRY ;NEW X VALUE ;HI WORD CARRY ;PLOT NEXT POINT ;FREE LOCAL STORAGE ;RESTORE CALLER'S FRAME ;FREE PASSED PARAMETERS
		lines in normal	or XOR mode
;			
LINE	PROC MOV CMP JBE XCHG XCHG	NEAR DX,Ø SI,AX NOXCHG SI,AX DI,BX	;[SI=X1,DI=Y1,AX=X2,BX=Y2]
NOXCHG:	SUB MOV SUB MOV JNS NEG NEG	AX,SI BP,AX BX,DI CX,1 NOTNEG CX BX	;BP HOLDS X DIFFERENCE CONSTANT
NOTNEG :		[DIR],CX AX,BX POINT	;SAVE Y DIFFERENCE CONSTANT IN AX ;WRITE DOT
	CMP JLE JMP	BP,BX CASE1 CASE2	;DELTA X LTE DELTA Y ;DELTA X GT DELTA Y
CASE1:	CMP JNE MOV	[DIR],1 CASE3 CX,AX	NEGATIVE Y
LP1:	DEC JS INC ADD CMP JA SUB INC	CX DONEL1 DI DX, BP AX, DX SKP1 DX, AX SI	
SKP1:	CALL JMP	POINT SHORT LP1	;WRITE DOT
DONEL1: CASE3: LP3:	RET	CX,AX CX DONEL3 DI DX,BP AX,DX SKP3 DX,AX SI	
SKP3:	CALL JMP	POINT SHORT LP3	;WRITE DOT

DONEL3:			
CASE2:	CMP	[DIR],1	
	JNE	CASE4	;NEGATIVE Y
	MOV	CX,BP	
LP2:	DEC	CX	
	JS	DONEL2	
	INC	SI	
	ADD CMP	DX,AX	
	JA	BP,DX SKP2	
	SUB	DX,BP	
	INC	DI	
SKP2:	CALL	POINT	WRITE DOT
UNIZ.	JMP	SHORT LP2	, WRITE DOT
DONEL2:		bliokt BLE	
CASE4:	MOV	CX,BP	
LP4:	DEC	CX	
	JS	DONEL4	
	INC	SI	
	ADD	DX,AX	
	CMP	BP, DX	
	JA	SKP4	
	SUB	DX,BP	
	DEC	DI	
SKP4:	CALL	POINT	;WRITE DOT
	JMP	SHORT LP4	
DONEL4:	RET		
LINE	ENDP		
PRINT	PROC		;DISPLAY TO SCREEN
	PUSH	AX	
	MOV	АН,9	; PRINT STRING FUNCTION
	INT	21H	;DOS REQUEST
	POP	AX	
DDTNM	RET		
PRINT CSEG	ENDP ENDS		
CDEG	ENDS	•	
	LND		

### Chapter 13 KEYBOARD HANDLING

As we have seen in Chapter 6, the DOS keyboard input routines are functionally fairly rich. For this reason, there is not the same need to escape to BIOS calls as there is—for example—in screen handling. There are three situations, however, in which the use of the BIOS keyboard functions is desirable.

The first, of course, is because DOS is not re-entrant. Any routine such as an interrupt handler which might gain control during a DOS function call cannot itself issue DOS function calls. Secondly, there are times when a program would like to know what the current keyboard state is, prior to any keys being pressed. And finally, there are a few special cases in which the program would like to know which physical key has been pressed, as compared to the ASCII character associated with it.

All of these functions are possible with interrupt 16H, the BIOS keyboard function call. If this interrupt is issued with 0 in AH, the call will return the scan code of the next key pressed (or currently at the head of the type-ahead buffer) in AH, and the ASCII equivalent in AL. The scan code is simply the number of the physical key activated, as shown in Figure 13.1. No two keys have the same scan code, even if they translate to the same ASCII value. Use of scan codes can, for example, distinguish between the left shift key (42) and the right shift key (54). There are also keys which have no defined ASCII values, such as the 10 function keys. DOS handles these as extended ASCII characters, returning zero on the first call, and the scan code on the next call. With the BIOS call, only one call is required. AL in such cases will be set to zero, but the true scan code will be present in AH.

If the interrupt is issued with AH = 1, then the result will be similar to the first case except that the routine will not wait for a key to be pressed if the buffer is empty. Instead, the zero flag will be set if the buffer is empty, and reset if a keypress is available. In the latter case, the scan code and ASCII values will be returned as before, but the character will not be removed from the buffer. This is similar to DOS function call 6, the direct console I/O request.

If AH = 3, then the interrupt will return the current state of the keyboard state indicators, as shown in Figure 13.2, in the AL register. The use of these flags, in conjunction with the keyboard scan codes, allows a program to define many more keyboard states than are recognized by the standard translate tables. Carried to the extreme, each physical key could be assigned up to 256 different meanings, based upon all possible combinations of the shift and shift lock keys.

Other than developing a Chinese word processor, the obvious use of working directly with scan codes is to customize the keyboard and put the various keys logically where we wish IBM had chosen to place them physically. The difficulty, of course, is that only those programs which we ourselves write can benefit from

59	60	I	2	3	4	5	6	7	8	٩	10	11	12	13	I 14	4	6	9	7	0
61	62	15	16	· 17	1	3 1	۹ ]	20	21	22	23	24	25	26	27	28	71	72	73	74
63	64	29	].	30	31	32	33	34	35	36	37	38	39	40	41	20	75	76	רר	
65	66	42	43	44	45	46	47	48	3 49	50	51	5	2 53	3	54	55	79	80	81	78
67	68	5	6		57				5	в	8	2	8	3						

Figure 13.1—Keyboard Scan Codes

Figure 13.2 - Keyboard State Indicators

Hex Code	Meaning
80 40 20 10 08 04 02	Insert State is Active Caps Lock State is Active Num Lock State is Active Scroll Lock State is Active Alt Key is Depressed Ctrl Key is Depressed Left Shift Key is Depressed
Ø1	Right Shift Key is Depressed

our own keyboard redesign, since only those programs will use our carefully crafted translate tables. To impose our standards upon commercial programs requires that we go a step further.

The PC's keyboard is actually an intelligent peripheral with its own microprocessor which interrupts the main system whenever a key is depressed or released. This invokes a BIOS interrupt handler which reads the scan code from the keyboard, and translates it in accordance with the current state of the various shift keys. We can steal that interrupt, if we choose, and perform our own interpretation. An example of this technique is shown in Figure 13.3. In this case, we have redefined the keyboard to a "non-typist" configuration. That is, when translation is active, the alphabetic keys are reordered into alphabetic sequence. All other keys are left untouched. Switching between the normal and the reconfigured keyboard is done by pressing and releasing the "Scroll Lock" key.

Since the program will be loaded as an extension of DOS, the segment register handling has been simplified by designing it to be a .COM program. Therefore, it must be run through the EXE2BIN utility after being assembled and linked. The program begins by jumping around the resident code to the initialization section. This section clears the screen, sets interrupt 9 to our own routine, issues a message that the routine has been loaded, and terminates specifying that the new interrupt routine and its associated translate table are to remain resident as an extension to DOS.

When a key is pressed or released, the keyboard microprocessor will interrupt the main microprocessor. Our routine will get control at label NEWKEY and issue an interrupt 16H to get the current keyboard state. If the Scroll Lock has not been toggled, then the routine will jump to the beginning of the ROM BIOS routine. If Scroll Lock *is* active, then the routine reads the keyboard to get the most recent scan code. The scan codes follow the layout in Figure 13.1 except that the high order bit is turned off when a key is depressed and on when the key is released. Also, if for some reason the computer has not been able to read the keyboard scan codes for a while and the keyboard buffer fills up, then the keyboard will signal this by passing a scan code of 255 to indicate that data has been lost.

The interrupt routine must check to see if the overrun scan code has been encountered. If so, it skips the translation step.

Otherwise, it establishes addressability to the translate table and translates the scan code to the new value. Since it doesn't make a lot of sense to have a single physical key issue a different scan code on break as it did on make, the break bit is saved in AH and recombined with AL after the translation has taken place. Finally, the routine jumps into the BIOS routine at a point following the keyboard read.

The technique illustrated here, of jumping into the middle of a ROM routine, is not recommended since it implies both a knowledge of internal ROM addresses and of the ROM routine's internal logic, both of which

#### 160 Charles A. Crayne and Dian Girard

are subject to change by IBM without notice. It has been used here only to keep the sample program free of code that is not relevant to the specific topic being discussed. The entry points given have been validated for the ROM currently being supplied with the PC XT and with the expansion unit for the original PC. An alternate entry point is given in the program comments for the ROM in the older PCs.

Figure 13.3 - Sample Keyboard Translate Program

PAGE TITLE PAGE		AMPLE KEYBOARD T	RANSLATION PROGRAM
;ESTABL:		SEGMENT FOR BIO	S ENTRY POINTS
BSEG	SEGMENT ASSUME	AT ØFØØØH CS:BSEG ØE987H	
BIOS:	NOP ORG	ØE996H	:E998 FOR ORIGINAL ROM
BIOS1: BSEG	NOP		
;ESTABL	сын соммо		ITIALIZATION CODE
COMSEG	SEGMENT ASSUME ORG		)E' ISEG,ES:COMSEG,SS:COMSEG
	JMP	INIT	;INITIALIZATION CODE
	ATE TABL		
; TABLE	DB DB DB DB	15,30,48,46,32,1 29,37,38,50,49,2 42,43,20,22,47,1 56,57,58,59,60,6	8,9,10,11,12,13,14 8,33,34,35,23,36,26,27,28 24,25,16,19,31,39,40,41 7,45,21,44,51,52,53,54,55 51,62,63,64,65,66,67,68 4,75,76,77,78,79,80,81,82,83
NEW KE	YBOARD II	NTERRUPT ROUTINE	
NEWKEY:	PUSH		;ALLOW INTERRUPTS
	TAIM	AH,2 16H	;GET SHIFT STATUS ;KEYBOARD BIOS CALL
	TEST	AL,16 XLAT	SCROLL LOCK IN EFFECT?
	JNZ POP	XLAT AX	;YES - WE MUST HANDLE ;CLEAN UP STACK

# THE SERIOUS ASSEMBLER

XLAT: ;SET UP	IN STACK TO PUSH PUSH PUSH PUSH PUSH	PTR BIOS AL,60H D MATCH BIOS EXPR BX CX DX SI DI DS	;ENTER BIOS ROUTINE ;READ KEYBOARD ECTATIONS
		ES AL,255	; OVERRUN SCAN CODE?
	JZ PUSH POP MOV	NOXLAT CS DS BX,OFFSET TABLE	;YES - DON'T TRANSLATE ;GET ADDRESSABILITY ;TO OUR DATA SEGMENT ;POINT TO TRANSLATE TABLE
	MOV AND XLAT	AH,AL AX,807FH TABLE AL,AH	;SAVE BREAK BIT IN AH ;AND CLEAR IT IN AL ;GET NEW SCAN CODE
• МАТСН	OR HIOS ADDI	AL,AH RESSING CONVENTIO	RESTORE BREAK BIT
NOXLAT:			;BIOS DATA AREA
	ASSUME CLD		;AS CURRENT DATA SEGMENT ;DROP DS ADDRESSABILITY ;BIOS EXPECTS THIS ;JUMP INTO BIOS ROUTINE
;;NON-RE			·
MSG1	DB DB DB	13,10,'Use the S 'Alternate Keybo	lation Routine Now Resident' Scroll Lock key to select the bard',13,10,'\$'
•	LIZATION	CODE	
; INIT:	MOV MOV INT MOV CALL	CLRSCN AH,25H AL,9 DX,OFFSET NEWKEY 21H DX,OFFSET MSG1 PRINT	;CLEAR THE SCREEN ;SET INTERRUPT VECTOR ;INTERRUPT NUMBER { ;NTERRUPT ADDRESS ;DOS SERVICE REQUEST ;INITIALIZATION MESSAGE ;DISPLAY MESSAGE
TERMIN	ATE BUT S	STAY RESIDENT	
DONE: START	MOV INT ENDP	DX,OFFSET MSG1 27H	;PAST RESIDENT CODE ;TERMINATE AND STAY RESIDENT
;; ;SUBROU	TINES		
CLRSCN CLRSCN CLRSCN PRINT PI	PROC PUSH MOV INT POP RET ENDP	АХ АХ,2 10Н АХ	;CLEAR SCREEN

.

	PUSH	AX
	PUSH	DX
	MOV	AH,9
	INT	21H
	POP	DX
	POP	AX
	RET	
PRINT	ENDP	
COMSEG	ENDS	
	END	START

## Chapter 14 DISK OPERATIONS

The DOS disk functions deal with logical files, located through directories which are also maintained by DOS. The file structure—how the individual sectors are grouped into files—is concealed from the programmer. In general, this is a good thing, but at times there is a need to see the disk as it really is. To do so, we make use of interrupt 13H, the BIOS disk driver, whose register conventions are illustrated in Figure 14.1.

Other than the drive number, which must be 0–3 for diskette and 80H or 81H for hard drives, these values are not range checked. This allows for the use of this interrupt with non-standard diskette formats, such as might be found on diskettes created on certain non-IBM systems or as part of some copy-protect schemes. If the operation is successful, the carry flag and the AH register are set to zero. If an error was detected, the carry flag is set to 1 and the AH register contains one of the error codes shown in Figure 14.2. In most cases, AL is set to the number of sectors actually read or written. It is critical to understand that no motor start delay is taken for a read operation. Therefore it is quite normal

#### Charles A. Crayne and Dian Girard

Figure 141—INT 13 Register Conventions

AH = Ø 1 2 3 4 5	Reset Diskette System Read Status of Last Operation into AL Read Consecutive Sectors Write Consecutive Sectors Verify Consecutive Sectors Format Track				
AL =	Number of sectors (maximum of one track)				
ES:BX =	Address of Buffer for Read or Write				
СН =	Track Number				
CL =	Sector Number				
DH =	Head Number				
DL =	Drive Number				

for the first read after a period of inactivity to return with a "not ready" error. The program should always allow at least three retrys before assuming that the error is permanent.

#### Figure 14.2—INT 13 Status Codes

8Ø	Time Out
40	Seek Operation Failed
20	Controller Chip Failed
10	Bad CRC on Read Operation
Ø9	Attempt to Cross 64K Physical Boundry
Ø8	DMA Overrun Condition
Ø4	Sector ID not Found
Ø3	Write Attempt to Protected Disk
Ø2	No Address Marks Found on Track
Ø1	Invalid Command Code

Reading or writing a sector using INT 13 is pretty straightforward, but deciding which sector to read and finding something useful to do with the data retreived

in this format can be a bit more complicated. To provide a practical example, the sample program for this chapter has been designed to read any sector from a diskette formatted in the standard way; display the sector contents on the screen in both ASCII and hex; allow the user to edit the data on the screen; and to rewrite the modified sector. For the sake of simplicity, some of the features that would make the program easier to use under certain circumstances have been left out. For example, the program is set up for diskettes formatted as double-sided, nine sectors per track. It will work fine on other formats, but requires a little bit more user activity. Such enhancements are left—as usual—as an exercise for the reader.

Use of the program is mostly explained by the menu screen, but there are a few tricks that require explanation. One can step through the target diskette sector by sector or track by track using the indicated commands. However, it is also possible to go directly to any track and sector desired. This is done by pressing the tab key. The cursor will then be moved successively to the various fields on the status line and new values can be typed directly into those fields. Note that the field labeled "status" is displayed only. It is not possible to tab to that field. After all of the desired fields have been changed, either continue tabbing until the cursor is back in the command field, or press the "home" key at any time to skip the remaining fields.

To edit the current sector, either in ASCII or hex, press the appropriate function key. The cursor will be placed in the upper left corner of the appropriate screen window. To change any field, just type over it. The cursor arrow keys will move the cursor to any character within the window, but will not allow movement outside of the window. Attempting to move the cursor below the last line of the window will terminate the edit and move the cursor back to the command field. Attempting to cross any other window boundary will simply have no effect. The edit can also be terminated by pressing the "home" key. At the completion of the edit, the program will update the other window to match what has been changed in the current window, and will return the cursor to the command field. The actual sector has not been changed at this point—only the buffer. Diskette update will only take place when the 'W' command is entered.

The program, after establishing addressability and initalizing variables, enters a logical loop at label LOOP reading single letter commands from the keyboard and executing them. Any input which is not a valid command simply causes a re-display of the main command menu. Most of the commands increment or decrement either the sector or track number and read the indicated sector. The actual disk operations are all performed through a common subroutine, DISKIO, located at the end of the program. This routine simply picks up the necessary parameters from the data segment variables, places them in the appropriate registers, and issues the BIOS call. No error checking is done at this point.

DISKIO is called from RSECT, which sets up the retry count and checks the return code. It also checks to make sure that the track number specified is valid, in order to protect the diskette's seek mechanism from attempting to overreach itself if a bad value is entered. On any error, RSECT decrements the retry count and retrys the operation until the count goes to zero. WSECT is the corresponding entry point to write a sector. It sets up the retry count and the write function code and then jumps into RSECT's comman logic.

The rest of the program is primarily concerned with screen and keyboard handling, ASCII and hex conver-

programming techniques can be learned by examining this code, but the majority of the system inferface calls used have already been described in previous chapters.

Figure 14.3—Disk Edit Utility Program

```
PAGE 60,132
title DISKEDIT - Sample Disk Utility Program
;Macro Definitions
DOSCALL MACRO FUNCT
                <FUNCT>
        TENB
        MOV
                AH, FUNCT
                                 ; DOS FUNCTION REQUESTED
        ENDIF
        INT
                 21H
                         ;REQUEST DOS SERVICE - FUNCTION IN (AH)
        ENDM
DEFINE STACK SEGMENT
        SEGMENT PARA STACK 'STACK'
STACK
        DB
                 64
                        DUP('STACK
                                       • )
STACK
        ENDS
; DEFINE DATA SEGMENT
DSEG
        SEGMENT PARA
                         PUBLIC
                                 'DATA'
DISK BASE AND ITS ASSOCIATED VARIABLES MUST BE FIRST
; IN THE DATA SEGMENT BECAUSE OF THE INDEXING TECHNIQUE
USED TO BUILD THE STATUS LINE AT THE BOTTOM OF THE SCREEN
DISK BASE
                 LABEL
                       BYTE
FUNC
        DB
                 ?
                                 ; FUNCTION CODE
;0 - RESET
;1 - STATUS
;2 - READ SECTORS
;3 - WRITE SECTORS
;4 - VERIFY SECTORS
5 - FORMAT TRACK
:6 - READ TRACK
;7 - READ ID
;8 - READ DELETED DATA
;9 - WRITE DELETED DATA
DRIVE
        DB
                 ?
                                  ;DRIVE NUMBER (Ø->3)
HEAD
        DB
                 ?
                                  ;HEAD NUMBER (Ø OR 1)
TRACK
        DB
                 ?
                                  ; TRACK NUMBER
SECTOR
                                  ; SECTOR NUMBER
        DB
                ?
NOSECTS DB
                ?
                                  ;NUMBER OF SECTORS
BUFSEG
       DW
                ?
                                 ; SEGMENT OF BUFFER AREA
BUFOFF
        DW
                ?
                                 ;OFFSET OF BUFFER AREA
                                  ; MAIN STATUS FROM NEC
STATUS
       DB
                Ø
        DB
CMDTBL
                27
        DW
                DONE
        DB
                Ø
        DW
                CNTRL
                         ; TAB CHAR
        DB
                9
        DW
                CMDIN
        DB
                'R'
        DW
                READ
        DB
                'W'
        DW
                WRITE
        DB
                'N'
        DW
                RDNXT
                'L'
        DB
```

DW	RDPRV
DB	'I'
DW	RNTRK
DB	'D'
DW DW	RLTRK
TBLEND DB DW	Ø Cmenu
CNTTBL DW	DISPCB, EDITHEX, EDITASC
CCRPOS DB	Ø ;CURSOR POSITION WITHIN FIELD
CLNPOS DW	7 ;CURRENT POSITION IN TABLE FOR INPUT
;FORMAT TABLE	
CLNTBLØ DB	6 ;# OF ENTRIES IN TABLE
DW	1800H,CMDMSG1
DB	
DW DW	1807H, DRIVE 1808H, CMDMSG8
DB	0
DW	1811H, HEAD
DW	1815H, CMDMSG2
DB	Ø
DW	181CH, TRACK
DW	181'FH, CMDMSG4
DB DW	Ø 1827H,SECTOR
DW	182BH, CMDMSG5
DB	2
DW	1833H, STATUS
DW	1842H, CMDMSG7
DB DW	3 184EH
APREFIX DW	Ø ;SAVE ADDRESS OF PSP
CMDMSG1 DB	'Drive:\$'
CMDMSG2 DB	'Track:\$'
CMDMSG4 DB	'Sector:\$'
CMDMSG5 DB CMDMSG7 DB	'Status:\$' 'Command:\$'
CMDMSG8 DB	'Head:\$'
MENUMSG DB	'DISK EDIT UTILITY', 13, 10, 10
DB	'COMMAND LIST',13,10,10
DB	' F1 - DISPLAY CURRENT BUFFER', 13, 10
DB	FZ - EDIT HEX DATA ON SCREEN ,13,10
DB	<ul> <li>F3 - EDIT ASCII DATA ON SCREEN', 13, 10</li> <li>D - DECREMENT PHYSICAL TRACK NUMBER', 13, 10</li> </ul>
DB	I - INCREMENT PHYSICAL TRACK NUMBER', 13, 10
DB	' L - DECREMENT PHYSICAL SECTOR NUMBER',13,10
DB	N - INCREMENT PHYSICAL SECTOR NUMBER', 13, 10
DB	R - READ CURRENT SECTOR', 13, 10
DB	W - WRITE CORRENT SECTOR ,15,10
DB DB	' Esc - RETURN TO DOS',13,10 '\$'
ADDRESS DW	Ø
SET DB	Ø
BLOCK DB	Ø
LINE DB	Ø
RETRY DB SCRVAL DB	Ø Ø ;BUFFER IS ON SCREEN IN <> Ø
DSPSTART DW	Ø ;DISPLAY OFFSET IN BUFFER
HEXTEL DE	0123456789ABCDEF'
BUFFER DB	8*512 DUP(?)
DSEG ENDS	MON TINKACH FUCH DAG
;ESTABLISH EN	TRY LINKAGE FROM DOS

# THE SERIOUS ASSEMBLER

CSEG	SEGMENT		LIC	CODE	e .				
START	PROC	FAR	LIC	CODI					
	ASSUME	CS:CSEG,DS:	DSEG,	ss:s1	TACK, ES	DSEG			
	MOV	AX, DSEG							
	MOV MOV	DS,AX			DOTHE	<b>ED BO</b>	DUD		
	MOV	APREFIX,ES ES,AX		; SAVE	POINT	ER TO	PSP		
	CALL	INIT							
L00P:	CALL	CMDLIN							
	CALL	CMD		-					
	MOV	TBLEND,AL BX,OFFSET C			JRE MATO		TABLE		
L00P1:	CMP	[BX],AL			FOUND?		INDED		
	JNZ	TRYNXT			NEXT E	NTRY			
	INC	ВХ		; POIN	T TO AI				
TRYNXT:	JMP INC	WORD PTR [B BX	xj		; EX	ECUTE	ROUTIN	E .	
INIMAI:	INC	BX							
	INC	ВХ							
	JMP	LOOP1		; TRY	NEXT EN	NTRY			
DONE:	CALL	CLRSCN							
	MOV PUSH	AX,APREFIX AX			RAM SEC			ር ጥ አ (	עי
	SUB	AX,AX		; FUI	KEIUKN	SEGHE	NI ON .	JIAC	- 1
	PUSH	AX		; PUT	RETURN	OFFSE	T ON ST	FACE	κ
	RET			;RETU	IRN TO I	00S			
START ;SUBROUT	ENDP								
INIT	PROC								
	MOV	DRIVE,Ø							
	MOV	HEAD,Ø							
	MOV	TRACK,Ø							
	MOV CALL	SECTOR,1 CLRBUF							
	CALL	MENU							
	RET								
INIT CMENU	ENDP								
CHENU	PROC CALL	MENU							
	JMP	LOOP							
CMENU	ENDP								
MENU	PROC CALL	CLRSCN							
	MOV	SCRVAL,Ø			;SHC	W NO	BUFFER	ON	SCREEN
	MOV	DX, OFFSET M	ENUMS	3					
MENU	JMP	WRTLN							
MENU CLRBUF	ENDP PROC								
00.001	MOV	AL,Ø							
	CLD								
	MOV	DI, OFFSET B							
	MOV PUSH	CX,200H ES		; LENG	TH OF H	SUFFER			
	PUSH	DS							
	POP	ES							
	REPNZ	STOSB							
	POP RET	ES							
CLRBUF	ENDP								
CLRSCN	PROC								
	MOV	AX,2		; CLEA	R SCREI	EN FUN	CTION		

# Charles A. Crayne and Dian Girard

	INT	10н	;VIDEO HANDLER
	RET		
CLRSCN	ENDP		
SETCSR	PROC PUSH	АХ	
	PUSH	вх	
	MOV	AH,2	;SET CURSOR
	MOV	ВН,0	; PAGE
	INT	10H	;VIDEO HANDLER
	POP	вх	,
	POP	AX	
	RET		
SETCSR	ENDP		
WRTLN	PROC		
	DOSCALL	9	WRITE LINE FUNCTION
	RET		
WRTLN	ENDP		
CRLF	PROC		
	MOV	DL,13	;CARRAGE RETURN
	DOSCALL		;WRITE SCREEN FUNCTION
	MOV DOSCALL	DL,1Ø	;LINE FEED
	RET		
CRLF	ENDP		
READ	PROC		
	CALL	CLRBUF	
.1	CALL	RSECT	
	CALL	DISP	
	JMP	LOOP	
READ	ENDP		
WRITE	PROC		;WRITE CURRENT BUFFER TO DISK
	CALL	WSECT	
	JMP	LOOP	
WSECT:	MOV	RETRY,5	
	MOV	FUNC,3 RSECT1	;WRITE SECTORS
WRITE	JMP ENDP	RSECII	
RSECT	PROC		;READ CURRENT SECTOR
Report	MOV	RETRY,5	;SET RETRY COUNT
	MOV	FUNC,2	;READ SECTOR CMD
RSECT1:		NOSECTS,1	,
	MOV	BUFOFF, OFFSET BU	JFFER
	MOV	BUFSEG, SEG BUFFE	
	CMP	TRACK,42	MAXIMUM PHYSICAL TRACK
	JC	RSECT2	;VALID PHYSICAL TRACK
	MOV	TRACK,39	;LIMIT TRACK TO VALID RANGE
RSECT2:		DISKIO	
	JNB		;IF GOOD RETURN
	DEC JNZ	RETRY RSECT1	. (TI) 12 - 3 (3 3 T ) -
RSECTX:		RECT	;TRY AGAIN
RSECT	ENDP		
DISP	PROC		
2.21	MOV	DX,Ø	
	CALL	SETCSR	
	MOV	AX, DSPSTART	
	MOV	ADDRESS, AX	
	MOV	LINE,16	
DISP1:	MOV	AX, ADDRESS	
	CALL	PRWORD	
	MOV	SET,2	

## THE SERIOUS ASSEMBLER

I

DISP2:	MOV	BLOCK,4	
	MOV	CL,2	
	CALL	PRBLANK	
DISP3:	MOV	CL,1	
	CALL	PRBLANK	
	MOV	BX, ADDRESS	
	CALL	PRMEM	
	ADD	ADDRESS,+4	
	DEC		· · · · · · · · · · · · · · · · · · ·
		BLOCK	
	JNZ	DISP3	
	DEC	SET	
	JNZ	DISP2	
	DEC	LINE	
	JNZ	DISP1	
	CALL	DISPASC	DISPLAY ASCII EQUIVALENTS
	MOV	SCRVAL,255	;SHOW BUFFER ON SCREEN
	RET		
DISP	ENDP		
DISPASC	PROC		
	MOV	DX,1000H	;CURSOR LOCATION
	CALL	SETCSR	,
	MOV	AX, DSPSTART	
	MOV	ADDRESS, AX	
	MOV	LINE,8	
DISPASC		210270	
DISPASE	MOV	AX, ADDRESS	
	CALL	PRWORD	
	MOV		
	CALL	CL,8 PRBLANK	
	MOV		
		BLOCK,64	
	MOV	BX, ADDRESS	
DISPASC		AL, BUFFER[BX]	
	CMP	AL,''	
	JL	DISPASC 3	
	CMP	AL,7EH	
	JBE	DISPASC4	
DISPASC		AL,'.'	
DISPASC		DL,AL	; CHARACTER TO WRITE
	DOSCALL	2	;DISPLAY OUTPUT
	INC	вх	
	DEC	BLOCK	
	JNZ	DISPASC2	
	MOV	ADDRESS, BX	
	CALL	CRLF	
	DEC	LINE	
	JNZ	DISPASC1	
	RET		
DISPASC	ENDP		
PRBLANK	PROC		
	MOV	DL,32	
	DOSCALL	2	;DISPLAY OUTPUT
	DEC	CL	
	JNZ	PRBLANK	
	RET		
PRBLANK			
CMD	PROC		
0.12	DOSCALL	8	;CONSOLE INPUT
	CMP	AL,40H	, combolid intoi
	JL	CMDX	
	AND	AL,ØDFH	CONVERT TO UPPER CASE
			CONVERT TO UPPER CADE
	MOV	DL,AL	

	PUSH	AX	
	DOSCALL		Y OUTPUT
	POP	AX	
CMDX:	RET		
CMD	ENDP		
CMDIN	PROC		COMMAND VARIABLES FROM KEYBOARD
	MOV	CLNPOS,Ø	
CMDIN1:	JMP INC	CMDIN2 CLNPOS	
CMDIN1: CMDIN2:			AN CURSON TO DESTRED FIELD
	DOSCALL	,	ON CURSOR TO DESIRED FIELD KEYBOARD INPUT
CHDIN5.	CMP	AL,9 ;TAB	KEIDOARD INFOI
	JZ		E TO NEXT FIELD
	CMP	AL,Ø	;SPECIAL CHAR?
	JNZ	CMDIN5	NO - CONTINUE TESTS
	DOSCALL	7	DIRECT KEYBOARD INPUT
	CMP	AL,71	HOME KEY
	JZ	CMDINX	;YES - RETURN TO COMMAND MODE
	CMP	AL,77	
	JNZ	CMDIN4	;NOT ->
	CMP	CCRPOS,Ø	;AT 1ST FIELD POS?
	JNZ	CMDIN1	;NO - TREAT AS TAB
	CALL	INCCSR	
	INC	CCRPOS	;SHOW POS IN FIELD
CMDIN4:	JMP	CMDIN3	; <-
CHDIN4:	JNZ	AL,75 CMDIN3	; <-
	CMP	CCRPOS,Ø	;AT 1ST POS?
	JZ	CMDIN3	YES - CAN NOT MOVE LEFT
	CALL	DECCSR	,
	DEC	CCRPOS	
	JMP	CMDIN3	
CMDIN5:		AL,'Ø'	
	JC	CMDIN3	;< 0
	CMP JC	AL,':' CMDIN6	;GOOD DIGIT - GO PUT ON SCREEN
	CMP	AL,'A'	, SOOD DIGIT - GO FOI ON SCREEN
	JC	CMDIN3	
	CMP	AL,'G'	
	JC	CMDIN6	;GOOD HEX CHAR
	SUB	AL,32	;CONVERT TO UPPER CASE
	CMP	AL,'A'	
	JC	CMDIN3	
	CMP	AL,'G'	
CMDING	JNC	CMDIN3	
CMDIN6:	CALL	WRTSCR INCCSR	
	INC	CCRPOS	
	CMP	CCRPOS, 2	
	JZ		NEXT FIELD
	JMP		XT KEYPRESS
CMDINX:	CALL	GETTBL	USE PROPER TABLE
CMDIX1:	MOV	DX,[BX+SI+5]	CURSOR POS
	CALL	SETCSR	
	MOV	AL,[BX+SI+4]	;CONTROL FLAGS
	AND	AL,2	
	JNZ	CMDIX2	;SKIP INPUT
	PUSH MOV	BX (BY CT 17)	OFFCER
	CALL	BX,[BX+SI+7] GFMSCR	;OFFSET ;GET VALUE FROM SCREEN
	MOV	DISK BASE[BX],A	
			,

# 172

	POP	вх	
CMDIX2:		BX,9	
CHDIAL.	LOOP	CMDIX1	
CHEROC	JMP	LOOP	
CMDPOS:		GETTBL	;USE PROPER TABLE
CMDPOØ:		BX,CLNPOS	
	CMP	CX,CLNPOS	
	JNZ	CMDP01	;VALID FIELD
	POP	AX	;KILL RETURN VECTOR
	JMP	CMDINX	
CMDPO1:	MOV	AX,9	;TABLE WIDTH
	MUL	BX	
	MOV	BX,AX	
	INC	BX	
	MOV	AL,[BX+SI+4]	; FLAGS
	AND	AL,2	, 1 21/00
	JZ	CMDP02	;VALID FIELD
	INC	CLNPOS	, VALID FIELD
	JMP	CMDPOØ	
CMDDO2.			
CMDP02:		DX,[BX+SI+5]	
	CALL	SETCSR	CHOR ME DESTRUCTION OF PERCE
	MOV	CCRPOS,Ø	;SHOW AT BEGINNING OF FIELD
	RET		
GFMSCR:		CHFSCR	GET CHARACTER AT CURRENT CURSOR POS
	MOV	DL,AL	;SAVE MS DIGIT
	CALL	INCCSR	;INCREMENT CURSOR
	CALL	CHFSCR	;GET NXT CHAR
	MOV	AH, DL	RESTORE MS DIGIT
	CALL	HEXFCH	
	RET		
INCCSR:	PUSH	AX	
	PUSH	BX	
	PUSH	CX	
	PUSH	DX	
	MOV	BX,Ø	; PAGE Ø
	MOV	AH,3	READ CURSOR POS
	INT	10H	, KEAD CORDON FOD
	MOV		SET CURSOR DOG
		AH,2	; SET CURSOR POS
	INC	DL	;BUMP COL
	CMP	DL,80	
	JNZ	INCCS1	;SAME LINE
	MOV	DL,Ø	
	INC	DH	
INCCS1:		1ØH	
	POP	DX	
	POP	сх	
	POP	BX	
	POP	AX	
	RET		
DECCSR:	PUSH	AX	
	PUSH	вх	
	PUSH	CX	
	PUSH	DX	
	MOV	BX,Ø	
	MOV	AH, 3	
	INT	10H	
	MOV	AH,2	
	DEC	DL	
	CMP	DL,255	
	JNZ	DECCS1	;SAME LINE
	MOV	DL,Ø	

DECCS1:	DEC INT POP POP POP POP RET	DH 1ØH DX CX BX AX				
CHFSCR:	MOV INT RET	АН,8 10Н				
WRTSCR:		AX BX CX BX,0 AH,10 CX,1 10H CX BX AX				
HEXFCH:	PUSH PUSH	ВХ СХ				
	MOV	BX,AX		;SAVE EN	TRY PARMS	
	MOV CALL	AL,AH HEXFCl		: CONVERT	TO HEX DIGIT	
	MOV	CX,4		-		
	SHL MOV	AX,CL BH,AL		; CONVERT	TO MS DIGIT	
	MOV	AL,BL				
	CALL ADD	HEXFC1 AL,BH		; COMBINE	INTO ONE BINARY VAL	UE
	POP	cx		•		
	POP RET	BX				
HEXFC1:	POP RET SUB	BX AL,'Ø'				
HEXFC1:	POP RET	BX AL,'Ø' AL,10				
	POP RET SUB CMP JC SUB	BX AL,'Ø'				
HEXFC2:	POP RET SUB CMP JC SUB RET	BX AL,'Ø' AL,1Ø HEXFC2				
	POP RET SUB CMP JC SUB	BX AL,'Ø' AL,1Ø HEXFC2				
HEXFC2: CMDIN	POP RET SUB CMP JC SUB RET ENDP PROC PUSH	BX AL,10 HEXFC2 AL,7 AX				
HEXFC2: CMDIN	POP RET SUB CMP JC SUB RET ENDP PROC PUSH XCHG	BX AL, 'Ø' AL, 1Ø HEXFC2 AL, 7 AX AL, AH				
HEXFC2: CMDIN	POP RET SUB CMP JC SUB RET ENDP PROC PUSH	BX AL,10 HEXFC2 AL,7 AX				
HEXFC2: CMDIN	POP RET SUB CMP JC SUB RET ENDP PROC PUSH XCHG CALL POP PUSH	BX AL, 'Ø' AL, 1Ø HEXFC2 AL, 7 AX AL, AH PRBYTE AX AX				
HEXFC2: CMDIN PRWORD	POP RET SUB JC SUB RET PROC PUSH XCHG CALL POP PUSH PUSH	BX AL, 'Ø' AL, 1Ø HEXFC2 AL, 7 AX AL, AH PRBYTE AX AX CX				
HEXFC2: CMDIN PRWORD	POP RET SUB CMP JC SUB RET ENDP PROC PUSH XCHG CALL POP PUSH	BX AL, 'Ø' AL, 1Ø HEXFC2 AL, 7 AX AL, AH PRBYTE AX AX				
HEXFC2: CMDIN PRWORD	POP RET SUB CMP JC SUB RET ENDP PROC PUSH XCHG CALL POP PUSH PUSH MOV ROR CALL	BX AL, 'Ø' AL, 1Ø HEXFC2 AL, 7 AX AL, AH PRBYTE AX AX CX CL, 4 AL, CL PRHEX				
HEXFC2: CMDIN PRWORD	POP RET SUB CMP JC SUB RET ENDP PROC PUSH XCHG CALL POP PUSH MOV ROR CALL POP	BX AL,'0' AL,10 HEXFC2 AL,7 AX AL,AH PRBYTE AX AX CX CL,4 AL,CL PRHEX CX				
HEXFC2: CMDIN PRWORD	POP RET SUB CMP JC SUB RET ENDP PROC PUSH XCHG CALL POP PUSH PUSH MOV ROR CALL	BX AL, 'Ø' AL, 1Ø HEXFC2 AL, 7 AX AL, AH PRBYTE AX AX CX CL, 4 AL, CL PRHEX				
HEXFC2: CMDIN PRWORD PRBYTE:	POP RET SUB CMP JC SUB RET ENDP PROC PUSH XCHG CALL POP PUSH MOV ROR CALL POP POP POP POP POP POP	BX AL, 'Ø' AL, 1Ø HEXFC2 AL, 7 AX AL, AH PRBYTE AX AX CX CL, 4 AL, CL PRHEX CX AL, CL PRHEX CX AX AL, ØFH BX				
HEXFC2: CMDIN PRWORD PRBYTE:	POP RET SUB CMP JC SUB RET ENDP PROC PUSH XCHG CALL POP PUSH MOV ROR CALL POP POP AND	BX AL, 'Ø' AL, 1Ø HEXFC2 AL, 7 AX AL, AH PRBYTE AX AX AX CX CL, 4 AL, CL PRHEX CX CL, 4 AL, CL PRHEX CX AX AL, ØFH	нехты			
HEXFC2: CMDIN PRWORD PRBYTE:	POP RET SUB CMP JC SUB RET ENDP PROC PUSH XCHG CALL POP PUSH MOV ROR CALL POP POP AND PUSH MOV XLAT POP	BX AL,'Ø' AL,1Ø HEXFC2 AL,7 AX AL,AH PRBYTE AX AX CX CL,4 AL,CL PRHEX CX CL,4 AL,CL PRHEX CX AL,0FH BX BX,OFFSET BX	нехты			
HEXFC2: CMDIN PRWORD PRBYTE:	POP RET SUB CMP JC SUB RET ENDP PROC PUSH XCHG CALL POP PUSH MOV ROR CALL POP POP AND PUSH MOV XLAT POP MOV	BX AL,'Ø' AL,1Ø HEXFC2 AL,7 AX AL,AH PRBYTE AX AX CX CX CX AX AL,CL PRHEX CX CX AL,0FH BX BX,OFFSET BX DL,AL	нехты		QUEDUT	
HEXFC2: CMDIN PRWORD PRBYTE:	POP RET SUB CMP JC SUB RET ENDP PROC PUSH XCHG CALL POP PUSH MOV ROR CALL POP POP AND PUSH MOV XLAT POP	BX AL,'Ø' AL,1Ø HEXFC2 AL,7 AX AL,AH PRBYTE AX AX CX CX CX AX AL,CL PRHEX CX CX AL,0FH BX BX,OFFSET BX DL,AL	нехты	, ;DISPLAY	OUTPUT	

PRWORD	ENDP		
CMDLIN	PROC	CLRCMD	CLEAR COMMAND LINE
	CALL		•
ONDU TI .	CALL	GETTBL	USE PROPER TABLE
CMDLI1:		DX,[BX+SI]	CURSOR POS
	CALL	SETCSR	
	MOV	DX,[BX+SI+2]	;LABEL
	CALL	WRTLN	CURCOR DOG
	MOV	DX,[BX+SI+5]	;CURSOR POS
	CALL	SETCSR	CER CONTROL ELACE
	MOV	AL,[BX+SI+4]	;GET CONTROL FLAGS
	AND	AL,1	;DON'T DISPLAY THIS FIELD
	JNZ	CMDLI2 BX	DON'T DISPLAT THIS FIELD
	PUSH MOV		
	MOV	BX,[BX+SI+7]	GET VALUE
	CALL	AL, DISK_BASE[BX PRBYTE	J JOET VALUE
	POP	BX	
CMDLI2:		BX,9	
CHDL12:	LOOP	CMDLI1	
	RET	CHEETT	
GETTBL:		SI, OFFSET CLNTB	LØ ; POINT TO FORMAT TABLE
02	MOV	BX,Ø	START OF TABLE
	MOV	CX,[BX+SI]	TABLE LENGTH
	INC	BX	POINT PAST LENGTH
	RET	DA	,
CLRCMD:		AX	
021101121	PUSH	BX	
	PUSH	CX	
	PUSH	DX	
	MOV	DX,1800H	
	CALL	SETCSR	
	MOV	AX,ØA2ØH	;WRITE BLANKS
	MOV	BX,Ø	PAGE
	MOV	CX,80	CHAR COUNT
	INT	1ØH	•
	POP	DX	
	POP	СХ	
	POP	вх	
	POP	AX	
	RET		
CMDLIN	ENDP		
PRMEM	PROC		
	CALL	PRMEMW	
	INC	BX	
DOMONIA	INC	BX WODD DED BUE	
PRMEMW:	MOV XCHG	AX,WORD PTR BUF AL,AH	FER[BA]
	JMP	PRWORD	
PRMEM	ENDP	FRICKD	
RDNXT	PROC		
RDNAI	INC	SECTOR	
	CMP	SECTOR, 10	; PAST LAST SECTOR?
	JNZ	RDNXTX	,
	MOV	SECTOR, 1	
	XOR	HEAD, 1	;SWITCH HEADS
	JMP	RNTRK	INCREMENT TO NEXT TRACK
RDNXTX:		READ	,
RDNXT	ENDP		
RDPRV	PROC		
	DEC	SECTOR	

\_ \_

	CMP JNZ	SECTOR,Ø RNTRKX	
	MOV	SECTOR,9	
	XOR	HEAD, 1	SWITCH HEADS
	JMP	RLTRK	DECREMENT TRACK AND REAL
RDPRV	ENDP		
RNTRK	PROC		
	INC	TRACK	
	CMP	TRACK,40	; PAST LAST TRACK
	JNZ	RNTRKX	;NO - GO READ
DNODWY.	MOV	TRACK,Ø	
RNTRKX: RNTRK	JMP ENDP	READ	
RLTRK	PROC		
	DEC	TRACK	
	CMP	TRACK, 255	
	JNZ	RLTRKX	
	MOV	TRACK, 39	
RLTRKX:	JMP	READ	
RLTRK	ENDP		
CNTRL	PROC	_	
	DOSCALL		; DIRECT INPUT REQUEST
	SUB	AL,59	;INDEX TO F1
	JC CMP	CNTRLX	HICHED THAN DEPINEDO
	JNC	AL,3 CNTRLX	;HIGHER THAN DEFINED? ;YES - IGNORE
	CBW	CNIKLA	; IES - IGNORE
	SHL	AX,1	
	MOV	BX,AX	
	JMP	CNTTBL[BX]	
CNTRLX:	JMP	LOOP	;FLUSH CONTROL CHARACTER
CNTRL	ENDP		
EDITHEX			
	CMP	SCRVAL,Ø	; BUFFER ON SCREEN
	JNZ CALL	EDITHØ DISP	;YES - DON'T REDRIVE ;DISPLAY CURRENT BUFFER
EDITHØ:		DX,7	UL OF HEX DISPLAY
	CALL	SETCSR	,00 01 101 0101 011
	MOV	CCRPOS,Ø	
	MOV	SET,Ø	
	MOV	BLOCK,Ø	
	MOV	LINE,Ø	
	MOV	ВΧ,Ø	
EDITHI:	DOSCALL		;CONSOLE INPUT
	CMP JC	AL,'Ø'	
	CMP	EDITH8 AL,':'	;CHECK FOR CONTROL CHARS
	JC	EDITH2	;GOOD NUMERIC DIGIT
	CMP	AL,'A'	, GOOD NUMERIC DIGIT
	JC	EDITH1	; INVALID
	CMP	AL,'G'	, \
	JC	EDITH2	;GOOD HEX DIGIT
	SUB	AL,32	;CONVERT TO UPPER CASE
	CMP	AL,'A'	
	JC	EDITH1	;INVALID
	CMP	AL,'G'	- TNUAL TO
PDIMUS	JNC	EDITH1	; INVALID
EDITH2:	CALL CALL	WRTSCR UPDBUF	;PUT ON SCREEN ;AND IN MEMORY
EDITH3:		CCRPOS	; AND IN MEMORY ;-> ENTRY
2011031	CMP	CCRPOS,8	, / Date:

EDITH4: 1	JNZ MOV INC	EDITH7 CCRPOS,Ø BLOCK	;UPDATE CURSOR ON SCREEN ;TAB ENTRY
(	CMP JNZ	BLOCK,4 EDITH7	
	MOV INC CMP	BLOCK,Ø SET SET,2	
	JNZ	EDITH7 SET,Ø	;NEW LINE ENTRY
Ċ	INC CMP JNZ	LINE LINE,16 EDITH7	
EDITH6: 0		DISPASC	;RETURN TO COMMAND MODE ENTRY
EDITH7: (	CALL JMP	EDHCSR EDITH1	;UPDATE CURSOR AND MEMORY POINTERS
EDITH8: 0			; TAB
EDITH9: (	JMP CMP	EDITH4 AL,13	; <cr></cr>
ċ	JNZ	EDITH10	
	MOV MOV	CCRPOS,Ø BLOCK,Ø	
	JMP	EDITH5	;NEW LINE
EDITH10:		AL,Ø	;CONTROL CODES
	JZ JMP	EDITH11 EDITH1	;GET NEXT CHARACTER
EDITH11:			;CONSOLE INPUT
	CMP	AL,71	; HOME KEY
	JZ CMP	EDITH6 AL,77	;GO TO COMMAND MODE ;->
	JNZ	EDITH12	
	JMP	EDITH3	; INCREMENT CURSOR
EDITH12:	CMP JNZ	AL,75 EDITH15	; <-
	CMP	LINE,Ø	
	JNZ	EDITH13	
	CMP JNZ	SET,Ø EDITH13	
-	CMP	BLOCK,Ø	
	JNZ	EDITH13	
	CMP JNZ	CCRPOS,Ø EDITH13	
	JMP	EDITHI	; ALREADY AT UL CORNER
EDITH13:		CCRPOS	
	JNS MOV	EDITH14 CCRPOS,7	
	DEC	BLOCK	
	JNS	EDITH14	
	MOV DEC	BLOCK, 3 SET	
	JNS	EDITH14	
	MOV	SET,1	
	DEC	LINE	UDDATE CURCOD
EDITH14: EDITH15:		EDITH7 AL,72	;UPDATE CURSOR ;UP ARROW
	JNZ	EDITH17	
	CMP	LINE,Ø	; ALREADY AT TOP?
	JNZ JMP	EDITH16 EDITH1	;NO - GO DECREMENT ;IGNORE REQUEST

EDITHI6: DEC LINE JMP EDITH7 ;UPDATE CURSOR AL,80 EDITH17: CMP ; DOWN ARROW? ;YES JΖ EDITH18 ; IGNORE ALL OTHERS JMP EDITH1 EDITH18: CMP LINE,15 ALREADY AT BOTTOM? JNZ EDITH19 ;NO - GO INCREMENT JMP RETURN TO COMMAND MODE EDITH6 EDITH19: INC LINE ;UPDATE CURSOR JMP EDITH7 ;UPDATE CURSOR AND MEMORY POINTERS EDHCSR: PUSH AΧ сх PUSH PUSH DX MOV CL,9 MOV AL, BLOCK MUL CL SET,Ø CMP JΖ EDHCS1 ADD AL,38 EDHCS1: ADD AL, CCRPOS ADD AL,7 MOV DL,AL MOV DH, LINE SETCSR CALL MOV CX,3 MOV AL, BLOCK CBW SHL AX,CL MOV BX,AX ;BLOCK\*8 MOV CL,64 AL, LINE MOV MUL CL ADD BX,AX ; + LINE\*64 CMP SET,Ø JZ EDHCS2 ADD BX,32 ; + SET\*32 EDHCS2: MOV AL, CCRPOS CBW ADD BX,AX ; + CCRPOS POP DX POP сх POP AΧ RET ;UPDATE BUFFER WITH HEX INPUT UPDBUF: PUSH AΧ CALL HEXFC1 ; CONVERT TO BINARY PUSH DX PUSH сх PUSH ВΧ MOV DL,AL SHR BX,1 ;TRUE BUFFER OFFSET MOV AL, BUFFER[BX] JNC UPDBU1 ;GO UPDATE MS NIBBLE AND AL,ØFØH ; ISOLATE MS NIBBLE ADD AL,DL UPDBU2 COMBINE WITH NEW DATA JMP UPDBU1: AND AL,ØFH ;ISOLATE LS NIBBLE MOV CL,4 ; MOVE INPUT TO MS NIBBLE SHL DL,CL ADD AL, DL ;COMBINE WITH OLD DATA

UPDBU2:	MOV POP POP	BUFFER[BX],AL BX CX	;UPDATE BUFFER
	POP POP	DX AX	
EDITHEX	RET		
EDITASC			;EDIT ASCII DISPLAY
	CMP	SCRVAL,Ø	BUFFER ON SCREEN?
	JNZ	EDITAØ	;YES - DON'T REDRIVE
	CALL	DISP	;ENSURE CURRENT DISPLAY
EDITAØ:	MOV CALL	DX,100CH SETCSR	;U L CORNER OF ASCII AREA
	MOV	LINE,Ø	
	MOV	BLOCK,Ø	
	MOV	BX,Ø	CONCOL E INDUM
EDITA1:	DOSCALL CMP	8 · AL,7FH	;CONSOLE INPUT
	JNC	EDITAL	
	CMP	AL,''	
	JL	EDITA6	
	MOV CALL	BUFFER[BX],AL WRTSCR	;PUT IN BUFFER ;AND ON SCREEN
EDITA2:	INC	BLOCK	; AND ON SCREEN
	INC	вх	
	CMP	BLOCK,64	
EDITA3:	JNZ MOV	EDITA5 AL,BLOCK	;SAME LINE ;CARRIAGE RETURN FUNCTION
EDITAS:	CBW	AL, BLOCK	CARRIAGE RETORN FUNCTION
	SUB	BX,AX	
	MOV	BLOCK,Ø	
	INC ADD	LINE	NEVE THE TH DUPPED
	CMP	BX,64 LINE,8	;NEXT LINE IN BUFFER ;END OF AREA?
	JNZ	EDITAS	NO - CONTINUE
	JMP	EDITAX	
EDITA5:	MOV ADD	DH,LINE DH,16	
	MOV	DL,BLOCK	
	ADD	DL,12	
	CALL	SETCSR EDITAl	;SET NEW CURSOR POSITION ;GET NEXT KEYPRESS
EDITA6:	JMP CMP	AL,13	CARRIAGE RETURN
	JZ	EDITA3	,
	CMP	AL,Ø	; CONTROL CHAR?
	JNZ DOSCALL	EDITAl 8	;IGNORE ANY OTHER INPUT ;CONSOLE INPUT
	CMP	AL,77	, condoll infor
	JZ	EDITA2	;->
	CMP	AL,75	; <-
	JNZ CMP	EDITA9 BLOCK,Ø	;BEGINNING OF LINE?
	JNZ	EDITAS	;NO - JUST DECREMENT
	CMP	LINE,Ø	; TOP OF SCREEN?
	JZ	EDITA1	;YES - IGNORE
	DEC MOV	LINE BLOCK,1	
EDITA8:		BX BX	
	DEC	BLOCK	
	JMP	EDITA5	;SET NEW CURSOR
EDITA9:	CMP	AL,71	;HOME KEY?

	JNZ	EDITA10	; NO
	JMP	EDITAX	
EDITA1Ø		AL,72	;UP?
	JNZ	EDITA12	
	CMP	LINE,Ø	;TOP OF SCREEN?
	JNZ	EDITAll	;NO
	JMP	EDITAl	; IGNORE
EDITAll		BX,64	
	DEC	LINE	
	JMP	EDITA5	
EDITA12		AL,80	; DOWN?
	JZ	EDITA13	;YES
	JMP	EDITAl	
EDITA13		LINE,7 ;LAST	LINE?
	JNZ	EDITA14	
	JMP	EDITAX	
EDITA14		BX,64	
	INC	LINE	
	JMP	EDITA5	
EDITAX:		DISP	
	JMP	LOOP	
EDITASC			
DISPCB	PROC		; DISPLAY CURRENT BUFFER
	CALL	CLRSCN	
	CALL	DISP	
	JMP	LOOP	
DISPCB	ENDP		
DISKIO	PROC		
	PUSH	ES	
	PUSH	BX	
	PUSH	CX	
	PUSH	DX	
	MOV	AH, FUNC	;DISK COMMAND
	MOV MOV	AL, NOSECTS	;NUMBER OF SECTORS
	MOV	CL,SECTOR CH,TRACK	
	MOV	DL, DRIVE	
	MOV	DH, HEAD	
	MOV	BX,BUFOFF	BUFFER OFFSET
	MOV	ES, BUFSEG	BUFFER SEGMENT
	INT	13H	DISK BIOS CALL
	MOV	STATUS, AH	SAVE RETURNED STATUS
	POP	DX	SAVE RETORNED STATUS
	POP	CX	
	POP	вх	
	POP	ES	
	RET		
DISKIO	ENDP		
CSEG	ENDS		
	END	START	

# Part IV

## Programming the Silicon

#### Chapter 15 DIRECT SCREEN HANDLING

In prior chapters, we have treated the display screen in the same way as any other input/output device. However, both the IBM Monochrome Display Adapter and the IBM Color/Graphics adapter differ from all of the other PC I/O devices in that they each use a technique called "memory-mapped video." This means that the video generation circuitry scans a display buffer which is also addressable by the microprocessor. It is not necessary to use either DOS function calls or BIOS interrupt calls to update the video screen. Instead, the programmer can simply move the character to be displayed to the proper position in the display buffer.

The IBM Monochrome Display Adapter contains a display buffer of 4096 bytes located physically on the adapter board and addressed at the fixed address range of B8000H to B0FFFH. The Color/Graphics adapter, because of the additional information necessary to do all-points-addressable graphics, contains 16K bytes in the range B8000H to BBFFFH. This range can be used as 8 pages of  $40 \times 25$  characters, 4 pages of  $80 \times 25$  characters, or as a single graphics page.

In all cases, half of the memory locations are used to contain the characters to be displayed, and the other half are used for the associated attribute bytes. (The format of an attribute byte is discussed in Chapter 11.) Each attribute byte immediately follows its associated character in the display buffer. This organization strongly influences the preferred programming style. For example, if we want to move a character string directly to the screen using a REP MOVSB instruction, then we would have to build the string with the attribute characters already interleaved with the characters. On the other hand, a coding sequence like that shown in Figure 15.1 will automatically insert a constant attribute byte into the character string as it is moved, because the LODSB instruction will get the next character into the AL register without disturbing the contents of AH, while the STOSW instruction stores both AL and AH and increments DI accordingly.

#### Figure 15.1—Direct String to Screen Example

;DS:SI -> ;ES:DI ->	on entry: Character String Termina Starting Position in Scr ribute Character.	
LOOP:	LODSB CMP AL,Ø JZ EXIT STOSW JMP LOOP	;GET NEXT CHARACTER IN AL ;END OF STRING? ;YES - RETURN TO CALLER ;STORE CHARACTER & ATTRIBUTE
EXIT:	JMP LOOP RET	;GO DO NEXT ;RETURN TO CALLER

The other interesting aspect of memory-mapped video is that the buffer memory can be read as well as written. This not only allows the programmer to determine the current contents of a screen location, but also to save that information while a help screen, menu, or other information is temporarily displayed. The screen can then be restored to its prior state without having to recreate the information. We make use of this capability in this chapter's sample program, SUBLIM (Figure 15.2). SUBLIM is a program which will periodically place a short message on the screen, leave it displayed for a specified time, and then restore the original screen contents. Depending upon the parameters specified, the result can be anything between a barely noticeable flicker to the equivalent of a flashing neon sign.

SUBLIM has been designed to accept all of its input parameters on the command line so that it can be placed in a batch file, like AUTOEXEC.BAT. In addition, multiple invocations of the program— with the same or different parameters—are automatically chained together. This allows some very interesting combinations of effects.

SUBLIM is invoked by specifying the row and column where the message is to be displayed, the length of time the message is to remain on the screen, and the length of time until the message will be redisplayed. For convenience in specifying short time intervals, all time parameters are in internal clock pulses. These pulses occur about 18.2 times per second, so a specification of 91 would provide about a 5-second interval. Default values are provided for all numeric parameters. The specification:

SUBLIM 13,37,3,91, Hi There

would result in the message "Hi There" being displayed approximately in the middle of the screen every five seconds, and remaining there for about one-sixth of a second.

The program begins by skipping over the code which will remain resident to the initialization code at label INIT. After initializing the screen to  $80 \times 25$  mode, it then issues a BIOS call to determine if the current screen is the Monochrome adapter or the Color/Graphics adapter. Based on the result, it stores the correct segment address for that adapter at the label SCRSEG. The next task is to interpret the input parameters. The numeric parameters are parsed and converted from decimal to binary by the subroutine GPARM. Each invocation of GPARM returns the next parameter from the input string, assuming that the DS:SI register pair is unchanged between calls. Any character lower than a numeric is accepted as a delimiter, so the user can invoke the program with the parameters separated by spaces, commas, periods, etc. Any field beginning with an alphabetic character is assumed to be the start of the desired message, the defaults are taken for all remaining numeric variables.

The program then gets and saves the current value of the 1CH interrupt vector. This vector is invoked by the system timer interrupt routine after it updates the system clock and checks for system timeout conditions. This current value is then replaced by the address of NEWTIM, which will thereafter get control on every timer interrupt. Finally, the initialization code writes a message to the screen indicating successful execution, and returns to DOS with a terminate and stay resident request. The DS:DX register pair for this request is set so that only the interrupt handling code will remain resident. The initialization code will be released by DOS.

From this point on, the user can run any other DOSbased program at will. However, about every 55 milliseconds, NEWTIM will obtain control of the system. Each time that occurs, it will decrement a counter—NXTON if it is waiting for the right time to display a message, or NXTOFF if a message is currently on the screen.

In either case, if the counter does not become zero, then the routine exits by jumping to the address of the previous interrupt handler. This not only is a goodneighbor policy to any other program which may be monitoring timer interrupts, but allows this program to be multipally invoked.

If NXTON goes to zero, we load DS with the proper

segment address from SCRSEG and SI from the calculated screen offset in SADDR. The ES:DI pair are set to the address of MSGAREA. The length of the message is loaded from MSGLEN to CX. A REP MOVSB instruction then moves the current contents of the screen to the save area. (Note that since we are working with both characters and attribute bytes, all lengths and line widths throughout the program are twice what one normally thinks of.) Following the save, the register sets are reversed, and the message (with its attribute bytes) is moved to the screen. The program then initializes NXTOFF by setting it equal to ONTIM, and exits as before.

When NXTOFF goes to zero, the program restores the original screen contents, sets NXTON to OFFTIM and exits. This process cycles forever. The only way to shut off SUBLIM is to re-IPL the system.

PAGE ;	SUBLIM		sage Display Program
;	CECMENT		
COMSEG		PARA PUBLIC 'CO CS:COMSEG 80H	UL' ;UNFORMATTED PARAMETER AREA
PARMLEN	DB	Ø	LENGTH OF PARAMETER STRING
PARMS	DB	127 DUP (?)	PARAMETER STRING
	ORG	100н	,
START	PROC	FAR	
	JMP	INIT	; INITIALIZATION CODE
,			
	NT DATA		
OLDTIM			;OLD TIMER INTERRUPT VECTOR
OFFTIM		••	;TIME BETWEEN MESSAGES
ONTIM		1	;TIME MESSAGE DISPLAYED
NXTOFF	_	Ø	;TIME TO NEXT RESTORE
NXTON		90	;TIME TO NEXT SAVE
MSGLEN		80	;LENGTH TO DISPLAY
	DW	186Ø	;SCREEN STARTING POSITION
	DB	10	; CONSTANT FOR DECIMAL ROUTINE
SCRSEG		Ø	;SCREEN SEGMENT
MSGAREA			;MESSAGE TO DISPLAY
MSGSAVE	DW	80 DUP (?)	;SAVED SCREEN IMAGE

Figure 15.2—Subliminal Message Display Program

NEWTIM:			
	PUSH	DS	;ALLOW INTERRUPTS
	PUSH	ES	
	PUSH	SI	
		DI	
	PUSH	CX	
	PUSH	CS	
	POP	DS	;ESTABLISH ADDRESSABILITY TO D
	ASSUME	DS:COMSEG	;KEEP ASSEMBLER INFORMED
	CMP	NXTOFF,Ø	;TIME TO NEXT RESTORE
	JZ		NO ACTION IF ALREADY ZERO
	DEC	NXTOFF	;COUNT DOWN FIELD
	JNZ	EXIT	;EXIT IF TIME STILL REMAINS
	MOV	ES, SCRSEG	ES NOW POINTS TO SCREEN BUFFE
	MOV MOV	SI, OFFSET MSGSA	STARTING POSITION ON SCREEN
	MOV	CX, MSGLEN	MESSAGE LENGTH
	REP MOV		RESTORE SCREEN CONTENTS
	MOV	CX,OFFTIM	TIME BETWEEN MESSAGES
	MOV		TIME TO NEXT MESSAGE
	JMP	EXIT	;EXIT ROUTINE
ISTON:	CMP	NXTON,Ø	; MESSAGE PENDING?
	JZ	EXIT	;NO - EXIT ROUTINE
	DEC	NXTON	;COUNT DOWN FIELD
	JNZ	EXIT SI,SADDR	;EXIT IF TIME STILL REMAINS
	MOV	SI,SADDR	STARTING POSITION ON SCREEN
	MOV MOV	DI, OFFSET MSGSA	;MESSAGE LENGTH
	PUSH	CX,MSGLEN DS	MESSAGE LENGTH
	PUSH	DS	
	POP	ES	ES NOW POINTS TO COMSEG
	MOV	DS,SCRSEG	DS NOW POINTS TO SCREEN
	REP MOV	SB	;SAVE SCREEN CONTENTS
	POP	DS	; RESTORE DATA SEGMENT
	MOV	ES, SCRSEG	;DESTINATION SEGMENT
	MOV	SI, OFFSET MSGAR	
	MOV MOV	DI,SADDR CX,MSGLEN	SCREEN STARTING POSITION
	REP MOV		MOVE MESSAGE TO SCREEN
	MOV	CX,ONTIM	TIME MESSAGE DISPLAYED
	MOV	NXTOFF,CX	TIME TO NEXT RESTORE
EXIT:	POP	CX	,
	POP	DI	
	POP	SI	
	POP	ES	
		DS	
	ASSUME	•	OTHING,SS:NOTHING
	JMP	OLDTIM	;GO TO NEXT INTERRUPT HANDLER
NON-RES	SIDENT D	АТА	
	DB	'Subliminal Mes	sage Routine Now Resident'
	DB	13,10,'\$'	
;			
INITIA	LIZATION		

; DETERM	INE BUFF	FER LOCATION	
	MOV	AH,15	;CURRENT VIDEO STATE
	INT	1ØH	VIDEO BIOS CALL
	MOV	вх,0в000н	;ASSUME MONOCHROME
	CMP	AL,7	; IS IT?
	JZ	SETBUF	YOU BET!
	MOV	BX,0B800H SCRSEG,BX METERS - ROW.COL	;NOPE - MUST BE COLOR
SETBUF:		SCRSEG, BX	;SAVE SCREEN SEGMENT
;GET SE			
		PARMLEN,Ø	CHECK FOR PARMS
	JZ MOV	PARMX	;NO PARMS PASSED ;POINT TO PARAMETER STRING
	MOV	DI,OFFSET MSGAR	
	CALL	GPARM	GET STARTING ROW
	CMP	AX,Ø	;SPECIFIED?
	JZ	PARM1	;NO - USE DEFAULT
	DEC		CORRECT FOR ORIGIN
	MOV	BL,160	COLUMNS PER ROW
	MUL	BL	OFFSET OF CHOSEN ROW
	MOV	BX,AX	SAVE ROW
	CALL		GET STARTING COLUMN
	CMP	AX,Ø	; SPECIFIED?
	JZ	<b>D D M A</b>	
	DEC	AX	CORRECT FOR ORIGIN
	SHL	AX,1 BX,AX SADDR,BX GPARM	;NO - TREAT AS 1 ;CORRECT FOR ORIGIN ;ALLOW FOR ATTRIBUTES ;ADD COLUMN POSITION ;STARTING SCREEN POSITION :GET ON TIME
	ADD	BX,AX	;ADD COLUMN POSITION
PARMØ:	MOV	SADDR, BX	STARTING SCREEN POSITION
PARM1:	CALL	GEARA	;STARTING SCREEN POSITION ;GET ON TIME ;SUPPLIED? ;NO - USE DEFAULT
	CMP	AX,Ø PARM2	;SUPPLIED?
	JZ		
	MOV	ONTIM, AX GPARM	;TIME MESSAGE DISPLAYED ;GET OFF TIME ;SUPPLIED? ;NO - USE DEFAULT ;TIME BETWEEN MESSAGES ;TIME TO FIRST MESSAGE
PARM2:	CALL	GPARM	GET OFF TIME
	CMP JZ	AX,Ø PARM3	NO - USE DEFAULT
	MOV	OFFTIM AY	TIME BETWEEN MESSAGES
	MOV	OFFTIM, AX NXTON, AX	TIME TO FIRST MESSAGE
PARM3:	LODSB		GET MESSAGE CHARACTER
	CMP	AL,13	CARRIAGE RETURN?
	JZ	PARMX	DONE
	STOSB		PUT CHAR IN MESSAGE AREA
	INC	DI	SKIP ATTRIBUTE CHARACTER
	ADD	MSGLEN,2 PARM3	;COUNT CHAR AND ATTRIBUTE
	JMP	PARM 3	;GO DO IT AGAIN
		INTERRUPT VECTOR	
PARMX:		AH,35H	;GET INTERRUPT VECTOR ;INTERRUPT NUMBER
		AL,1CH	; INTERRUPT NUMBER
	INT MOV	21H OLDTIM,BX OLDTIM+2,ES	;DOS SERVICE CALL
	MOV	OLDIIM, DA	CECMENT
	MOV	0LD11M+2,E5	; SEGMEN 1
		INTERRUPT VECTOR	
;			
	MOV		
	MOV	AL, 1CH	;SET INTERRUPT VECTOR ;INTERRUPT NUMBER
	MOV	DX,OFFSET NEWTI	M ;NEW INTERRUPT ADDRESS
	INT	21H	; DOS SERVICE REQUEST
;			
;ISSUE	INITIALI	ZATION MESSAGE	
;			
			; INITIALIZATION MESSAGE
	CALL	PRINT	;DISPLAY MESSAGE

DONE:			1 ; PAST RESIDENT CODE
START	INT ENDP	27H	;TERMINATE AND STAY RESIDEN
;			
SUBROU	TINES		
CLRSCN	PROC		;CLEAR SCREEN
	PUSH	AX	
	MOV	AX,2	
	INT POP	10H AX	
	RET	AA A	
CLRSCN	ENDP		
PRINT P	ROC		
	PUSH	AX	
	PUSH	DX	
	MOV	AH,9	
	INT POP	21H DX	
	POP	AX	
	RET	AA.	
PRINT	ENDP		
GPARM	PROC		GET NUMERIC PARAMETER
	LODSB		;GET CHARACTER
	CMP	AL,	; LEADING BLANK?
	JZ	GPARM	YES - IGNORE BELOW DECIMAL RANGE?
	CMP JNC	AL,'Ø' GPARM1	; NO - CONTINUE
	CMP	AL,13	END OF INPUT?
	JNZ	GPARMØ	NO PROBLEM
	DEC	SI	IN CASE CALLED AGAIN
GPARMØ:	XOR RET	AX,AX	;RETURN ZERO
GPARM1:		AL,'A'	;ALPHABETIC?
	JC	GPARM2	; NO PROBLEM
	DEC JMP	SI GPARMØ	;FOR STRING MOVE ;RETURN ZERO
GPARM2:		BX	, KETOKA ZENO
	PUSH	CX	
	PUSH	DX	
	XOR	BX,BX	;INITIAL VALUE
GPARM3:		AL,'Ø'	;CONVERT TO BINARY
	JC	GPARMX	;NOT DECIMAL
	CMP	AL,10	NOT DECIMAL
	JNC CBW	GPARMX	;NOT DECIMAL ;CONVERT TO WORD
GPARM4:		CX,AX	SAVE DIGIT
	MOV	AX,BX	FORMER VALUE
	MUL	CON1Ø	TIMES 10
	MOV	BX,AX	;SAVE RESULT
	ADD	BX,CX	;ADD PREVIOUS VALUE
	LODSB		;GET NEXT DIGIT
	CMP	AL,13	;END OF LINE?
	JNZ	GPARM3	;NO - GO HANDLE DIGIT
GPARMX:	DEC	SI AX,BX	;FOR NEXT CALL ;RETURN RESULT
OF HIGHAS	POP	DX	, KETOKA KEDUET
	POP	CX	
	POP	BX	
	RET		
	REI		
GPARM COMSEG	ENDP		

#### Chapter 16 GRAPHIC PRIMITIVES

The graphic routines provided in Chapter 12 ultimately relied on the use of a BIOS call to place a point on the screen. This approach has two major limitations. First of all. it is slow. The calculations required to turn a row and column designation into a single bit position within the screen buffer are lengthy. When only a few points are being plotted the time lag is not noticeable; but painting a solid area, on the other hand, is painfully slow. The other problem is that the BIOS point routine works only if the Color/Graphics adapter is the currently active screen driver. Many users have both display adapters, and there are many applications where it would be useful to place graphics on the color display while concurrently displaying text on the monochrome display. Both of these limitations can be overcome by directly programming the CRT controller chip on the display adapter and plotting points by turning on bits in the display buffer.

The first step is to initialize the 6845 CRT controller chip. This chip is a very versatile unit which can be programmed in a variety of ways by loading different values into its 18 data registers. A summary of these registers is shown in Figure 16.1. Registers 0–3 control the horizontal timing, registers 4–9 control the vertical timing, registers 10–11 control the shape and location of the cursor, registers 12–13 control the displayed page, and registers 14–15 control the shape and location of the cursor as well as record the location on the screen detected by the light pen.

#### Figure 16.1—6845 Data Registers

Register	Description	Value
RØ	Horizontal Total Register	56
R1	Horizontal Displayed Register	4Ø
R2	Horizontal Sync Position Register	45
R3	Horizontal Sync Width Register	10
R4	Vertical Total Register	127
R5	Vertical Adjustment Register	6
R6	Vertical Displayed Register	100
R7	Vertical Sync Register	112
R8	Interlace Mode Register	2
R9	Maximum Scan Line Register	1
RlØ	Cursor Start Register	6 7
R11	Cursor End Register	
R12	Start Address Register - High Byte	ø
R13	Start Address Register - Low Byte	ø
R14	Cursor Location Register - High	ø
R15	Cursor Location Register - Low	Ø
R16	Light Pen Register - High	-
R17	Light Pen Register - Low	-

To fully understand the tricks that can be played with this device requires a technical knowledge of video display circuitry, but to duplicate the functions provided by BIOS requires only that the registers be loaded with the values given in the table. The only trick to this is that the data registers are not directly accessible. There are only two port addresses allocated to the

chip, as shown in Figure 16.2. One of these is the chip address register, the other the current data register. To load a data register, it is first necessary to put its address in the address register and then to place the data into the data register. This is done in the sample program at label INTG1, which loops until all of the registers have been loaded.

The 6845 knows nothing about color, intensity, or various other control functions of the adapter card. This information is provided through a set of I/O port addresses as shown in Figure 16.2

Port Address	Register Function
3DØH	6845 Address Register (Also 3D2, 3D4, 3D6)
3D1H	6845 Data Register (Also 3D3, 3D5, 3D7)
3D8H	Mode Control Register
3D9H	Color Select Register
3DAH	Status Register
3DBH	Clear Light Pen Latch
3DCH	Pre-set Light Pen Latch

Figure 16.2—Color/Graphics I/O Ports

The mode control port controls the choices of character mode versus graphics, and color versus black and white. The color select register determines the choice of color palettes, and the selection of the background color and intensity. The status register contains bits that determine the status of the light pen and also when horizontal and vertical retrace operations are taking place. This latter information can be used to update the screen without causing the "green lightning" which is often seen during direct memory update operations.

Once initialization is complete, the remaining task is to place dots on the screen by turning on the appropriate bits in the display buffer. This is a little trickier in graphics mode than it was for character displays, which explains why plotting points via the BIOS point routine is a bit slow. The display buffer is divided into two halves. The first half controls the even scan lines, and the second half controls the odd scan lines. This is caused by the nature of the interleafing circuitry in the video monitor. This also explains why, when you do a BLOAD of a screen image from a BASIC program, the picture first appears streaked and then fills in with a second pass through the screen.

The memory use is contiguous within each scan line, however, since it takes two bits to describe one of four colors for a dot, each byte of storage controls four consecutive dots. To turn on or off a specific dot requires locating the byte containing the significant bits, shifting the bits for the particular dot to the proper location in a register, and ORing, ANDing, or XORing the register into the screen memory.

When there are just a few dots to be plotted, speed is not so important, and the technique used by the BIOS routine is sufficient. When there are a set of related points to plot, it is much faster to work directly in memory locations and update all of the bits within one byte (where possible) than it is to go through the complete row and column to buffer offset calculations for each dot.

The sample program for this chapter (Figure 16.3) illustrates the techniques necessary for running both the Monochrome adapter and the Color/Graphics adapter concurrently, with different displays on each. The program begins by checking the current video mode. If the Monochrome adapter is currently in control, then the program assumes that a Color/Graphics adapter also exists and proceeds to initalize it. Otherwise, it assumes that only one monitor (the color display) exists. In that case it saves the current mode before re-

initializing it in graphics mode. In either case, initialization consists of looping through the table of register values and outputing them to the 6845 controller.

Next, the initialization routine (COLORON) calls SETBGD to set the palette colors (Green, Red, Yellow) and the background color (Black). These defaults can be changed by moving the new values to the variables PALCLR for the desired palette, the BGDCLR for the new background color, and then calling SETBGD again. Finally, COLORON sets the ES register to point to the beginning of the display refresh buffer on the Color/ Graphics adapter cards.

The subroutine DEMO issues a couple of functions to illustrate use of the graphic primitives, CIRCLE and LINE. CIRCLE uses the same algorithm used in Chapter 12. The only difference is that the POINT routine no longer calls the BIOS set point function. Instead, it performs its own row and column-to-buffer offset calculations. The one concession it makes to speed is that it uses a table look-up function to determine the starting location for the specified row instead of going through the check for odd or even line and adding 8192 to index into the second half of the buffer if the line address is odd.

LINE is also similar to the corresponding function in Chapter 12. However, it makes use of the fact that it intends to step across the screen one dot at a time to avoid recalculating the screen offset for every point. This is an example of making tradeoffs; in this case increased program space for faster execution time.

As DEMO steps through its graphic displays, it also writes messages to the Monochrome adapter to report on its progress. This is done using the BIOS windowing functions. The idea is that the Monochrome screen would have several windows in effect and that the rest of the screen should not be affected by these messages. The message routine checks the console flag and suppresses the message if the Monochrome display is not available.

When the final graphics figure is complete, or at the end of any figure if CTRL-break has been pressed, DEMO returns control to the main routine, which calls COLOR-OFF to return the color monitor to its original state if it was the only available display. If the Monochrome display was the primary monitor, then the Color/Graphics adapter is left initialized with the display intact.

Figure 16.3—Sample Program for Twin Monitors

PAGE 60,132 TITLE TWOMON - Direct Control of Graphics Adapter PAGE STACK SEGMENT .-----STACK SEGMENT PARA STACK 'STACK' 64 DUP ('STACK •) DB STACK ENDS PROGRAM PREFIX SEGMENT \_\_\_\_\_ PREFIX SEGMENT AT Ø ORG 8ØH 2 CMDCNT DB CMDLIN DB PREFIX ENDS 80 DUP(?) ;COMMAND LINE BUFFER ;-----DATA SEGMENT ; ------DSEG SEGMENT PARA PUBLIC 'DATA' PREFIX SEGMENT ADDRESS APREFIX DW Ø 4ØH ;SYSTEM SEGMENT ADDRESS SYSSEG DW ØВ800н 0 SCRSEG DW SCREEN SEGMENT ADDRESS ; DUAL CONSOLES IF NON-ZERO DUALC DB MODSAV ø ; ORIGINAL EQUIPMENT FLAGS DB DW BGDCLR ø ; BACKGROUND COLOR (BLACK) PALCLR ; PALETTE COLORS (G,R,Y) CURRENT COMBINED COLOR VALUES CURCOL DB ø COLOR FOR LINES Ø COLOR DW DW X 1 
 X2
 DW
 Ø

 Y1
 DW
 Ø

 Y2
 DW
 Ø

 ABORT
 DB
 Ø
 ø ; POINT VALUES ; POINT VALUES POINT VALUES CTL-BREAK FLAG ; --; GRAPHICS INITIALIZATION VALUES GRAFVAL DB 38 H ;HORIZONTAL TOTAL ;HORIZONTAL DISPLAYED DB 28 H DB ;H. SYNC POS 2DH ;H. SYNC WIDTH DB ØAH VERTICAL TOTAL ЪΒ 7FH Ø6H DB DB 64H VERTICAL DISPLAYED DB 7ØH ; V. SYNC POS DH Ø2H ; INTERLACE MODE

	DB DB DB DB	01H 06H 07H 00H	;MAX SCAN LINE ;CURSOR START ;CURSOR END ;START ADDRESS H.	
	DB	00H	START ADDRESS L.	
COLORV	DB	0		
CMODE RADIUS	DB DW	Ø Ø	;[1=XOR, Ø=OR]	
DENOM	DW	Ø		
NUMER	DW	Ø		
XX YY	DW DW	0 0		
XP	DW	Ø		
YP	DW	0		
NOTTER CLRMSK	DW DB	Ø ØØ1111116.11001	1116,111100116,111111006	
COLMSK	DB	00000000b,00000	000b,00000000b,0000000b ; Color Masks	
	DB DB			
	DB		3005,000010005,00000105 3005,000011005,000000115	
DIR	DW	Ø		
ADRTBL	EQU .XLIST	\$ ; Verti	cal Address Table	
ADR	=	ø		
	REPT	100		
	DW DW	ADR ADR+8192		
ADR	=	ADR+80		
	ENDM			
MSG1	.LIST DB	"Now let!s draw	a circle in the middle\$"	
MSG2	DB		green border.\$"	
MSG 3	DB		a red block \$"	
DSEG	ENDS			
;EXTRA	SEGMENT	FOR ACCESS TO SY		
;EXTRA	SEGMENT	FOR ACCESS TO SY AT 40H		
;EXTRA : ;	SEGMENT SEGMENT ORG LAG DW	FOR ACCESS TO SY		
;EXTRA : ; SYSTEM EQUIP_FI SYSTEM	SEGMENT SEGMENT ORG LAG DW ENDS	FOR ACCESS TO SY AT 40H 10H	STEM VARIABLES	
;EXTRA ; ; SYSTEM EQUIP FI SYSTEM ; ;CODE SI	SEGMENT SEGMENT ORG LAG DW ENDS EGMENT	FOR ACCESS TO SY: AT 40H 10H ?	STEM VARIABLES	
;EXTRA ; SYSTEM EQUIP FI SYSTEM ; CODE SI ;	SEGMENT SEGMENT ORG LAG DW ENDS EGMENT	FOR ACCESS TO SY AT 40H 10H ?	STEM VARIABLES ;INSTALLED HARDWARE	
;EXTRA ; ; SYSTEM EQUIP FI SYSTEM ; ;CODE SI	SEGMENT SEGMENT ORG LAG DW ENDS EGMENT	FOR ACCESS TO SY AT 40H 10H ? PARA PUBLIC 'COR R	STEM VARIABLES ;INSTALLED HARDWARE 	
;EXTRA ; SYSTEM EQUIP_F! SYSTEM ; ;CODE_S! ; CSEG START	SEGMENT ORG LAG DW ENDS EGMENT SEGMENT PROC FAI ASSUME	FOR ACCESS TO SY AT 40H 10H ? PARA PUBLIC 'COR R CS:CSEG,DS:DSEG	STEM VARIABLES ;INSTALLED HARDWARE	
;EXTRA ; SYSTEM EQUIP_F! SYSTEM ; ;CODE_S! ; CSEG START	SEGMENT ORG LAG DW ENDS EGMENT SEGMENT PROC FAI ASSUME	FOR ACCESS TO SY AT 40H 10H ? PARA PUBLIC 'CON R CS:CSEG,DS:DSEG AGE FROM DOS	STEM VARIABLES ;INSTALLED HARDWARE 	
;EXTRA ; SYSTEM EQUIP_F! SYSTEM ; ;CODE_S! ; CSEG START	SEGMENT SEGMENT ORG LAG DW ENDS EGMENT SEGMENT PROC FAI ASSUME ISH LINK. MOV MOV	FOR ACCESS TO SY AT 40H 10H ? PARA PUBLIC 'COL R CS:CSEG,DS:DSEG AGE FROM DOS AX,DSEG DS,AX	STEM VARIABLES ;INSTALLED HARDWARE 	
;EXTRA ; SYSTEM EQUIP_F! SYSTEM ; ;CODE_S! ; CSEG START	SEGMENT SEGMENT ORG LAG DW ENDS EGMENT SEGMENT PROC FAI ASSUME ISH LINK. MOV MOV	FOR ACCESS TO SY AT 40H 10H ? PARA PUBLIC 'COI R CS:CSEG,DS:DSEG AGE FROM DOS AX,DSEG	STEM VARIABLES ;INSTALLED HARDWARE 	
;EXTRA ; SYSTEM EQUIP F1 SYSTEM ; ;CODE S1 ; CSEG START ;ESTABL	SEGMENT SEGMENT ORG LAG DW ENDS EGMENT SEGMENT PROC FAI ASSUME ISH LINK. MOV MOV	FOR ACCESS TO SY AT 40H 10H ? PARA PUBLIC 'COI R CS:CSEG,DS:DSEG AGE FROM DOS AX,DSEG DS,AX APREFIX,ES	STEM VARIABLES ;INSTALLED HARDWARE 	
;EXTRA ; SYSTEM EQUIP F1 SYSTEM ; ;CODE S1 ; CSEG START ;ESTABL	SEGMENT SEGMENT ORG ENDS EMDS EGMENT SEGMENT PROC FAA ASSUME ISH LINK. MOV MOV CLD CTL-BRK MOV	FOR ACCESS TO SY AT 40H 10H ? PARA PUBLIC 'CON R CS:CSEG,DS:DSEG AGE FROM DOS AX,DSEG DS,AX APREFIX,ES VECTOR AX,2523H	STEM VARIABLES ;INSTALLED HARDWARE 	
;EXTRA ; SYSTEM EQUIP F1 SYSTEM ; ;CODE S1 ; CSEG START ;ESTABL	SEGMENT SEGMENT ORG LAG DW ENDS EGMENT PROC FA ASSUME ISH LINK. MOV MOV CLD CTL-BRK MOV MOV	FOR ACCESS TO SY AT 40H 10H ? PARA PUBLIC 'COI R CS:CSEG,DS:DSEG AGE FROM DOS AX,DSEG DS,AX APREFIX,ES VECTOR AX,2523H DX,OFFSET BRKADI	STEM VARIABLES ;INSTALLED HARDWARE 	
;EXTRA ; SYSTEM EQUIP F1 SYSTEM ; ;CODE S1 ; CSEG START ;ESTABL	SEGMENT SEGMENT ORG ENDS EMDS EGMENT SEGMENT PROC FAA ASSUME ISH LINK. MOV MOV CLD CTL-BRK MOV	FOR ACCESS TO SY AT 40H 10H ? PARA PUBLIC 'CON R CS:CSEG,DS:DSEG AGE FROM DOS AX,DSEG DS,AX APREFIX,ES VECTOR AX,2523H	STEM VARIABLES ;INSTALLED HARDWARE 	
;EXTRA ; SYSTEM EQUIP F1 SYSTEM ; ;CODE S1 ; CSEG START ;ESTABL	SEGMENT SEGMENT ORG LAG DW ENDS EGMENT SEGMENT PROC FA ASSUME ISH LINK. MOV MOV CLD CTL-BRK MOV WOV PUSH PUSH POP	FOR ACCESS TO SYN AT 40H 10H ? PARA PUBLIC 'COI R CS:CSEG,DS:DSEG AGE FROM DOS AX, DSEG DS,AX APREFIX,ES VECTOR AX,2523H DX,OFFSET BRKADI DS CS DS	STEM VARIABLES ;INSTALLED HARDWARE 	
;EXTRA ; SYSTEM EQUIP F1 SYSTEM ; ;CODE S1 ; CSEG START ;ESTABL	SEGMENT SEGMENT ORG ENDS EGMENT PROC FAI ASSUME ISH LINK. MOV MOV CLD CTL-BRK MOV MOV PUSH PUSH POP INT	FOR ACCESS TO SYN AT 40H 10H ? PARA PUBLIC 'CON R CS:CSEG,DS:DSEG AGE FROM DOS AX,DSEG DS,AX APREFIX,ES VECTOR AX,2523H DX,OFFSET BRKADD DS CS DS 21H	STEM VARIABLES ;INSTALLED HARDWARE 	
;EXTRA ; SYSTEM EQUIP FT SYSTEM ;CODE S; CODE S; START ;ESTABL ;SET UP	SEGMENT SEGMENT ORG LAG DW ENDS EGMENT SEGMENT PROC FA ASSUME ISH LINK. MOV MOV CLD CTL-BRK MOV MOV CLD CTL-BRK MOV PUSH PUSH PUSH POP INT POP N ENHANC	FOR ACCESS TO SY AT 40H 10H ? PARA PUBLIC 'COI R CS:CSEG,DS:DSEG AGE FROM DOS AX, DSEG DS,AX APREFIX,ES VECTOR AX,2523H DX,0FFSET BRKADI DS CS DS 21H DS ED CTL-BRK CHECK	STEM VARIABLES ;INSTALLED HARDWARE ;SS:STACK,ES:PREFIX ;SAVE PREFIX SEGMENT ;AUTO INCREMENT STRINGS ;SET VECTOR 23	
;EXTRA ; SYSTEM EQUIP FT SYSTEM ;CODE S; CODE S; START ;ESTABL ;SET UP	SEGMENT SEGMENT ORG ENDS EGMENT PROC FAI ASSUME ISH LINK. MOV CLD CTL-BRK MOV CLD CTL-BRK MOV PUSH PUSH PUSH POP INT POP N ENHANC MOV	FOR ACCESS TO SY AT 40H 10H ? PARA PUBLIC 'COIR CS:CSEG,DS:DSEG AGE FROM DOS AX,DSEG DS,AX APREFIX,ES VECTOR AX,2523H DX,OFFSET BRKADI DS CS 21H DS 21H DS ED CTL-BRK CHECK AX,3301H	STEM VARIABLES ;INSTALLED HARDWARE ;SS:STACK,ES:PREFIX ;SAVE PREFIX SEGMENT ;AUTO INCREMENT STRINGS ;SET VECTOR 23	
;EXTRA ; SYSTEM EQUIP FT SYSTEM ;CODE S; CODE S; START ;ESTABL ;SET UP	SEGMENT SEGMENT ORG LAG DW ENDS EGMENT SEGMENT PROC FA ASSUME ISH LINK. MOV MOV CLD CTL-BRK MOV MOV CLD CTL-BRK MOV PUSH PUSH PUSH POP INT POP N ENHANC	FOR ACCESS TO SY AT 40H 10H ? PARA PUBLIC 'COI R CS:CSEG,DS:DSEG AGE FROM DOS AX, DSEG DS,AX APREFIX,ES VECTOR AX,2523H DX,0FFSET BRKADI DS CS DS 21H DS ED CTL-BRK CHECK	STEM VARIABLES ;INSTALLED HARDWARE ;SS:STACK,ES:PREFIX ;SAVE PREFIX SEGMENT ;AUTO INCREMENT STRINGS ;SET VECTOR 23	
;EXTRA ; SYSTEM EQUIP FT SYSTEM ;CODE S; CODE S; START ;ESTABL ;SET UP	SEGMENT SEGMENT ORG ENDS EGMENT PROC FAA SSUME ISH LINK. MOV MOV CLD CTL-BRK MOV MOV CLD CTL-BRK MOV PUSH PUSH PUSH PUSH POP INT POP N ENHANC MOV INT CALL	FOR ACCESS TO SY AT 40H 10H ? PARA PUBLIC 'COI R CS:CSEG,DS:DSEG AGE FROM DOS AX,DSEG DS,AX APREFIX,ES VECTOR AX,2523H DX,OFFSET BRKADI DS CS 21H DS 21H DS ED CTL-BRK CHECK AX,3301H DL,1 21H CCOLORON	STEM VARIABLES ;INSTALLED HARDWARE 	
;EXTRA ; SYSTEM EQUIP FT SYSTEM ;CODE S; CODE S; START ;ESTABL ;SET UP	SEGMENT SEGMENT ORG LAG DW ENDS EGMENT PROC FA ASSUME ISH LINK. MOV MOV CLD CTL-BRK MOV MOV CLD CTL-BRK MOV MOV PUSH POP INT POP N ENHANC MOV NOV INT CALL CALL	FOR ACCESS TO SY AT 40H 10H ? PARA PUBLIC 'COI R CS:CSEG,DS:DSEG AGE FROM DOS AX,DSEG DS,AX APREFIX,ES VECTOR AX,2523H DX,OFFSET BRKADI DS 21H DS ED CTL-BRK CHECK AX,330H DL,1 21H COLORON DEMO	STEM VARIABLES ; INSTALLED HARDWARE ; INSTALLED HARDWARE ; STACK, ES: PREFIX ; SAVE PREFIX SEGMENT ; AUTO INCREMENT STRINGS ; SET VECTOR 23 ING ; INITIALIZE COLOR BOARD ; MAIN GRAPHICS ROUTINE	
;EXTRA : SYSTEM EQUIP FI SYSTEM ; CSEG START ;ESTABL ;SET UP ;SET UP	SEGMENT SEGMENT ORG LAG DW ENDS EGMENT SEGMENT PROC FA ASSUME ISH LINK. MOV MOV CLD CTL-BRK MOV MOV PUSH PUSH PUSH PUSH POP INT POP INT POP INT CALL CALL CALL CALL	FOR ACCESS TO SY AT 40H 10H ? PARA PUBLIC 'COI R CS:CSEG,DS:DSEG AGE FROM DOS AX,DSEG DS,AX APREFIX,ES VECTOR AX,2523H DX,OFFSET BRKADI DS CS 21H DS 21H DS ED CTL-BRK CHECK AX,3301H DL,1 21H CCOLORON	STEM VARIABLES ;INSTALLED HARDWARE 	
;EXTRA ; SYSTEM EQUIP FT SYSTEM ;CODE S; CODE S; START ;ESTABL ;SET UP	SEGMENT SEGMENT ORG LAG DW ENDS EGMENT EGMENT PROC FA ASSUME ISH LINK. MOV MOV CLD CTL-BRK MOV MOV CLD CTL-BRK MOV PUSH POP INT POP N ENHANC MOV NOV INT CALL CALL CALL TO DOS MOV	FOR ACCESS TO SY AT 40H 10H ? PARA PUBLIC 'COI R CS:CSEG,DS:DSEG AGE FROM DOS AX,DSEG DS,AX APREFIX,ES VECTOR AX,2523H DX,OFFSET BRKADI DS CS DS 21H DS ED CTL-BRK CHECK: AX,330H DL,1 21H COLORON DEMO COLOROFF AX,APREFIX	STEM VARIABLES ; INSTALLED HARDWARE ; INSTALLED HARDWARE ; STACK, ES: PREFIX ; SAVE PREFIX SEGMENT ; AUTO INCREMENT STRINGS ; SET VECTOR 23 ING ; INITIALIZE COLOR BOARD ; MAIN GRAPHICS ROUTINE	
;EXTRA : SYSTEM EQUIP FI SYSTEM ; CSEG START ;ESTABL ;SET UP ;SET UP	SEGMENT SEGMENT ORG ENDS EGMENT PROC FAA SSUME ISH LINK. MOV MOV CLD CTL-BRK MOV MOV CLD CTL-BRK MOV MOV PUSH PUSH PUSH POP INT POP N ENHANC MOV INT CALL CALL CALL CALL CALL CALL CALL CAL	FOR ACCESS TO SY AT 40H 10H ? PARA PUBLIC 'COL R CS:CSEG,DS:DSEG AGE FROM DOS AX,DSEG DS,AX APREFIX,ES VECTOR AX,2523H DX,OFFSET BRKADI DS CS 21H DS CS 21H DS CS CS CS CS CS CS CS CS CS CS CS CS CS	STEM VARIABLES ;INSTALLED HARDWARE 	

Charles A. Crayne and Dian Girard

SUB AX,AX PUSH AX RET START ENDP \_\_\_\_\_ : INITIALIZE COLOR GRAPHICS MODE \_\_\_\_\_ COLORON PROC ;GET CURRENT VIDEO MODE MOV AH,15 INT 1ØH ; MONO? CMP AL,7 ;NO GET AND SAVE EQUIPMENT SAVINGS JNZ CON 1 ES, SYSSEG ASSUME ES:SYSTEM MOV DI, EQUIP FLAG MODSAV, DI ;GET EQUIPMENT SETTINGS SAVE FOR EXIT MOV DUALC,255 ; DUAL CONSOLES? CMP ;YES - DO NOT SWITCH TO COLOR JZ CON2 SET HIRES COLOR MODE MOV AX.4 ; AND TELL BIOS INT 1ØH ; INITIALIZE GRAPHICS ADAPTER TO OUR SPECS CON2: MOV DI,Ø Сх,2000н MOV MOV AX,ØB8ØØH GRAPHICS BUFFER SEGMENT PUSH ES MOV ES,AX MOV AX,Ø STOSW ;CLEAR GRAPHICS SCREEN REP POP ES ;# OF REGS TO INIT MOV CX,14 GRAPHICS OUTPUT PORT MOV DX,3D4H BX, OFFSET GRAFVAL MOV ;REGISTER COUNTER XOR AH, AH REGISTER NUMBER INTG1: MOV AL,AH OUT DX,AL INC DX AL,[BX] MOV OUT DX,AL DEC DX INC ВΧ INC AH LOOP INTG1 ; NOW SET CONTROL PORTS CALL SETBGD MOV ES, SCRSEG POINT TO DISPLAY BUFFER RET ASSUME ES:NOTHING COLOBON ENDP ;-----RESTORE ORIGINAL MODE \_\_\_\_\_ COLOROFF PROC DUALC,Ø CMP ; DUAL CONSULE MODE? JNZ COFFX ;YES - DON'T SWITCH MODES MOV ES, SYSSEG ASSUME ES:SYSTEM MOV DI, MODSAV ;ORIGINAL MODE SETTING EQUIP\_FLAG, DI MOV MOV AX,2 ;80 COLUMN MODE INT 1ØH COFFX: RET ASSUME ES:NOTHING COLOROFF ENDP ;--\_\_\_\_\_ ; MAIN COLOR GRAPHICS ROUTINE DEMO PROC

	CMP	DUALC,Ø	;DUAL CONSOLES?
	JZ	DEMO1 CLEAR ABORT,Ø DEMOX	; NO
DEMO1:	CMP	ABORT 0	CHECK ABORT FLAG
22.0011	JNZ	DEMOX	ABORT PROCESSING
;DRAW A	SOLID B	LOCK	,
-	MOV	DX, OFFSET MSG3	;BOX MESSAGE
	CALL	CILMSG	DISPLAY ON MONO
	MOV	X1,20	
	MOV	Y1,180	
	MOV	Y1,180 X2,300 Y2,20 COLOR,2 DRAWB ABORT,0 DEMOX	
	MOV	COLOR 2	
	CALL	DRAWB	;DRAW A BOX
	CMP	ABORT,Ø	ABORT REQUESTED?
	JNZ	DEMOX	;YES - QUIT
;DRAW A	CIRCLE		
	MOV	DX, OFFSET MSG1	;CIRCLE MESSAGE
	CALL	CTLMSG	PUT IT ON MONO
	MOV	XX,100 XX,100	X ORIGIN
	MOV	RADIUS.40	RADIUS
	MOV	NUMER,5	ASPECT NUMERATOR
	MOV	DENOM, 6	ASPECT DENOMINATOR
	MOV	CX,3 CIRCLE ABORT.Ø	;CIRCLE MESSAGE ;PUT IT ON MONO ;X ORIGIN ;Y ORIGIN ;RADIUS ;ASPECT NUMERATOR ;ASPECT DENOMINATOR ;COLOR
	CALL	CINCLE	
	CMP JNZ		;ABORT REQUESTED?
NOW A	DECENNET	DEMOX	;YES - QUIT
INOW A	MOV	DX.OFFSET MSG2	;RECTANGLE MESSAGE ;DISPLAY ON MONO ;DRAW A RECTANGLE
	CALL	CTLMSG	DISPLAY ON MONO
	MOV	COLOR, 1	,
	CALL	DRAWR	;DRAW A RECTANGLE
DEMOX: DEMO	RET		
DEMO	ENDP		
;			
;;CONTRO	L BREAK	INTERRUPT ROUTIN	E
;;CONTRO	L BREAK		E
; CONTRO	L BREAK PROC	INTERRUPT ROUTIN	E
; CONTRO	L BREAK PROC PUSH PUSH	DS	E
; CONTRO	L BREAK PROC PUSH PUSH	DS	E
; CONTRO	L BREAK PROC PUSH PUSH	DS	E
; CONTRO	L BREAK PROC PUSH PUSH	DS	E
; CONTRO	L BREAK PROC PUSH PUSH MOV MOV MOV POP	INTERRUPT ROUTIN DS AX AX, DSEG DS,AX ABORT,255 AX	E
;; ;CONTRO ; BRKADR	L BREAK PROC PUSH PUSH MOV MOV MOV POP POP IRET	DS	E
; CONTRO ; CONTRO ; BRKADR	L BREAK PROC PUSH PUSH MOV MOV POP POP IRET ENDP	INTERRUPT ROUTIN DS AX AX, DSEG DS,AX ABORT,255 AX DS	E
; CONTRO ; CONTRO ; BRKADR	L BREAK PROC PUSH PUSH MOV MOV POP POP IRET ENDP	DS AX AX, DSEG DS,AX ABORT,255 AX DS	E
; CONTRO ; BRKADR BRKADR ; MONOCH	L BREAK PROC PUSH PUSH MOV MOV POP POP IRET ENDP ROME SCR	INTERRUPT ROUTIN DS AX AX, DSEG DS, AX ABORT, 255 AX DS EEN SUBROUTINES	E
; CONTRO ; CONTRO ; BRKADR BRKADR ; MONOCH	L BREAK PROC PUSH PUSH MOV MOV POP POP IRET ENDP ROME SCR	DS AX AX, DSEG DS,AX ABORT,255 AX DS	E
; CONTRO ; CONTRO BRKADR BRKADR ; MONOCH ; MONOCH	L BREAK PROC PUSH PUSH MOV MOV MOV POP POP IRET ENDP ROME SCR PROC	DS AX AX, DSEG DS,AX ABORT,255 AX DS EEN SUBROUTINES	E
; CONTRO ; CONTRO ; BRKADR BRKADR ; MONOCH	L BREAK PROC PUSH PUSH MOV MOV POP POP IRET ENDP ROME SCR PROC PUSH	INTERRUPT ROUTIN DS AX AX, DSEG DS, AX ABORT, 255 AX DS EEN SUBROUTINES	E
; CONTRO ; CONTRO BRKADR BRKADR ; MONOCH ; MONOCH	L BREAK PROC PUSH PUSH MOV MOV POP POP IRET ENDP ROME SCR PROC PUSH PUSH	DS AX AX, DSEG DS,AX ABORT,255 AX DS EEN SUBROUTINES	E
; CONTRO ; CONTRO BRKADR BRKADR ; MONOCH ; MONOCH	L BREAK PROC PUSH PUSH MOV MOV POP POP IRET ENDP ROME SCR PROC PUSH PUSH PUSH	DS AX AX, DSEG DS, AX ABORT, 255 AX DS EEN SUBROUTINES AX BX CX DX	E 
; CONTRO ; CONTRO BRKADR BRKADR ; MONOCH ; MONOCH	L BREAK PROC PUSH PUSH MOV MOV POP POP IRET ENDP ROME SCR PROC PUSH PUSH PUSH PUSH PUSH	INTERRUPT ROUTIN DS Ax Ax, DSEG DS, AX ABORT, 255 Ax DS EEN SUBROUTINES AX BX CX AX, 600H	E    ;BLANK WINDOW
; CONTRO ; CONTRO BRKADR BRKADR ; MONOCH ; MONOCH	L BREAK PROC PUSH PUSH MOV MOV POP POP IRET ENDP ROME SCR PROC PUSH PUSH PUSH PUSH MOV	INTERRUPT ROUTIN DS Ax, DSEG DS,AX ABORT,255 AX DS EEN SUBROUTINES AX BX CX DX AX,600H BH,7	E 
; CONTRO ; CONTRO BRKADR BRKADR ; MONOCH ; MONOCH	L BREAK PROC PUSH PUSH MOV MOV POP POP IRET ENDP ROME SCR PROC PUSH PUSH PUSH PUSH MOV MOV	INTERRUPT ROUTIN DS Ax Ax, DSEG DS, AX ABORT, 255 AX DS EEN SUBROUTINES AX BX CX DX AX, 600H BH, 7 CX, 0	E    ;BLANK WINDOW
; CONTRO ; CONTRO BRKADR BRKADR ; MONOCH ; MONOCH	L BREAK PROC PUSH PUSH MOV MOV POP POP IRET ENDP ROME SCR PUSH PUSH PUSH PUSH PUSH PUSH MOV MOV	INTERRUPT ROUTIN DS Ax, Ax, DSEG DS,AX ABORT,255 AX DS EEN SUBROUTINES AX, BX CX AX,600H BH,7 CX,0 DX,184FH	E    ;BLANK WINDOW
; CONTRO ; CONTRO BRKADR BRKADR ; MONOCH ; MONOCH	L BREAK PROC PUSH PUSH MOV MOV POP POP IRET ENDP ROME SCR PROC PUSH PUSH PUSH PUSH MOV MOV MOV MOV	INTERRUPT ROUTIN DS Ax Ax, DSEG DS,AX ABORT,255 AX DS EEN SUBROUTINES AX BX CX DX AX,600H BH,7 CX,0 DX,184FH 10H	E    ;BLANK WINDOW
; CONTRO ; CONTRO BRKADR BRKADR ; MONOCH ; MONOCH	L BREAK PROC PUSH PUSH MOV MOV POP POP IRET ENDP ROME SCR PROC PUSH PUSH PUSH PUSH MOV MOV MOV INT POP	DS AX AX, DSEG DS, AX ABORT, 255 AX DS EEN SUBROUTINES EEN SUBROUTINES AX, 600H BH,7 CX,0 DX,184FH 10H DX	E    ;BLANK WINDOW
; CONTRO ; CONTRO BRKADR BRKADR ; MONOCH ; MONOCH	L BREAK PROC PUSH PUSH MOV MOV POP POP IRET ENDP ROME SCR PROC PUSH PUSH PUSH PUSH MOV MOV MOV INT POP	INTERRUPT ROUTIN DS Ax Ax, DSEG DS,AX ABORT,255 AX DS EEN SUBROUTINES AX BX CX DX AX,600H BH,7 CX,0 DX,184FH 10H	E    ;BLANK WINDOW
; CONTRO ; CONTRO ; BRKADR BRKADR ; MONOCH ; MONOCH	L BREAK PROC PUSH PUSH MOV MOV POP POP POP IRET ENDP ROME SCR PROC PUSH PUSH PUSH PUSH PUSH MOV MOV MOV MOV INT POP POP POP POP POP POP POP PO	DS AX AX, DSEG DS, AX ABORT, 255 AX DS EEN SUBROUTINES EEN SUBROUTINES AX, 600H BH,7 CX,0 DX,184FH 10H DX	E    ;BLANK WINDOW
BRKADR BRKADR BRKADR BRKADR BRKADR	L BREAK PROC PUSH PUSH MOV MOV POP POP IRET ENDP POP PROC PUSH PUSH PUSH PUSH PUSH PUSH PUSH PUSH	INTERRUPT ROUTIN DS Ax, Ax, DSEG DS, AX ABORT, 255 AX DS EEN SUBROUTINES AX, EEN SUBROUTINES AX, CX, DX AX, 600H BH,7 CX,0 DX, 184FH 10H DX CX BX AX	E    ;BLANK WINDOW
; CONTRO ; CONTRO ; BRKADR BRKADR ; MONOCH ; MONOCH	L BREAK PROC PUSH PUSH MOV MOV POP POP IRET ENDP ROME SCR PROC PUSH PUSH PUSH PUSH MOV MOV MOV MOV MOV MOV MOV MOV POP POP POP POP POP POP POP POP POP P	DS AX AX, DSEG DS, AX ABORT, 255 AX DS EEN SUBROUTINES AX BX CX DX AX, 600H BH,7 CX,0 DX, 184FH 10H DX CX CX DX AX	E    ;BLANK WINDOW
BRKADR BRKADR BRKADR BRKADR BRKADR	L BREAK PROC PUSH PUSH MOV MOV POP POP IRET ENDP ROME SCR PROC PUSH PUSH PUSH PUSH POP POP POP POP POP POP POP POP POP PO	INTERRUPT ROUTIN DS Ax, Ax, DSEG DS, AX ABORT, 255 AX DS EEN SUBROUTINES EEN SUBROUTINES EEN SUBROUTINES AX, 600H BH,7 CX,0 DX,184FH 10H DX,184FH 10H DX CX BX AX AX BX AX AX BX AX	E  ;BLANK WINDOW ;NORMAL ATTRIBUTE
BRKADR BRKADR BRKADR BRKADR BRKADR	L BREAK PROC PUSH PUSH MOV MOV MOV POP POP IRET ENDP POR POR PUSH PUSH PUSH POP POP POP POP POP POP POP PO	DS AX AX, DSEG DS, AX ABORT, 255 AX DS EEN SUBROUTINES AX BX CX DX AX, 600H BH,7 CX,0 DX, 184FH 10H DX CX CX DX AX	E    ;BLANK WINDOW

		•	
	INT	10H	
	POP	BX	
	POP	AX	
	RET		
SCRLUP:	PUSH	AX	
	PUSH	BX	
	PUSH	CX	
	PUSH	DX	
	MOV	AX,601H	SCROLL UP ONE LINE
	MOV	BH,7	
	MOV	СХ,1500Н	
	MOV	DX,174FH	
	INT POP	1ØH DX	
	POP	CX	
	POP	BX	
	POP	AX	
	RET		
CTLMSG:		DUALC,255	; DUAL CONSOLES?
	JNZ	CTLMSX	NO - SKIP DISPLAY
	PUSH	DX	
	CALL	SCRLUP	
	MOV	DX,1700H	
	CALL	SETCSR	
	POP	DX	
	MOV	АН,9	; PRINT STRING
	INT	21H	
CTLMSX:			
	ENDP		
;			
GRAPHI	CS SUBRO		
GRAFPAC			
		AX	
SETBGD:		AX DX	
SETBGD:	PUSH PUSH MOV	АХ DX DX,3D9H	
SETBGD:	PUSH	DX	;GET COLOR SELECTION
SETBGD:	PUSH MOV MOV AND	DX DX,3D9H AL,BGDCLR AL,3FH	;GET COLOR SELECTION ;CLEAR PALLETTE
SETBGD:	PUSH MOV MOV AND TEST	DX DX,3D9H AL,BGDCLR AL,3FH PALCLR,16	
SETBGD:	PUSH MOV MOV AND TEST JZ	DX DX,3D9H AL,BGDCLR AL,3FH PALCLR,16 SETBGØ	CLEAR PALLETTE
SETBGD:	PUSH MOV MOV AND TEST JZ MOV	DX DX,3D9H AL,BGDCLR AL,3FH PALCLR,16 SETBGØ AH,10H	
	PUSH MOV MOV AND TEST JZ MOV JMP	DX DX, 3D9H AL, BGDCLR AL, 3FH PALCLR, 16 SETBGØ AH, 1ØH SETBGA	CLEAR PALLETTE
SETBGØ:	PUSH MOV AND TEST JZ MOV JMP MOV	DX DX, 3D9H AL,BGDCLR AL,3FH PALCLR,16 SETBGØ AH,1ØH SETBGA AH,Ø	;CLEAR PALLETTE ;SAVE AL FOR NOW
	PUSH MOV AND TEST JZ MOV JMP MOV TEST	DX DX,3D9H AL,BGDCLR AL,3FH PALCLR,16 SETBGØ AH,10H SETBGA AH,0 PALCLR,1	;CLEAR PALLETTE ;SAVE AL FOR NOW ;WANT PALETTE 1?
SETBGØ:	PUSH MOV AND TEST JZ MOV JMP MOV TEST JZ	DX DX, 3D9H AL, BGDCLR AL, 3FH PALCLR, 16 SETBGØ AH, 10H SETBGA AH, 0 PALCLR, 1 SETBG1	;CLEAR PALLETTE ;SAVE AL FOR NOW ;WANT PALETTE 1? ;NO
SETBGØ: SETBGA:	PUSH MOV AND TEST JZ MOV JMP MOV TEST JZ OR	DX DX, 3D9H AL, BGDCLR AL, 3FH PALCLR, 16 SETBGØ AH, 10H SETBGA AH, 0 PALCLR, 1 SETBGI AL, 20H	;CLEAR PALLETTE ;SAVE AL FOR NOW ;WANT PALETTE 1?
SETBGØ:	PUSH MOV AND TEST JZ MOV JMP MOV TEST JZ OR OR	DX DX,3D9H AL,BGDCLR AL,3FH PALCLR,16 SETBGØ AH,10H SETBGA AH,0 PALCLR,1 SETBG1 AL,20H AL,AH	;CLEAR PALLETTE ;SAVE AL FOR NOW ;WANT PALETTE 1? ;NO ;TURN IT ON
SETBGØ: SETBGA:	PUSH MOV AND TEST JZ MOV JMP MOV TEST JZ OR	DX DX, 3D9H AL, BGDCLR AL, 3FH PALCLR, 16 SETBGØ AH, 10H SETBGA AH, 0 PALCLR, 1 SETBGI AL, 20H	;CLEAR PALLETTE ;SAVE AL FOR NOW ;WANT PALETTE 1? ;NO
SETBGØ: SETBGA:	PUSH MOV AND TEST JZ MOV JMP MOV TEST JZ OR OR OUT	DX DX, 3D9H AL, BGDCLR AL, JSH PALCLR, 16 SETBGØ AH, 10H SETBGA AH, Ø PALCLR, 1 SETBG1 AL, 20H AL, AH DX, AL	;CLEAR PALLETTE ;SAVE AL FOR NOW ;WANT PALETTE 1? ;NO ;TURN IT ON ;TELL HARDWARE
SETBGØ: SETBGA:	PUSH MOV AND TEST JZ MOV JMP MOV JEST JZ OR OR OUT MOV DEC MOV	DX DX, 3D9H AL, BGDCLR AL, 3FH PALCLR, 16 SETBGØ AH, 10H SETBGA AH, 0 PALCLR, 1 SETBG1 AL, 20H AL, 20H AL, AH DX, AL CURCOL, AL	;CLEAR PALLETTE ;SAVE AL FOR NOW ;WANT PALETTE 1? ;NO ;TURN IT ON ;TELL HARDWARE ;SAVE COMBINED STATUS ;40X25 COLOR GRAPHICS
SETBGØ: SETBGA:	PUSH MOV AND TEST JZ MOV JMP MOV JMP MOV JZ OR OR OR OUT MOV DEC	DX DX, 3D9H AL, BGDCLR AL, 3FH PALCLR, 16 SETBGØ AH, 10H SETBGA AH, 0 PALCLR, 1 SETBG1 AL, 20H AL, 20H AL, 20H AL, AH DX, AL CURCOL, AL DX AL, 0AH PALCLR, 2	;CLEAR PALLETTE ;SAVE AL FOR NOW ;WANT PALETTE 1? ;NO ;TURN IT ON ;TELL HARDWARE ;SAVE COMBINED STATUS ;40X25 COLOR GRAPHICS ;WANT B&W?
SETBGØ: SETBGA:	PUSH MOV AND TEST JZ MOV JMP MOV JMP MOV JZ OR OR OR OUT MOV DEC MOV TEST JZ	DX DX, 3D9H AL, BGDCLR AL, 3FH PALCLR, 16 SETBGØ AH, 10H SETBGA AH, 0 PALCLR, 1 SETBG1 AL, 20H AL, 20H AL, AH DX, AL CURCOL, AL DX AL, 0AH PALCLR, 2 SETBG2	;CLEAR PALLETTE ;SAVE AL FOR NOW ;WANT PALETTE 1? ;NO ;TURN IT ON ;TELL HARDWARE ;SAVE COMBINED STATUS ;40x25 COLOR GRAPHICS ;WANT B&W? ;NO
SETBGØ: SETBGA: SETBG1:	PUSH MOV AND TEST JZ MOV JMP MOV TEST JZ OR OR OR OUT MOV DEC MOV TEST JZ OR	DX DX, 3D9H AL,BGDCLR AL,JSH PALCLR,16 SETBGØ AH,10H SETBGA AH,0 PALCLR,1 SETBG1 AL,20H AL,20H AL,20H AL,AH DX,AL CURCOL,AL DX AL,0AH PALCLR,2 SETBG2 AL,4	;CLEAR PALLETTE ;SAVE AL FOR NOW ;WANT PALETTE 1? ;NO ;TURN IT ON ;TELL HARDWARE ;SAVE COMBINED STATUS ;40X25 COLOR GRAPHICS ;MANT B&W? ;NO ;TURN ON B&W
SETBGØ: SETBGA:	PUSH MOV AND TEST JZ MOV JMP MOV TEST JZ OR OR OUT MOV DEC MOV DEC MOV TEST JZ OR TEST	DX DX, 3D9H AL,BGDCLR AL,3FH PALCLR,16 SETBGØ AH,1ØH SETBGA AH,Ø PALCLR,1 SETBG1 AL,20H AL,20H AL,AH DX,AL CURCOL,AL DX AL,ØAH PALCLR,2 SETBG2 AL,4 PALCLR,4	;CLEAR PALLETTE ;SAVE AL FOR NOW ;WANT PALETTE 1? ;NO ;TURN IT ON ;TELL HARDWARE ;SAVE COMBINED STATUS ;40X25 COLOR GRAPHICS ;WANT B&W? ;NO ;TURN ON B&W ;WANT 640X200?
SETBGØ: SETBGA: SETBG1:	PUSH MOV MOV AND TEST JZ MOV JZ OR OR OR OR OUT MOV TEST JZ OR TEST JZ	DX DX, 3D9H AL, BGDCLR AL, 3FH PALCLR, 16 SETBGØ AH, 1ØH SETBGA AH, Ø PALCLR, 1 SETBG1 AL, 20H AL, 20H AL, AH DX, AL CURCOL, AL DX AL, ØAH PALCLR, 2 SETBG2 AL, 4 PALCLR, 4 SETBG3	;CLEAR PALLETTE ;SAVE AL FOR NOW ;WANT PALETTE 1? ;NO ;TURN IT ON ;TELL HARDWARE ;SAVE COMBINED STATUS ;40225 COLOR GRAPHICS ;WANT B&W? ;NO ;TURN ON B&W ;WANT 640X200? ;NO
SETBGØ: SETBGA: SETBG1: SETBG2:	PUSH MOV AND TEST JZ MOV JMP MOV TEST JZ OR OR OR OUT MOV TEST JZ OR TEST JZ OR OR OR OR	DX DX, 3D9H AL,BGDCLR AL,JSH PALCLR,16 SETBGØ AH,10H SETBGA AH,0 PALCLR,1 SETBG1 AL,20H AL,AH DX,AL CURCOL,AL DX AL,0AH PALCLR,2 SETBG2 AL,4 PALCLR,4 SETBG3 AL,16	;CLEAR PALLETTE ;SAVE AL FOR NOW ;WANT PALETTE 1? ;NO ;TURN IT ON ;TELL HARDWARE ;SAVE COMBINED STATUS ;40X25 COLOR GRAPHICS ;WANT B&W? ;NO ;TURN ON B&W ;WANT 640X200? ;NO ;TURN ON HIRES B&W
SETBGØ: SETBGA: SETBG1:	PUSH MOV AND TEST JZ MOV JMP MOV TEST JZ OR OR OUT MOV DEC MOV DEC MOV DEC MOV TEST JZ OR TEST JZ OR OUT	DX DX, 3D9H AL, BGDCLR AL, 3FH PALCLR, 16 SETBGØ AH, 10H SETBGA AH, 0 PALCLR, 1 SETBG1 AL, 20H AL, 20H	;CLEAR PALLETTE ;SAVE AL FOR NOW ;WANT PALETTE 1? ;NO ;TURN IT ON ;TELL HARDWARE ;SAVE COMBINED STATUS ;40225 COLOR GRAPHICS ;WANT B&W? ;NO ;TURN ON B&W ;WANT 640X200? ;NO
SETBGØ: SETBGA: SETBG1: SETBG2:	PUSH MOV MOV AND TEST JZ MOV JZ OR OR JZ OR OUT MOV TEST JZ OR TEST JZ OR OR TEST JZ OR OUT POP	DX DX, 3D9H AL,BGDCLR AL,BGDCLR AL,BGDCLR,16 SETBGØ AH,10H SETBGA AH,0 PALCLR,1 SETBG1 AL,20H AL,20H AL,20H AL,AH DX,AL CURCOL,AL DX AL,0AH PALCLR,2 SETBG2 AL,4 PALCLR,4 SETBG3 AL,16 DX,AL DX	;CLEAR PALLETTE ;SAVE AL FOR NOW ;WANT PALETTE 1? ;NO ;TURN IT ON ;TELL HARDWARE ;SAVE COMBINED STATUS ;40X25 COLOR GRAPHICS ;WANT B&W? ;NO ;TURN ON B&W ;WANT 640X200? ;NO ;TURN ON HIRES B&W
SETBGØ: SETBGA: SETBG1: SETBG2:	PUSH MOV AND TEST JZ MOV JB MOV TEST JZ OR OR OR OR TEST JZ OR TEST JZ OR OR TEST JZ OR OR OR DOP POP	DX DX, 3D9H AL, BGDCLR AL, 3FH PALCLR, 16 SETBGØ AH, 10H SETBGA AH, 0 PALCLR, 1 SETBG1 AL, 20H AL, 20H	;CLEAR PALLETTE ;SAVE AL FOR NOW ;WANT PALETTE 1? ;NO ;TURN IT ON ;TELL HARDWARE ;SAVE COMBINED STATUS ;40X25 COLOR GRAPHICS ;WANT B&W? ;NO ;TURN ON B&W ;WANT 640X200? ;NO ;TURN ON HIRES B&W
SETBGØ: SETBGA: SETBG1: SETBG2: SETBG3:	PUSH MOV MOV AND TEST JZ MOV JEST JZ OR OR OR OUT MOV DEC MOV DEC MOV TEST JZ OR TEST JZ OR TEST JZ OR OUT POP POP RET	DX DX, 3D9H AL,BGDCLR AL,3FH PALCLR,16 SETBGØ AH,1ØH SETBGA AH,0 PALCLR,1 SETBG1 AL,20H AL,4H DX,AL CURCOL,AL DX AL,0AH PALCLR,2 SETBG2 AL,4 PALCLR,2 SETBG3 AL,16 DX,AL DX AX	;CLEAR PALLETTE ;SAVE AL FOR NOW ;WANT PALETTE 1? ;NO ;TURN IT ON ;TELL HARDWARE ;SAVE COMBINED STATUS ;40X25 COLOR GRAPHICS ;WANT B&W? ;NO ;TURN ON B&W ;WANT 640X200? ;NO ;TURN ON HIRES B&W
SETBGØ: SETBGA: SETBG1: SETBG2:	PUSH MOV MOV AND TEST JZ MOV JZ OR OR JZ OR OUT MOV TEST JZ OR OR TEST JZ OR OR TEST JZ OR OR TEST JZ OR OR TEST MOV	DX DX, 3D9H AL,BGDCLR AL,JSH PALCLR,16 SETBGØ AH,10H SETBGA AH,0 PALCLR,1 SETBG1 AL,20H AL,20H AL,20H AL,AH DX,AL CURCOL,AL DX AL,0AH PALCLR,2 SETBG2 AL,4 PALCLR,4 SETBG3 AL,16 DX,AL DX AX SI,X1	;CLEAR PALLETTE ;SAVE AL FOR NOW ;WANT PALETTE 1? ;NO ;TURN IT ON ;TELL HARDWARE ;SAVE COMBINED STATUS ;40X25 COLOR GRAPHICS ;WANT B&W? ;NO ;TURN ON B&W ;WANT 640X200? ;NO ;TURN ON HIRES B&W
SETBGØ: SETBGA: SETBG1: SETBG2: SETBG3:	PUSH MOV MOV AND TEST JZ MOV JEST JZ OR OR OR OUT MOV DEC MOV DEC MOV TEST JZ OR TEST JZ OR TEST JZ OR OUT POP POP RET	DX DX, 3D9H AL, BGDCLR AL, JGDCLR AL, JGDCLR, 16 SETBGØ AH, 10H SETBGA AH, 0 PALCLR, 1 SETBG1 AL, 20H AL, 20H PALCLR, 2 SETBG2 AL, 4 PALCLR, 4 SETBG3 AL, 16 DX, AL DX AX SI, X1 DI, Y1	;CLEAR PALLETTE ;SAVE AL FOR NOW ;WANT PALETTE 1? ;NO ;TURN IT ON ;TELL HARDWARE ;SAVE COMBINED STATUS ;40X25 COLOR GRAPHICS ;WANT B&W? ;NO ;TURN ON B&W ;WANT 640X200? ;NO ;TURN ON HIRES B&W
SETBGØ: SETBGA: SETBG1: SETBG2: SETBG3:	PUSH MOV MOV AND TEST JZ MOV JS OR OR OR OR OR OR OR TEST JZ OR TEST JZ OR OR TEST JZ OR OR TEST JZ OR OR TEST MOV	DX DX, 3D9H AL,BGDCLR AL,JSH PALCLR,16 SETBGØ AH,10H SETBGA AH,0 PALCLR,1 SETBG1 AL,20H AL,AH DX,AL CURCOL,AL DX AL,0AH PALCLR,2 SETBG2 AL,4 PALCLR,2 SETBG3 AL,16 DX,AL SI,X1 DI,Y1 AX,SI	;CLEAR PALLETTE ;SAVE AL FOR NOW ;WANT PALETTE 1? ;NO ;TURN IT ON ;TELL HARDWARE ;SAVE COMBINED STATUS ;40X25 COLOR GRAPHICS ;WANT B&W? ;NO ;TURN ON B&W ;WANT 640X200? ;NO ;TURN ON HIRES B&W
SETBGØ: SETBGA: SETBG1: SETBG2: SETBG3:	PUSH MOV MOV AND TEST JZ MOV JEST JZ OR OR OUT TEST JZ OR OR OUT MOV DEC MOV TEST JZ OR TEST JZ OR TEST JZ OR OUT POP RET MOV MOV	DX DX, 3D9H AL, BGDCLR AL, JGDCLR AL, JGDCLR, 16 SETBGØ AH, 10H SETBGA AH, 0 PALCLR, 1 SETBG1 AL, 20H AL, 20H PALCLR, 2 SETBG2 AL, 4 PALCLR, 4 SETBG3 AL, 16 DX, AL DX AX SI, X1 DI, Y1	;CLEAR PALLETTE ;SAVE AL FOR NOW ;WANT PALETTE 1? ;NO ;TURN IT ON ;TELL HARDWARE ;SAVE COMBINED STATUS ;40X25 COLOR GRAPHICS ;WANT B&W? ;NO ;TURN ON B&W ;WANT 640X200? ;NO ;TURN ON HIRES B&W
SETBGØ: SETBGA: SETBG1: SETBG2: SETBG3:	PUSH MOV MOV AND TEST JZ MOV JSZ OR OR OR OR OR OUT MOV TEST JZ OR TEST JZ OR TEST JZ OR OR TEST JZ OR OR TEST MOV MOV	DX DX, 3D9H AL,BGDCLR AL,JSH PALCLR,16 SETBGØ AH,10H SETBGA AH,0 PALCLR,1 SETBG1 AL,20H AL,20H AL,20H AL,AH DX,AL CURCOL,AL DX AL,0AH PALCLR,2 SETBG2 AL,4 PALCLR,4 SETBG3 AL,16 DX,AL SETBG3 AL,16 DX,AL SI,X1 DI,Y1 AX,SI EX,Y2	;CLEAR PALLETTE ;SAVE AL FOR NOW ;WANT PALETTE 1? ;NO ;TURN IT ON ;TELL HARDWARE ;SAVE COMBINED STATUS ;40X25 COLOR GRAPHICS ;WANT B&W? ;NO ;TURN ON B&W ;WANT 640X200? ;NO ;TURN ON HIRES B&W
SETBGØ: SETBGA: SETBG1: SETBG2: SETBG3:	PUSH MOV MOV AND TEST JZ MOV JSZ OR OR OR OR OR OR OR TEST JZ OR TEST JZ OR TEST JZ OR OR TEST JZ OR OR TEST MOV MOV CALL MOV	DX DX, 3D9H AL, BGDCLR AL, JGDCLR AL, JGDCLR PALCLR, 16 SETBGØ AH, 10H SETBGA AH, 0 PALCLR, 1 SETBG1 AL, 20H AL, 20H	;CLEAR PALLETTE ;SAVE AL FOR NOW ;WANT PALETTE 1? ;NO ;TURN IT ON ;TELL HARDWARE ;SAVE COMBINED STATUS ;40X25 COLOR GRAPHICS ;WANT B&W? ;NO ;TURN ON B&W ;WANT 640X200? ;NO ;TURN ON HIRES B&W
SETBGØ: SETBGA: SETBG1: SETBG2: SETBG3:	PUSH MOV MOV AND TEST JZ MOV JEST JZ OR OR OUT TEST JZ OR OR OUT MOV DEC MOV TEST JZ OR TEST JZ OR TEST JZ OR OUT POP POP RET MOV MOV MOV CALL	DX DX, 3D9H AL, 3GDCLR AL, 3GH PALCLR, 16 SETBGØ AH, 10H SETBGA AH, 0 PALCLR, 1 SETBG1 AL, 20H AL,	;CLEAR PALLETTE ;SAVE AL FOR NOW ;WANT PALETTE 1? ;NO ;TURN IT ON ;TELL HARDWARE ;SAVE COMBINED STATUS ;40X25 COLOR GRAPHICS ;WANT B&W? ;NO ;TURN ON B&W ;WANT 640X200? ;NO ;TURN ON HIRES B&W

	MOV MOV CALL MOV MOV MOV MOV CALL MOV MOV MOV MOV MOV CALL RET	BX,DI CX,COLOR LINE SI,X2 DI,Y2 AX,SI BX,Y1 CX,COLOR LINE SI,X2 DI,Y1 AX,X1 BX,DI CX,COLOR LINE	
DRAWB:	MOV	SI,X1	
	MOV MOV	DI,Yl	
	MOV	AX,X2 BX,DI	;USE Y2 = Y1 FOR LINES
	MOV	CX,Y2	; BOTTOM OF BOX
	SUB	CX,BX	NUMBER OF LINES TO DRAW
	JNC	DRAWBØ	COUNT IS POSITIVE
	MOV	DI,Y2	THIS IS ACTUAL TOP
	MOV	BX,DI	;DRAW HORIZONTAL LINES
	NEG	CX	;MAKE COUNT POSITIVE
DRAWBØ:		СХ	;COUNT IS END - START + 1
DRAWB1:		SI	
	PUSH PUSH	DI AX	
	PUSH	вх	
	PUSH	CX	
	MOV	CX,COLOR	
	CALL	LINE	
	POP	CX	
	POP POP	BX AX	
	POP	DI	
	POP	SI	
	INC	DI	;NEXT Y1
	INC	вх	NEXT Y2
	LOOP	DRAWB1	;DRAW NEXT LINE
GRAFPAC	RET		
POINT	PROC	NEAR	; [SI=X, DI=Y]
	PUSH	AX	/(
	PUSH	вх	
	PUSH	СХ	
	PUSH	SI	
	PUSH SHL	DI DI,1	;mult y*2 (addr table is 2 bytes wide)
	MOV	DI, ADRTBL[DI]	;get vert address from table
	MOV	AX,SI	;save x in si
	AND	SI,3	
	SHR	AX,1	;divide by 4 (4 dots per byte)
	SHR	AX,1	;get addr of byte on screen
	ADD XOR	DI,AX BX,BX	get addr of byte on acreen
	MOV	BL,COLORV	
	SAL	BL,1	; color table is 4 by 4 so mult color * 4
	SAL	BL,1	
	MOV	AL,CLRMSK[SI]	
	MOV	BL, COLMSK [SI+BX]	
	CMP	CMODE, 1	
	JNE CMP	ORIT Notter,ø	
	JNE	XORIT	
	XOR	ES:[DI],BL	
	JMP	SHORT XORIT	
ORIT:	AND	ES:[DI],AL	

200

	OR	ES:[DI],BL
XORIT:	POP	DI
	POP	SI
	POP	СХ
	POP	вх
	POP	AX
	RET	
POINT	ENDP	

# ;Draws a circle at center (XX,YY) with aspect ratio ;numer/denom; radius in column units; color in CX

,		
PROC	NEAR	
MOV	NOTTER,Ø	
MOV	COLORV, CL	
MOV	CMODE, CH	
MOV	AX, NUMER	GET ASPECT NUMER
MOV	BX,1000	;SCALE BY 1000
IMUL	вх	
MOV	CX, DENOM	GET ASPECT DENOM
IDIV	CX	;AX=ASPECT*1000
PUSH	AX	SAVE ASPECT
XCHG	AX,CX	GET DENOM IN AX
MOV	CX,NUMER	GET NUMER IN CX
IMUL	вх	; SCALE
IDIV	CX	;AX=INV ASPECT*1000
MOV	DENOM, AX	; SAVE
POP	AX	; ASPECT*1000
MOV	NUMER, AX	SAVE
	PROC MOV MOV MOV IMUL MOV IDIV PUSH XCHG MOV IMUL IDIV MOV POP	MOV         NOTTER,0           MOV         COLORV,CL           MOV         CMDDE,CH           MOV         AX,NUMER           MOV         BX,1000           IMUL         BX           MOV         CX,DENOM           IDIV         CX           PUSH         AX           MOV         CX,NUMER           IMUL         BX           IDIV         CX           MOV         CX,NUMER           IMUL         BX           IDIV         CX           MOV         DENOM,AX           POP         AX

#### ;Y=Y+1 X=X-TAN(INV ASPECT)

	MOV	AX,RADIUS	;GET RADIUS
	MOV	XP,AX	;lst PREVIOUS X
	MOV	BX,1000	;SCALE
	IMUL	вх	
	XOR	DI,DI	ZERO INIT Y VALUE
CR5:	PUSH	AX	
	PUSH	DX	
	XOR	вх,вх	
	ADD	AX,500	ROUND
	ADC	DX, BX	•
	MOV	BX,1000	RESCALE X
	IDIV	вх	•
	MOV	BX,AX	;1st quad
	PUSH	BX	NEW CALCULATED X
CR5A:	ADD	AX,XX	ADD X ORIGIN
	MOV	DX, YY	YORIGIN
	SUB	DX,DI	, i onioin
	MOV	CX,AX	GET X TO PLOT
		shiftin .	, en a le 1201
	NOT	NOTTER	
		NOTTER	
	CALL	CPOINT	CALL POINT ROUTINE
	SUB	CX,BX	GET 2nd QUAD
	SUB	CX, BX	;X+ORIGIN
	CALL	CPOINT	,
	ADD	DX, DI	;GET 3rd QUAD
	ADD	DX,DI	Y+ORIG
	CALL	CPOINT	, I+ORIG
	ADD	CX,BX	CER ALL OUND
			;GET 4th QUAD
	ADD	CX,BX	;X+ORIGIN
	CALL	CPOINT	
	INC	вх	
	CMP	BX,XP	;X GAP?
	JAE	CR6	; NO
	MOV	AX,BX	;SET INTERMEDIATE POINT
	JMP	CR5A	GO PLOT IT

#### ;CX NOW AT ORIGINAL POINT

CR6:	POP MOV XCHG INC MOV IMUL IDIV XOR MOV IDIV CMP POP JAE NEG MOV ADD ADD	BX XP,BX CX,BX DI AX,DI BX,DENOM BX CX DX,DX SI,AX BX AX,1 DX AX CR7 SI BX,-1 AX,SI DX,BX	;CALCULATED X ;PREVIOUS X ;Ist QUAD X ;NEW Y ;Y ;BX=INV ASPECT*1000 ;TAN*INV ASPECT ;REMAINDER ;SI=TAN*INV ASPECT ;AX=TAN ;TAN=1? ;GO TO NEXT SECTOR ;TO DEC X ;NEGATIVE CARRY ;NEGATIVE CARRY ;HIGH WORD CARRY
- DI OT	JMP SHC	RT CR5	PLOT NEW POINT
;PLOT 4	15 TO 90	DEGREES	
CR7:	MOV MOV MOV IMUL MOV	AX,DI YP,AX BX,1000 BX DI,CX	;NEXT Y ;NIT PREVIOUS Y ;SCALE ;DX:AX=Y*1000 ;LAST X VALUE
CR8:	DEC PUSH PUSH XOR ADD ADC	DI AX DX BX,BX AX,500 DX,BX	;NEXT X
CR8A:	MOV IDIV MOV PUSH ADD MOV ADD MOV	8X, 1000 8X, 8X 8X, 8X 8X 8X 8X 8X 8X 8X 8X 8X 8X	;RESCALE Y ;1st QUAD Y ;Add y JRIJIN ;X origin ;Y
	NOT CALL SUB SUB CALL SUB CALL ADD ADD CALL	NOTTER CPOINT CX,DI CPOINT DX,BX DX,BX CPOINT CX,DI CX,DI CY,DI	;2nd QUAD ;X ;3rd QUAD ;Y ;4th QUAD ;X
CR9:	DEC CMP JBE MOV JMP POP MOV SUB NEG XCHG OR JS DEC	BX BX,YP CR9 AX,BX CR8A BX YP,BX DX,YY DX CX,DX DI,DI CR11 DI	;GAP? ;NO ;PLOT INTERMEDIATE POINT ;SAVE PREVIOUS Y ;Y-Y ORIGIN ;Y ORIGIN ADJUST ;CX=Y ;90 DEG ;YES, EXIT ;NEW X

	MOV MOV IMUL	AX,DI BX,NUMER BX	;ASPECT*1000
	IDIV MOV POP POP	CX SI,AX DX AX	;DELTA Y
	XOR OR JNS MOV	BX,BX SI,SI CR10 BX,-1	;SIGN CHECK ;POSITIVE ;NEGATIVE CARRY
CR10:	ADD ADC JMP	AX,SI DX,BX CR8	;NEW X VALUE ;HI WORD CARRY ;PLOT NEXT POINT
CR11:	POP POP RET	AX AX	
CIRCLE	ENDP		
CPOINT CPOINT1 CPOINT	PROC CMP JL CMP JG CMP JG CMP JG PUSH PUSH PUSH MOV CALL POP POP POP ENDP	NEAR CX,Ø CPOINT1 CX,319 CPOINT1 DX,Ø CPOINT1 DX,199 CPOINT1 SI DI CX DI,DX SI,CX POINT CX DI SI	
;			
; LINE ;			or XOR mode - real fast! nal for highest speeds.
LINE	PROC MOV MOV MOV CMP JBE XCHG XCHG	NEAR COLORV,CL CMODE,CH NOTTER,Ø DX,Ø SI,AX NOXCHG SI,AX DI,BX	;[SI=X1,DI=Y1,AX=X2,BX=Y2] ;[CX=COLOR]
NOXCHG:	SUB MOV SUB MOV JNS NEG NEG	AX,SI BP,AX BX,DI CX,1 NOTNEG CX BX	;BP HOLDS X DIFFERENCE CONSTANT
NOTNEG :	MOV MOV PUSH PUSH PUSH	[DIR],CX AX,BX BX SI DI	;SAVE Y DIFFERENCE CONSTANT IN AX
	SHL MOV MOV	DI,1 DI,ADRTBL[DI] BX,SI	;MULT Y*2 (ADDR TABLE IS 2 BYTES WIDE) ;GET VERT ADDR FROM TABLE ;SAVE X IN SI

	AND	SI,3	
	SHR	BX,1	;DIVIDE BY 4 (4 DOTS PER BYTE)
	SHR	BX,1	
	ADD	DI,BX	GET ADDR OF BYTE ON SCREEN
	MOV	BH,Ø	
	MOV	BL,COLORV	
	SAL SAL	BL,1 BL,1	;MULT BY 4 (4X4 TABLE)
	MOV ·	BL,COLMSK[SI+BX]	1
	MOV	BH, CLRMSK [SI]	; MASK FOR COLOR
	CMP	CMODE, 1	
	JNE	ORITI	
	XOR	ES:[DI],BL	
ORIT1:	JMP AND	SHORT XORIT1 ES:[DI],BH	;BH HOLDS CLRMSK
0	OR	ES:[DI],BL	BL HOLDS COLMSK (4X4)
XORIT1:		DI	,
	POP	SI	
	POP	CX	; CHANGE TO CX TEMPORARILY
	CMP	BP,CX	;SO BX IS PRESERVED
	JLE JMP	CASE1 CASE2	
CASE1:	CMP	[DIR],1	
0110211	JNE	CASE3	;NEGATIVE Y
	MOV	CX,AX	
LP1:	DEC	CX	
	JS	DONEL1	
	INC ADD	DI DX,BP	
	CMP	AX, DX	
	JA	SKP1	
	SUB	DX,AX	
	INC	SI	
	ROR	BL,1	;INCREMENT MASKS FOR ;CURRENT PIXEL
	ROR ROR	BL,1 BH,1	CORRENT FIREL
	ROR	ВН,1	
SKP1:	PUSH	AX	;SAXE AX (Y CONSTANT)
	PUSH	DI	;SAVE DI (Y)
	SHL	DI,1	; MULT BY TWO FOR
	MOV MOV	DI,ADRTBL[DI] AX,SI	;TABLE LOOK UP ;SAVE X IN SI
	SHR	AX,1	DIVIDE BY 4 (4 PIXELS/BYTE)
	SHR	AX,1	,
	ADD	DI,AX	;ADD TO Y-BYTE FOR DEST. BYTE
	CMP	CMODE, 1	
	7110	00700	
	JNE	ORIT2	
	NOT	NOTTER	
	NOT CMP JNE XOR	NOTTER NOTTER,Ø XORIT2 ES:[DI],BL	
00170	NOT CMP JNE XOR JMP	NOTTER NOTTER,Ø XORIT2 ES:[DI],BL SHORT XORIT2	AND CODEEN BYRE WITHIN ORDER HAGY
ORIT2:	NOT CMP JNE XOR JMP AND	NOTTER NOTTER,Ø XORIT2 ES:[DI],BL SHORT XORIT2 ES:[DI],BH	; AND SCREEN BYTE WITH OTHER MASK
	NOT CMP JNE XOR JMP AND OR	NOTTER NOTTER,Ø XORIT2 ES:[DI],BL SHORT XORIT2 ES:[DI],BH ES:[DI],BL	;BL HOLDS COLMSK (4X4)
ORIT2: XORIT2:	NOT CMP JNE XOR JMP AND OR	NOTTER NOTTER,Ø XORIT2 ES:[DI],BL SHORT XORIT2 ES:[DI],BH	
	NOT CMP JNE XOR JMP AND OR POP	NOTTER NOTTER,Ø XORIT2 ES:[DI],BL SHORT XORIT2 ES:[DI],BH ES:[DI],BL DI	;BL HOLDS COLMSK (4X4)
XORIT2: DONEL1:	NOT CMP JNE XOR JMP AND OR POP POP JMP RET	NOTTER NOTTER,Ø XORIT2 ES:[DI],BL SHORT XORIT2 ES:[DI],BH ES:[DI],BL DI AX SHORT LP1	;BL HOLDS COLMSK (4X4)
XORIT2: DONEL1: CASE3:	NOT CMP JNE XOR JMP AND OR POP JMP RET MOV	NOTTER NOTTER,0 XORIT2 ES:[DI],BL SHORT XORIT2 ES:[DI],BL DI AX SHORT LP1 CX,AX	;BL HOLDS COLMSK (4X4)
XORIT2: DONEL1:	NOT CMP JNE XOR JMP AND OR POP POP JMP RET MOV DEC	NOTTER NOTTER,0 XORIT2 ES:[DI],BL SHORT XORIT2 ES:[DI],BH ES:[DI],BL DI AX SHORT LP1 CX,AX CX	;BL HOLDS COLMSK (4X4)
XORIT2: DONEL1: CASE3:	NOT CMP JNE XOR JMP AND OR POP JMP RET MOV	NOTTER NOTTER,0 XORIT2 ES:[DI],BL SHORT XORIT2 ES:[DI],BL DI AX SHORT LP1 CX,AX	;BL HOLDS COLMSK (4X4)
XORIT2: DONEL1: CASE3:	NOT CMP JNE XOR JMP AND OR POP POP JMP RET MOV DEC JS	NOTTER NOTTER,Ø XORIT2 ES:[DI],BL SHORT XORIT2 ES:[DI],BH ES:[DI],BL DI AX SHORT LP1 CX,AX CX DONEL3	;BL HOLDS COLMSK (4X4)
XORIT2: DONEL1: CASE3:	NOT CMP JNE XOR JMP AND OR POP POP POP POP RET MOV DEC JS DEC ADD CMP	NOTTER NOTTER,0 XORIT2 ES:[DI],BL SHORT XORIT2 ES:[DI],BH ES:[DI],BL DI AX SHORT LP1 CX,AX CX DONEL3 DI DX,BP AX,DX	;BL HOLDS COLMSK (4X4)
XORIT2: DONEL1: CASE3:	NOT CMP JNP XOR JMP OR POP JMP RET MOV DEC JS DEC ADD CMP JA	NOTTER NOTTER,0 XORIT2 ES:[DI],BL SHORT XORIT2 ES:[DI],BL DI AX SHORT LP1 CX,AX CX DONEL3 DI DX,BP AX,DX SKP3	;BL HOLDS COLMSK (4X4)
XORIT2: DONEL1: CASE3:	NOT CMP JNE XOR JMP AND OR POP POP POP POP JMP RET MOV DEC JS DEC ADD CMP JA SUB	NOTTER NOTTER,0 XORIT2 ES:[DI],BL SHORT XORIT2 ES:[DI],BH ES:[DI],BL DI AX SHORT LP1 CX,AX CX DONEL3 DI DX,BP AX,DX SKP3 DX,AX	;BL HOLDS COLMSK (4X4)
XORIT2: DONEL1: CASE3:	NOT CMP JNE XOR AND OR POP POP JMP RET JMOV DEC JS JEC JEC ADD JA SUB INC	NOTTER NOTTER,0 XORIT2 ES:[DI],BL SHORT XORIT2 ES:[DI],BL DI AX SHORT LP1 CX,AX CX DONEL3 DI DX,BP AX,DX SKP3 DX,AX SI	;BL HOLDS COLMSK (4X4) ;RECOVER DI (Y)
XORIT2: DONEL1: CASE3:	NOT CMP JNE XOR JMP AND OR POP POP POP POP JMP RET MOV DEC JS DEC ADD CMP JA SUB	NOTTER NOTTER,0 XORIT2 ES:[DI],BL SHORT XORIT2 ES:[DI],BH ES:[DI],BL DI AX SHORT LP1 CX,AX CX DONEL3 DI DX,BP AX,DX SKP3 DX,AX	;BL HOLDS COLMSK (4X4)
XORIT2: DONEL1: CASE3:	NOT CMP JNE XOR AND OR POP POP JMP RET MOV DEC ADD DEC ADD CMP JA SUB SUB SUC ROR	NOTTER NOTTER,0 XORIT2 ES:[DI],BL SHORT XORIT2 ES:[DI],BL DI AX SHORT LP1 CX,AX CX DONEL3 DI DX,BP AX,DX SKP3 DX,AX SI BL,1	;BL HOLDS COLMSK (4X4) ;RECOVER DI (Y) ;INCREMENT MASKS FOR

Charles A. Crayne and Dian Girard

SKP3:	ROR PUSH SHL MOV SHR ADD CMP JNE CMP JNE JNE JNE JNP	BH,1 AX DI DI,1 DI,ADRTBL[DI] AX,SI AX,1 DI,AX. CMODE,1 ORIT3 NOTTER,0 XORIT3 ES:[DI],BL SHORT XORIT3	;SAVE AX (Y CONSTANT) ;SAVE DI (Y) ;MULT BY TWO FOR ;TABLE LOOK UP ;SAVE X IN SI ;DIVIDE BY 4 (4 PIXELS/BYTE) ;ADD TO Y-BYTE FOR DEST. BYTE
ORIT3: XORIT3:		ES:[DI],BH ES:[DI],BL DI	;BH HOLDS CLRMSK ;BL HOLDS COLMSK (4X4) ;RECOVER DI (Y)
DONEL3:	POP JMP RET	AX Short Lp3	
CASE2:	CMP JNE MOV	[DIR],1 CASE4 CX,BP	;NEGATIVE Y
LP2:	DEC JS INC ADD CMP JA SUB INC	CX DONEL2 SI DX,AX BP,DX SKP2 DX,BP DI	
SKP2:	ROR ROR ROR ROR	BL,1 BL,1 BH,1 BH,1 BH,1	;INCREMENT MASKS FOR ;CURRENT PIXEL
	PUSH PUSH SHL MOV MOV	AX DI DI,l DI,ADRTBL[DI] AX,SI	;SAVE AX (Y CONSTANT) ;SAVE DI (Y) ;MULT BY TWO FOR ;TABLE LOOK UP ;SAVE X IN SI
	SHR SHR ADD CMP	AX,1 AX,1 DI,AX CMODE,1	;DIVIDE BY 4 (4 PIXELS/BYTE) ;ADD TO Y-BYTE FOR DEST. BYTE
	JNE NOT CMP JNE XOR JMP	ORIT4 NOTTER NOTTER,Ø XORIT4 ES:[DI],BL SHORT XORIT4	
ORIT4:	AND	ES:[DI],BH	; BH HOLDS CLRMSK
XORIT4:	OR POP POP JMP	ES:[DI],BL DI AX SHORT LP2	;BL HOLDS COLMSK (4X4) ;RECOVER DI (Y)
DONEL2: CASE4: LP4:		CX, BP CX DONEL4 SI DX, AX BP, DX SKP4 DX, BP DI	
SKP4:	ROR ROR	BL,1 BL,1	;INCREMENT MASKS FOR ;CURRENT PIXEL

	ROR	BH,1	
	ROR	вн,1	
	PUSH	AX	;SAVE AX (Y CONSTANT)
	PUSH	DI	;SAVE DI (Y)
	SHL	DI,1	; MULT BY TWO FOR
	MOV	DI,ADRTBL[DI]	;TABLE LOOK UP
	MOV	AX,SI	;SAVE X IN SI
	SHR	AX,1	DIVIDE BY 4 (4 PIXELS/BYTE)
	SHR	AX,1	
	ADD	DI,AX	; ADD TO Y-BYTE FOR DEST. BYTE
	CMP	CMODE,1	
	JNE	ORIT5	
	NOT	NOTTER	
	CMP	NOTTER,Ø	
	JNE	XORIT5	
	XOR	ES:[DI],BL	
	JMP	SHORT XORIT5	
ORIT5:	AND	ES:[DI],BH	; BH HOLDS CLRMSK
	OR	ES:[DI],BL	BL HOLDS COLMSK (4X4)
XORIT5:		DI	RECOVER DI (Y)
	POP	AX	,
	JMP	SHORT LP4	
DONEL4:	RET		
LINE	ENDP		
CSEG	ENDS		
0000	END		
	BRD		

# Part V

## Interfaces and Ideas

#### Chapter 17 BASIC SUBROUTINES

The development of high-level languages in general and BASIC in particular—was one of the major steps in making home computers acceptable to the programmerhobbyist. BASIC is easy to understand, simple to use, and relatively portable between machines ... but as everyone knows, "There ain't no such thing as a free lunch." There had to be a trade-off somewhere, and the trade-off was in speed. Interpretive BASIC is notoriously slow.

Another problem with BASIC is its inability to use the available machine memory. As implemented on the PC, BASIC uses the first 64KB above DOS. It is limited to that amount of memory and incapable of handling any BASIC program larger than 64KB. Even if you've got a machine with 512KB you're still stuck with BASIC's 64K work area.

This book is dedicated to the concept that there is still a need for assembly language where more speed or function is required than is available in other languages. But there is a price in programmer productivity. The compromise is to use both. By writing common subroutines in assembly language you can get both the speed and memory utilization of the low-level code, while preserving the ease and familiarity of BASIC.

If you have worked with assembly language you've probably considered this approach yourself, but you may have gotten discouraged when you tried to develop the BASIC/assembly language interface. IBM's BASIC manual devotes an entire 18-page appendix to the subject, but the suggested procedures are cumbersome and require a lot of manual intervention by the programmer.

Although the systems shown in the manual will certainly work, one of them calls for converting each line of the subroutine into machine code, translating it into hex, and then using POKE to insert the instructions one by one into memory. This is a lengthy and timeconsuming procedure. Another suggested way of loading a routine is to use DEBUG to load it into high memory, where it overlays the transient portion of COMMAND.COM. This requires you to reset the system registers and use the DEBUG N command to initialize the parameter passing area.

Besides the actual program load, another problem that has to be dealt with is deciding exactly where in memory to locate the new code. You have your choice of inserting it within the the 64K BASIC work space or, if the BASIC program is too large to allow that, putting it somewhere else in memory. In either case you have to determine the end of BASIC itself, which can vary depending on the device drivers installed in DOS.

Fortunately there is a relatively easy procedure that will let you load assembly subroutines via interpretive BASIC without resorting to POKE, and without having to use DEBUG to find the end of the interpreter work area. This procedure loads the code from within the BASIC program and allows you to invoke it from anywhere in the program with a simple CALL statement. Let's take as an example a subroutine that converts an input text string to upper case. This is a procedure that is done in countless programs, to let the user enter either upper or lower case letters. To do this in BASIC is both slow and awkward, and involves looping through nested function calls, as shown in Figure 17.1.

Figure 17.1—BASIC Uppercase Translate Routine

1Ø	REM Convert Lower Case to Upper Case
2Ø	FOR $Z=1$ TO LEN(Z\$)
3Ø	MID\$(Z\$,Z,1) = CHR\$(ASC(MID\$(Z\$,Z,1)))
	+ 32*(ASC(MID\$(Z\$,Z,1))>96))
4Ø	NEXT Z
5Ø	RETURN

Nobody can seriously maintain that statement 30 is a natural use of the BASIC language. Without the comment, it would take a reasonably experienced programmer just to figure out what the statement does, and an even more advanced one to explain why it works. Compare that to the equivalent function in assembler as shown in Figure 17.2.

Figure 17.2—Assembly Language Upper Case Translate Routine

;Called wi	se Translate Routine ith String Address in SI nd String Length in CX	
	BYTE PTR [SI],'a' JC XLATI AND BYTE PTR [SI],ØDFH INC SI LOOP XLAT RET	;LOWER CASE LETTER? ;NO ;CONVERT TO UC ;POINT TO NEXT CHAR ;LOOP UNTIL DONE

Of course, to use this subroutine with BASIC we have to fancy it up a little bit, because there is no way to directly set SI and CX to their assumed values in the BASIC program. The program will actually issue:

#### CALL XLAT(A\$)

This statement will cause BASIC to place the address of the string descriptor for the passed string on the stack and make an intersegment call to XLAT. We will discuss later how BASIC knows where to find XLAT. The string descriptor contains a one-byte length field, followed by a two-byte offset of the string's address within BASIC's data segment. The subroutine, in theory, must not change anything within the descriptor or change the physical length of the string, although it can do anything it wants to the *content* of the string. Due to the actual implementation of BASIC's string handling routines, it is safe to shorten the actual string, but never to lengthen it. Figure 17.3 shows the subroutine expanded to properly handle the passed parameters.

;Translate	String to Upper Case	
XLATØ: P M M C J X X	PROC FAR PUSH BP MOV BP,SP MOV SI,[BP+6] MOV CL,[SI] CMP CL,Ø JZ XLAT3 KOR CH,CH	;Save Caller's Frame ;Set Frame Pointer ;String header ;String length ;Null string? ;Yes - exit ;Clear MSB of length
XLAT1: C J A XLAT2: I XLAT3: P R	MOV SI,[SI+1] CMP BYTE PTR [SI],'a' JC XLAT2 AND BYTE PTR [SI],ØDFH INC SI LOOP XLAT3 POP BP RET 2 ENDP	;String address ;Lower case char? ;No ;Convert to upper case ;Point to next character ;Loop until done ;Restore Caller's Frame ;Return Flushing Stack

Figure 17.3—Assembly Subroutine Called from BASIC

The subroutine is now ready to be loaded, which we will do with a BLOAD instruction from BASIC. However, BLOAD has its own conventions about the format of the object file. It wants to see a seven-byte prefix containing the following information about the file: type, segment, offset, and length. Type is a one-byte field; segment and offset are two-byte (word) addresses; and length is a two-byte field. BASIC will delete this header as it loads the file into memory. One "quick and dirty" way to pass this information to BASIC is to set up a seven-byte prologue at the beginning of the CALLED program which contains the necessary information. Program length is determined by setting up an EQU statement to trap the starting address (BOF) and subtracting that address from EOF, which is defined at the program end. File type is defined as 0FDH which is BASIC's convention for a data file. This technique is illustrated in Figure 17.4.

Figure 17.4—Prologue for a Called	BASIC subroutine
-----------------------------------	------------------

;Build	file pro	ologue for	BASIC loader
	DB	ØFDH	;File type
	DW	ØF77H	;Default segment
	DW	ø	;Default offset
	DW	EOF-BOF	;Program length
BOF	EQU	\$	;Start of code
	JMP	XLATØ	;Upper case translate
	JMP	Routine2	;Some other subroutine
	• •	•	
XLATØ:		•	
Routine2	:	•	
EOF	DB	1AH	;End of File

These lines of prologue information establish the segment, offset, and program length variables which will be stripped off by the BLOAD command. The second JMP command opens an entry point to the translate routine. (You would typically include several assembly language routines in one program, in which case there would be an additional JMP command for each routine.) An end of file marker (EOF DB 1AH) is written at the end of the programs, just prior to the COMSEG ENDS statement, so that the program length can be calculated.

Because the assembler does not know that BASIC will strip off the seven-byte prologue when the program is loaded, you cannot use absolute jumps or addresses in the remainder of the program. All addressing must be relative or the instruction pointer will be off by seven bytes and wind up in some nebulous nevernever land, causing unpredictable results.

The subroutine code can now be assembled and converted into a binary file, after which is it ready be loaded into memory. (Binary files are created from .EXE files by running EXE2BIN against the compiled code and specifying a .BIN extension for the output.) The actual load is done in the CALLing BASIC program, using BLOAD, and depends on using PEEK to retrieve the correct loading address as shown in Figure 17.5

Figure 17.5—BASIC Program Loading Sequence

```
100 'Load machine language subroutines
110 DEF SEG=0
120 MLSEG=PEEK(&H510)+256*PEEK(&H511)+&H1001
130 DEF SEG=MLSEG
140 XLAT=0
150 BLOAD "SUBRTN.BIN",0
```

The success of this routine depends on the fact that DOS maintains the beginning segment address of BASIC's work area at hex 510–511. Adding hex 1000 (64K) to this address provides the ending address of BASIC in segment notation. An extra 16 bytes is then added in to account for the memory management block that follows BASIC. The result of these calculations is an address in free memory above BASIC.

Notice that the entire program, SUBRTN.BIN, is loaded into memory. The translate routine, XLAT, is

shown as entry point 0. If there were additional routines in the program they would be numbered with an offset of 3, for the byte length of the JMP command, so that the second one would be equal to 3, the third to 6, and so on.

As we mentioned above, this system requires you to use relative addressing. A tidier solution is to write the machine language program as you normally would, omitting the load information, and then append those seven bytes to the beginning of the compiled and linked code. This scheme allows you to use absolute addressing since the seven load bytes are not present when the program is assembled.

The routine shown in Figure 17.6, BASFMT.ASM, has been written to create the necessary load information for BASIC and insert it at the beginning of a binary (.BIN) assembly language program. This program must be compiled into an .EXE file and linked before it can be run.

Either of these schemes—adding a prologue and using relative addressing, or inserting the load information ahead of the finished code—will let you load and call machine language subroutines via BASIC with a minimum of trouble. If you've been looking for a way to get faster response out of interpretive BASIC, try converting some of your common subroutines to assembly language and interfacing them with one of these methods. You'll be amazed at the difference in response time.

#### Figure 17.6—BASFMT.ASM

DB 64 DUP('STACK ') ENDS STACK ;-------; DEFINE PROGRAM SEGMENT PREFIX PREFIX SEGMENT AT Ø ORG 8ØH PARMCT DB Ø PARM DB 80 DUP (?) PREFIX ENDS :LENGTH OF PASSED PARAMETERS UNFORMATTED PARAMETER AREA ; DEFINE DATA SEGMENT DSEG SEGMENT PARA PUBLIC 'DATA' 
 PARM1
 DB
 40
 DUP (?)
 ; INPUT FILE STRING

 PARM2
 DB
 40
 DUP (?)
 ; OUTPUT FILE STRING

 HEADER
 DB
 0FDH
 ; FILE TYPE
 ;OUTPUT FILE STRING JWØF77H; DEFAULT SEGMENTDWØ; DEFAULT OFFSETFLENGTH DWØ; FILE LENGTHHANDLE1 DWØ; INPUT FILE HANDLEHANDLE2 DWØ; OUTPUT FILE HANDLERCODE DBØ; DOS RETURN CODEDSUFF DB'.BLM',Ø; DEFAULT OUTPUT SUFFIXMSGØDB'FILE Created without Error',13,10,'\$'MSG1DB'FILE NOT FOUND',13,10,'\$'MSG2DB'Error in Creating Output File',13,10,'BUFFER DB128 DUP (?);FILE BUFFERDSEGENDS ØF77H ; DEFINE CODE SEGMENT ;-----CSEG SEGMENT PARA PUBLIC 'CODE' PROC FAR START ASSUME CS:CSEG,SS:STACK,DS:PREFIX ;ESTABLISH ADDRESSABILITY TO DATA SEGMENT MOV AX,DSEG ;ADDRESS OF DATA SEGMENT MOV ES,AX ;NOW POINTS TO DATA SEGM ASSUME ES:DSEG ;TELL ASSEMBLER ;NOW POINTS TO DATA SEGMENT ;-----START OF MAIN PROGRAM CALL CLRSCN XOR CX,CX ;CLEAR LENGTH REGISTER MOV CL,PARMCT ;GET PARAMETER LENGTH MOV SI,OFFSET PARM ;POINT TO PARAMETERS MOV DI,OFFSET PARM1 ;INPUT FILE NAME CALL MVPARM MOV DI, OFFSET PARM2 ; OUTPUT FILE NAME CALL MVPARM MOV MOV AX, DSEG DS,AX ;DON'T NEED PREFIX ANY MORE ASSUME DS:DSEG CMP PARM1,Ø ;NULL STRING? ;YES JZ FILBAD JZ FILBAD CMP PARM2,0 JNZ FILEOK CALL DNAME JMP FILEOK FILBAD: MOV RCODE,1 JMP DONE ;NULL STRING? ;NO PROBLEM ; USE DEFAULT NAME FOR OUTPUT ;FILE NOT FOUND ;QUIT

214

#### THE SERIOUS ASSEMBLER

FILEOK:	MOV	DX, OFFSET PARM1	;INPUT FILE NAME
	MOV	AX, 3DØØH	OPEN FILE FOR INPUT
	INT	21H	
	JC	FILBAD	;ERROR OPENING FILE
	MOV	HANDLE1,AX	; INPUT FILE HANDLE
	MOV		OUTPUT FILE NAME
	XOR	CX,CX	NORMAL ATTRIBUTE
	MOV	AH, 3CH	CREATE OUTPUT FILE
	INT	21H	,
	JNC	OPENOK	FILES OPENED OK
OUTERR:		RCODE, 2	CAN NOT OPEN OUTPUT
0012	JMP	DONE	
OPENOK:		HANDLE2,AX	
;GET FIL			
,00	XOR	CX,CX	
	XOR	DX, DX	
	MOV	BX, HANDLE1	
	MOV		POINT TO END OF FILE
	INT	21H	FOINT TO END OF FIEL
	MOV	FLENGTH, AX	;SAVE FILE LENGTH
.DECET F		BEGINNING	, DAVE FILE LENGTH
, REDEI F	XOR	CX,CX	
	XOR	DX, DX	
	MOV	BX, HANDLE1	
			DOINT TO RECINNING OF FILE
	MOV		; POINT TO BEGINNING OF FILE
	INT	21H	
;WRITE H		BY HANDLED	
	MOV	BX, HANDLE2	;OUTPUT FILE
	MOV	CX,7	;LENGTH OF HEADER
	MOV	DX, OFFSET HEADER	
	MOV	AH,40H	;WRITE FILE
	INT	21H	HETTER OKO
	CMP	AX,CX	;WRITE OK?
0000 1	JNZ	OUTERR	;OUTPUT ERROR
COPY IN	PUT FILE		
COP1:	MOV MOV	DX, OFFSET BUFFER CX, 128	
	MOV	BX,HANDLE1	; INPUT FILE
	MOV	AH, 3FH	; READ FILE
	INT	21H	, KERD TIES
	CMP	AX,Ø	;END OF FILE?
	JZ	CLOSE	;YES
	MOV	CX,AX	WRITE NO OF BYTES READ
	MOV	BX, HANDLE2	;OUTPUT FILE
	MOV	AH,40H	,
	INT	21H	
	CMP	AX,CX	;ALL BYTES WRITTEN?
	JNZ	OUTERR	;NO
	CMP	AX,128	;FULL BUFFER READ?
	JZ	COPY	;YES, READ NEXT
CLOSE:	MOV	AH, 3EH	CLOSE FILE
	INT	21H	,01001 1115
•			
RETURN	TO DOS		
;		······	
DONE:	MOV	AX, DSEG	
	MOV		;ENSURE ADDRESSABILITY
	XOR	BX,BX	
	MOV	BL, RCODE	
	SHL	BX,1	
	MOV		;ADDRESS OF ERROR MESSAGE
	CALL	PRINT	

216

### Charles A. Crayne and Dian Girard

		•	
	MOV	AH,4CH	;EXIT
	MOV	AL, RCODE	SET RETURN CODE
	INT	21H	TERMINATE PROGRAM
START	ENDP		
;			
;SUBROU			
;			
CLRSCN	PROC	<b>N</b>	;CLEAR SCREEN
	PUSH	AX	
		AX,2	
	INT	10H	
	POP	AX	
CI DCCN	RET		
CLRSCN	ENDP		
PRINT	PROC	<b>N</b> 14	
	PUSH	AX	
	MOV	AH,9	
	INT	21H	
	POP	AX	
B.0. T.1. B	RET		
PRINT	ENDP		
MVPARM	PROC	<u></u>	; MOVE ONE PARAMETER FROM PREFIX
	CMP	CX,Ø	; ANY STRING LEFT?
	JZ	MVPARY	;NO - EXIT
MVPARØ:	LODSB		;GET 1ST CHAR
	CMP	AL,''	;LEADING BLANK?
	JNZ	MVPAR1	NO
MVPARX:	LOOP	MVPARØ CX	;DELETE LEADING BLANK ;ADJUST COUNT FOR DELIMITER
MVPARY:		AL,Ø	; END OF STRING
	STOSB		
	RET		
MVPAR1:	STOSB		
	LODSB		
	CMP	AL,''	;TERMINATING BLANK?
	JZ	MVPARX	;YES - DONE
	CMP	AL,','	;COMMA IS VALID TERMINATER
	JZ	MVPARX	
	CMP	AL,ØDH	; CR?
	JZ	MVPARX	
		MVPAR1	;GET NEXT CHARACTER
MVPARM	JMP ENDP	MVPAR1	
DNAME	PROC		COPY NAME AND ADD DEFAULT PREFIX
DIANE	MOV	SI, OFFSET PARM1	
	MOV	DI, OFFSET PARM2	
DNAME1:		DI, OTIBET PARAZ	
	CMP	AL,'.'	; DELIMITER?
	JZ	DNAME 2	YES
	CMP	AL,Ø	END OF STRING?
	JZ	DNAME2	YES
	STOSB		• -
	JMP	DNAME 1	;LOOP TIL DONE
DNAME2:	MOV	SI, OFFSET DSUFF	; DEFAULT SUFFIX
	MOV	CX,5	
	REP	MOVSB	
	RET		
DNAME	ENDP		
CSEG	ENDS		
	END	START	

#### Chapter 18 COPY-PROTECTION SCHEMES

If you have been reading this book because you want to write programs for commercial sale, sooner or later you and your distributor will have to make a decision about employing a copy-protection scheme. There are basically three choices: buy protected diskettes on which to put your programs, develop your own protection scheme, or leave your software unprotected. This is not an easy choice.

There is no doubt that for every legitimate copy of a program sold there are some number of bootleg copies floating about. For some popular and expensive programs such as one of the top spreadsheet packages, there are undoubtedly many more pirated copies than there are legitimate ones. This has led many people to conclude that tougher and tougher copy-protection schemes are needed. Despite these facts, there is a line of argument that says that copy protection costs the software author more than it can possibly save. Before discussing specific copy-protection techniques, let me present some of these arguments.

First of all, the use of copy protection limits the

number of sales, especially in the business marketplace. Most companies have enough data processing backgrounds to understand the value of backup copies. No matter how swiftly a company will replace a damaged diskette or how little they charge for the service, for at least a day or two the user will be unable to run the program. If that program is essential to his business, then his business suffers. Imagine a small business owner explaining to five or six employees that their paychecks cannot be written until the replacement copy of the accounts payable program is received from the distributor. Many companies will flat-out refuse to buy any copy-protected software.

Additionally, people are learning to expect that programs will be easy to use. Most copy-protection methods will not allow the program to be run from the hard disks that are now becoming common, without having the original diskette in the floppy drive. Having to rummage around through a pile of diskettes to find the protection key for a program that is on the hard disk is a sure way to develop a strong dislike for that program. More and more users are refusing to buy software that will not run freely from the hard disk.

The second problem is that copy-protection schemes don't work. Mostly what they do is develop a market for specialized copy programs that can copy the diskettes anyway. The escalating war between the developers of copy-protect schemes and the developers of "nibble" copiers does nothing but increase development and distribution costs for the software companies and increase the price paid by the legitimate user.

The third problem is the calculation of the "losses" due to piracy. These are usually based on the "street value" theory. If a program has a list price of \$500 and if an estimated 10,000 illegal copies have been made, then the software developers are out of pocket to the tune of \$5 million. With that much money at stake, drastic measures are called for.

This logic ignores several key facts. First of all, list price has little to do with anything. The list price includes a very healthy markup for the retailer, one which today's competition generally does not allow him to collect. Most software is available in stores or by mail at discount prices. Businesses that buy in quantity get still bigger discounts.

Secondly, the "street value" theory assumes that there are no costs in the manufacturing and distribution of software. A pirated copy may not make any money for the developer, but it doesn't cost anything either. It even increases the sale of blank diskettes, which benefits the industry if not the software houses.

But the biggest flaw is the assumption that if the software were adequately protected, each of those pirated copies would have been purchased instead of copied. The pirate has many more choices than just those two. He can pirate some competitor's product which is not as well protected, buy a less functional and therefore cheaper—product, write his own, or do without. Many people would use a \$500 integrated product that they get for free, but would make do with a \$29.95 simple single-function program if they actually had to pay for it.

Finally, pirated copies are good advertising. Most companies will pay for their copies. The risk of being sued for large sums of money as well as the resultant bad publicity will keep them honest. The illegal copies are mostly in the hands of individuals who probably wouldn't have paid for them anyway. The large software houses spend millions of dollars to develop brand recognition in the marketplace. The actual lost profits due to stray copies probably are a more cost-effective method of advertising than television commercials. On the other side of the coin, if copying is too easy, if there is no advantage to having a legitimate copy, then you will soon have no customers.

How should you protect your software, then? First of all, provide good, extensive (but not exhaustive) documentation. Despite the availability of excellent copying machines, books, magazines, and newspapers are still doing fine. Copying a manual, especially one professionally printed and bound, is a lot more work than just coping a diskette, and results in a document that is not only difficult to use, but shouts to all the world that it is an unauthorized copy.

Serialize your distribution copies, and provide a prepaid post card for registering users. Provide good customer support by mail or by phone, but always check the serial number against your registration list. Provide periodic update releases with fixes and new features. Give a significant discount on these new releases to your registered users.

When unauthorized copies start showing up, and they will, check the serial numbers to determine the original buyer and threaten legal action. Most casual copiers are not sophisticated enough to find and alter the serial number before making a copy for their friends.

These techniques will not put a stop to illegal copying, but they will pretty much ensure that most of those copies will end up with people who don't really need them enough to justify buying them. But what about programs such as arcade games, where there is no documentation, no support, no new releases, and the sales are mostly to individuals rather than companies? Well, perhaps you will decide to copy protect these after all.

The first copy-protection schemes for the IBM PC were pretty simplistic. IBM itself, used to operating in an environment where regular backups were standard,

220

decided against protecting any of the system software developed under its name, such as DOS and the various language compilers. Those companies which did decide on protection did just enough to fool the standard utilities, which was not difficult. One of the early word processing programs just left track 5 unformatted. The DISKCOPY program supplied by IBM as part of DOS quit on any unrecoverable error. This technique was easily overcome by simply writing a copy program that issued a message and continued whenever it encountered an error.

More inventive was the scheme used by Infocom for its text adventure games. The standard PC diskette is formatted with 512 byte sectors. Infocom wrote tracks which had one 1024-byte sector on each track, along with the several of the normal 512-byte sectors. In addition, the 1024-byte sectors had non-standard sector numbers. This caused the standard copy programs to miss the large sectors entirely. It was the existence of this scheme that was responsible for the development of the first of the true "nibble" copiers for the IBM PC—System Backup. (The term "nibble copier" is a misnomer for the IBM. The term comes from the sophisticated copy programs written for the Apple computers, where data was actually recorded on the diskette a nibble—4 bits—at a time.)

To handle such schemes as Infocom's, the copy programs had to figure out what sectors were really on each track. The best way to accomplish this with the IBM diskette adapter board is to issue a READ ID command. This command asks the controller chip to return the sector header of the next sector to pass under the read/write head. The header contains the cylinder number, head number, sector number, and size code for the sector. By sitting in a loop until the sector first encountered comes around again, the program can build a list of all the sectors on a given track. With this information, it is a simple matter to issue the correct read and write commands to copy the track. The only real trick is that IBM did not support either READ ID or READ TRACK commands as part of its diskette BIOS routines. System Backup had to start using its own diskette driver routines.


Personal Software's VisiCalc carried the war a step further. They figured out that the READ ID command reported the first ID field it was able to read without error. The sector header, in addition to the data fields described above, also has some error checking information-a CRC field. Personal Software placed a record on track 39-the last track-which had an error in the header's CRC field. A READ ID command would not detect this sector, but a VERIFY command with the correct sector number supplied would return a unique error code. The diskette would appear to copy properly, but the VisiCalc loader routine would fail to get the proper error code and know that the copy was a forgery. System Backup and the very few other good copy programs soon solved this problem, discovering that such an error can be created by de-selecting the write head just as the CRC characters are being written. Of course this requires a carefully controlled and precise timing loop.

Another step in the escalating war was to lie about the way the sectors were formatted. When formatting a track, it is possible to put any information one wishes into the sector header. The sector ID is always correct, because that is the only place the ID appears, but one can play games to one's heart's content with the cylinder and head numbers as well as the size code. These measures were also soon countered. Adding timing information to the READ ID loop determined the physical size of the sectors, and the customized diskette drivers had little difficulty separating physical and logical track IDs.

As it became apparent that anything that could be created on an IBM PC could be copied on an IBM PC, the protectors had to make a major move in the battle. There are other disk controller chips than the one used in the IBM PC. Some of these can produce formats which can be read by the PC but not duplicated. One program has a copyright notice written in the gap following a sector which claims to be bigger than it really is. By issuing a READ TRACK command, the gap information will be read as the second half of the gimmicked sector.

The ultimate in this genre is the scheme that uses a laser to burn a hole in the diskette. The protected diskette attempts to write over the spot where the hole is and then reads back what it has written. If the exact error remains in the exact place, then the diskette is good. In all the other cases, it is deemed a forgery. At first glance this technique would seem to be foolproof. No standard PC can burn a laser hole in a diskette. But at least one of the copy programs has solved that problem too. It loads a resident routine which notes the error condition on the protected diskette. When the copy is run, the routine intercepts the attempt to verify the diskette and returns the information necessary to fool the program.

The moral of all this is that it is fairly easy to protect software against the typical user who will make a copy for a friend with the standard utility programs. But it is not economically feasible to create a protection scheme which will stand up to the attempts of a dedicated professional. Furthermore, an attempt to claim that one has developed such a scheme is viewed as a challenge in many quarters. The war is not yet conceded by either side, but like most wars, it is probably safer to stay out of the battle.



#### Appendix A IBM PC MACROASSEMBLER INSTRUCTION SET

#### Instruction Set—By Function

Data Movement Instructions

MOV Move XCHG Exchange XLAT Translate LDS Load data segment register LEA Load effective address LES Load extra segment register PUSH Push word onto stack

PUSHF Push flags onto stack

POP Pop word off of stack to destination

POPF Pop flags off of stack

LAHF Load AH from flags

SAHF Store AH in flags

#### Arithmetic Instructions

ADC Add with carry ADD Addition

225

- 226 Charles A. Crayne and Dian Girard
- AAA ASCII adjust for addition
- AAD ASCII adjust for division
- AAM ASCII adjust for multiplication
- AAS ASCII adjust for subtraction
- CBW Convert byte to word
- CWD Convert word to doubleword
- DAA Decimal adjust for addition
- DAS Decimal adjust for subtraction
- DIV Divide
- IDIV Integer division, signed
- IMUL Integer multiply
- MUL Multiply
- NEG Negate (form is 2's complement)
- SBB Subtract with borrow
- SUB Subtract

#### Compare Instructions

CMP Compare two operands

CMPS,CMPSB,CMPSW Compare byte or word string

#### Logical Instructions

AND Logical AND

NOT Logical NOT

OR Logical inclusive OR

- TEST Test (logical compare)
- XOR Exclusive OR

#### String Primitive Instructions

CMPS,CMPSB,CMPSW Compare byte or word string LODS,LODSB,LODSW Load byte or word string MOVS,MOVSB,MOVSW Move byte or word string SCAS,SCASB,SCASW Scan byte or word string STOS,STOSB,STOSW Store byte or word string

#### Program Counter Control Instructions

CALL Call a procedure

JA, JNBE Jump if above, if not below or equal

JAE, JNB Jump if above or equal, if not below

JB,JNAE,JC Jump if below, if not above or equal, if carry

JBE, JNA Jump if below or equal, if not above

JCXZ Jump if CX is zero

JE,JZ Jump if equal, if zero

JG,JNLE Jump if greater, if not less nor equal

JGE,JNL Jump if greater or equal, if not less

JL,JNGE Jump if less, if not greater nor equal

JLE, JNG Jump if less or equal, if not greater

JMP Jump

JNC Jump if no carry

JNE, JNZ Jump if not equal, if not zero

JNO Jump if no overflow

JNP,JPO Jump if no parity, if parity odd

JNS Jump if no sign, if sign positive

JO Jump on overflow

JP,JPE Jump on parity, if parity even

JS Jump on sign

LOOP Loop until count complete

LOOPE,LOOPZE Loop if equal, if zero

LOOPNE, LOOPNZ Loop if not equal, if not zero

RET Return from a procedure

#### **Processor Control Instructions**

- CLC Clear carry flag
- CMC Complement carry flag

CLD Clear direction flag

CLI Clear interrupt flag (disable)

ESC Escape

- HLJ Halt
- IN Input byte or word
- INT Interrupt
- INTO Interrupt if overflow
- IRET Interrupt return

#### Rotate and Shift Instructions

- LOCK Lock bus
- NOP No operation
- OUT Output byte or word
- RCL Rotate left through carry
- RCR Rotate right through carry
- ROL Rotate left
- ROR Rotate right
- SAL,SHL Shift arithmetic left, shift logical left
- SAR Shift arithmetic right
- SHR Shift logical right
- WAIT Wait

#### Instruction List—Alphabetic

- AAA ASCII adjust for addition
- AAD ASCII adjust for division
- AAM ASCII adjust for multiply
- AAS ASCII adjust for subtraction
- ADC Add with carry
- ADD Addition
- AND Logical AND
- CALL Call a procedure
- CBW Convert byte to word

- CLC Clear carry flag
- CLD Clear direction flag
- CLI Clear interrupt flag (disable)
- CMC Complement carry flag
- CMP Compare two operands
- CMPS,CMPSB,CMPSW Compare byte or word string
- CWD Convert word to doubleword
- DAA Decimal adjust for addition
- DAS Decimal adjust for subtraction
- DEC Decrement destination by one
- DIV Division, unsigned
- ESC Escape
- HLT Halt
- IDIV Integer division, signed
- IMUL Integer multiply
- IN Input byte or word
- INC Increment destination by 1
- INT Interrupt
- INTO Interrupt if overflow
- IRET Interrupt return
- JA,JNBE Jump if above, if not below or equal
- JAE, JNB Jump if above or equal, if not below
- JB,JNAE,JC Jump if below, if not above or equal, if carry
- JBE, JNA Jump if below or equal, if not above
- JCXZ Jump if CX is zero
- JE,JZ Jump if equal, if zero
- JG,JNLE Jump if greater, if not less nor equal
- JGE,JNL Jump if greater or equal, if not less
- JL, JNGE Jump if less, if not greater nor equal
- JLE, JNG Jump if less or equal, if not greater
- JMP Jump
- JNC Jump if no carry
- JNE, JNZ Jump if not equal, if not zero
- JNO Jump if no overflow
- JNP,JPO Jump if no parity, if parity odd

Jump if no sign, if positive JNS JO Jump on overflow JP.JPE Jump on parity, if parity even Jump on sign JS LAHF Load AH from flags LDS Load data segment register LEA Load effective address LES Load extra segment register LOCK Lock bus LODS,LODSB,LODSW Load byte or word string LOOP Loop until count complete LOOPE,LOOPZE Loop if equal, if zero LOOPNE,LOOPNZ Loop if not equal, if not zero MOV Move MOVS, MOVSB, MOVSW Move byte or word string MUL Multiply, unsigned NEG Negate, form is 2's complement NOP No operation NOT Logical NOT OR Logical inclusive OR OUT Output byte or word POP Pop word off stack of destination POPF Pop flags off stack PUSH Push word onto stack PUSHF Push flags onto stack RCL Rotate left through carry RCR Rotate right through carry REP,REPZ,REPE,REPNE,REPNZ Repeat string operation RET Return from procedure ROL Rotate left ROR Rotate right SAHF Store AH in flags SAL,SHL Shift arithmetic left, shift logical left SAR Shift arithmetic right Subtract with borrow SBB

SCAS, SCASB, SCASW Scan byte or word string SHR Shift logical right

STC Set carry flag

STD Set direction flag

STI Set interrupt flag (enable)

STOS, STOSB, STOSW Store byte or word string SUB Subtract

TEST Test (logical compare)

WAIT Wait

XCHG Exchange

XLAT Translate

XOR Exclusive OR

×

#### GLOSSARY

ANALOG—A way of representing one type of physical property in terms of another. A lot of early computers were analog machines, and researchers sometimes still use them, but the majority of computers in commercial use are digital devices. Analog is also used to describe a peripheral device, like a mouse, that produces directional information which a computer can translate into screen display data.

APA—All Points Addressable, a type of graphics that allows direct mapping between screen coordinates and computer memory.

APPLICATION—A set of computer programs which work together to perform some generalized function, like inventory management or financial tracking. Application code is generally written for some end-user and is more likely to be in a high-level language than in assembler.

ARRAY—A matrix of numbers or letters that can be searched by the computer in order to retrieve the same

number or word multiple times. Each item in an array is called an "element."

ASCII—American Standard Code for Information Interchange, the standard 7-bit coded character set that is used in most microcomputer systems. ASCII is actually an 8-bit code, but the high-order bit is used for parity checking.

ASSEMBLER—A computer program that is used to convert the source code typed in by a programmer into object code that is understandable by the computer. This term is also used in casual reference to assembly language, i.e. "It was written in assembler."

BACKUP—Any copy of a program, file, or entire diskette that is kept in case of damage to the original. The process of making the copy is often called "backing up" or "making a backup."

BASIC—A popular high-level language used extensively on microcomputers.

BAUD—The rate at which information is exchanged between computers, or between a computer and its input-output devices.

BINARY—A numbering system that only allows two characters, 0 and 1. In a binary system, there are only two choices, such as YES and NO, or ON and OFF. All computers store information in binary form, but programmers generally work in a more convenient mode, like decimal or hexadecimal.

BIOS—Basic Input/Output System, the logical section of a computer that maintains the addresses of connected devices and lets the computer communicate with its printer, display, and other external equipment.

BIT—Binary digIT, the smallest piece of information that a computer can process. Bits are usually moved, read, and updated in sets of eight, called a byte.

BOOT—To start up a computer system. A "warm boot" is done on the IBM PC by pressing the CTRL, ALT, and DEL keys while the computer is running. A "cold start" or "boot" is starting up the machine from scratch by turning on the power switch.

BOOTSTRAP—A technique that lets a computer or other device start itself up with minimal outside help, from the phrase "lifting yourself up by your bootstraps." The bootstrap program on the IBM PC automatically starts up and tries to read the main load sequence from a diskette in the A: drive. If there is no diskette available, the bootstrap program loads a version of BASIC from ROM.

BUFFER—A section of memory that is used for temporary storage of information. Typically, buffers are used to hold data that comes in from a keyboard or communications line, or to hold formatted data before it is transmitted or moved to a more permanent storage location.

BUG—An error in a program, a glitch or mistake. The process of locating and correcting bugs is called "debugging."

BUS, BUS STRUCTURE—The signal or set of wires that carries binary coded addresses from a microcomputer's CPU chip (the Intel 8088 in the case of the

IBM PC) through the rest of the computer; also referred to as the "address bus."

BYTE—A set of eight consecutive bits of information.

CHANNEL—A logical or physical unit in the computer that controls data flow, such as an I/O Channel.

CHARACTER—A single letter, number, or other symbol.

CLONE—A computer designed to imitate a competitor's machine as closely as possible, usually produced for economic reasons.

COPROCESSOR—An extra device that does some of the work for a computer's CPU. A coprocessor usually has some features that are missing in the main processor. For example, the Intel 8087 coprocessor chip, which is required in the IBM PC for APL programming, supplies the special keyboard handling for APL's symbol set.

CPS—Characters Per Second, used as a measurement of transmission speed for printers and some other devices.

CPU—Central Processing Unit, the section of a computer that does the actual calculations. When the CPU is a single chip, like the Intel 8088 in the IBM PC, it is often referred to as an MPU (microprocessing unit).

CRC—Cyclic Redundancy Check, a special character used to ensure data integrity during transmission or memory testing.

CRT—Cathode Ray Tube, the common computer display monitor, which uses such a tube.

CURSOR—The symbol that is displayed on the computer screen to show where the next typed character will display, or to prompt the user for input. The cursor is generally shown as a short blinking line or a small block, but it can be any character, depending on the machine and the software.

DEFAULT—A setting that the computer uses unless it is told otherwise. Defaults are pre-set values which can be changed or overridden under software control.

DIRECTORY—The list of programs and files on a diskette.

DIRECTORY PATH—The series of directories that will be checked in turn to locate a specific program or file. Directory paths are used in operating systems that support sub-directories, like DOS 2.0, XENIX, UNIX, etc.

DISK DRIVE—The phonograph-like mechanism that reads and writes on diskettes for microcomputers and on disk packs for larger machines.

DISKETTE—A flat square envelope of heavy plasticized paper that contains a thin flexible disk. Diskettes, also called "floppy disks" and "floppies," are used to store information, and are usually 5¼" or 8" in diameter, depending on the disk drives that handle them.

DISPLAY—The television-like screen on which a computer shows information. A display can be a CRT, liquid crystal, or any other sort of technology. Also called a "monitor" or "screen."

DMA—Direct Memory Access.

DOS—Disk Operating System, the set of programs that communicate between a computer and its disk drives.

DOUBLE DENSITY—This term refers to the amount of information that can be stored on a diskette. The IBM PC has double-density disk drives and formats diskettes as double density.

DOUBLE-SIDED DRIVE—A disk drive with two read/ write heads, one for each side of the diskette.

DUAL DRIVE—A computer system that has two disk drives.

ENTER, RETURN—The key on the computer keyboard that is used to tell the system that input is complete. The ENTER key is usually in the same position as the RETURN key on an electric typewriter.

EPROM—Erasable Programmable memory, a read-only I/C chip that can be erased with ultraviolet light and re-programmed.

FIELD—A section of a file record or input string that contains one specific piece of information, like a zip code, program name, or memory address.

FILE—A section of space on a diskette or tape that can be referred to by name and is used to store information. A file can be broken down into sub-groupings, like blocks, records and fields.

FIRMWARE—Memory chips (I/C's) that have a program permanent written into them, also referred to as ROM, PROM, and EPROM, depending on whether the programs within the chips can be erased and changed. FORMAT—The process of writing blank tracks onto a diskette so that it can be used by a computer, or the way the completed tracks are written on the diskette. Format is a general term that is used to refer to the way data is organized, such as "What is the format of the inventory record?"

GRAPHICS—Symbols produced by writing, drawing, or printing, as opposed to characters from the keyboard.

HARDCOPY—Information printed on paper instead of being displayed on the computer's monitor.

HARD DISK—A storage device similar to a disk drive, except that the actual recording surface cannot be removed from the machine. Hard disks have a lot more capacity than diskettes and may contain 10, 20, or even 40 million bytes of information.

HARDWARE—Physical computer equipment, such as the machine itself, the monitor, printer, etc. (Compare SOFTWARE.)

HEAD—The device that moves across the surface of a diskette, reading or writing information. A double-sided drive has two heads, one for each side of the diskette.

HEX, HEXADECIMAL—A numbering system that has 16 possible values. These values are traditionally numbered from 0 through F. In hexadecimal, the next number after F is 10.

HERTZ—A unit of frequency, one cycle per second.

HIGH-LEVEL—Any computer language where the programmer does not have to move information around

byte by byte. BASIC, COBOL, and FORTRAN are highlevel languages. Assembly language is regarded as low-level.

HIGH-ORDER—The far left position in a character string, byte, or other series. In the binary group 10000000 the 1 is the high-order bit.

HOST—The main computer in a network, or any computer with terminals connected to it.

I/C—Integrated Circuit, an electronic circuit that is produced in miniature and enclosed in a small rigid plastic case. I/C's are also called "chips."

I/O—Input/Output, any logical or physical device that is concerned with information flow in and out of the computer.

INTERPRETER—A computer program that translates source code line by line, as it is executed, into computer instructions. Programs that run under an interpreter are usually slower to execute than those that are compiled and are much slower than assembly language.

INTERRUPT—To stop an action in such a way that it can be resumed later. Interrupt is also used as a noun to refer to some specific computer commands.

K, KB—Abbreviations for Kilobyte, pronounced "Kay." Although it is more precise to use the term KB, popular usage prefers the single letter—as in "64K memory board."

LOG, LOGGED—Identified to the computer, as in "logged on." The log-on procedure for a computer may consist of entering a name and password. Log can also refer to the process of printing or spooling all of the communication between a computer terminal and the host, for security or archival purposes.

LOOP—A series of computer instructions that are repeated over and over some set number of times, or until something specific happens. Loops can contain other loops, and may become quite complex.

LOW LEVEL—A computer language which requires the programmer to handle information one or two bytes at a time. Assembly languge is a low-level language. FORTH, which has both high-level and lowlevel commands, is sometimes regarded as a low-level language.

LOW-ORDER—The far right position in a character string, byte, or other series. (Compare HIGH-ORDER.)

MACHINE LANGUAGE—Any language that is used directly by a computer, without translation. This is also used rather loosely as a term for the computer's instruction set.

MAINFRAME—A large multiuser computer used in major business operations. Mainframes may have several hundred terminals connected to them and are able to do a wide variety of tasks concurrently.

MEG, MEGABYTE—A million bytes of storage. Microcomputers do not yet have this kind of capacity, although it's a common term for mainframe storage. In the microcomputer environment the term is usually used in reference to hard or fixed disks.

MEMORY—The physical and logical locations within a computer where data and programs are stored.

MEMORY ADDRESS—A two-byte value that indicates a particular location in computer memory.

MEMORY MAP—A list of memory locations that can be accessed and used by a computer. Adding additional memory to a computer is useless unless the new locations are also added to the memory map so that the computer "knows" they are available.

MICROPROCESSOR—The section of a microprocessor that executes instructions. In the IBM PC family of computers this is the Intel 8088 (except for the PC AT, which uses the Intel 80286 chip).

MNEMONIC—A memory aid or abbreviation that usually consists of two or three characters in place of a more complicated series of words, such as CRT, ROM, etc.

MODE—A means of operation, such as graphics mode, text mode, decimal mode, or hex mode.

MODEM—Modulator-Demodulator, a device that converts electronic signals from the computer into tones that can be sent across telephone lines.

MONITOR—A device or person that keeps track of a process or operation. In data processing this term is used almost exclusively for the display terminal that is attached to a computer.

MONO, MONOCHROME—A computer display screen that only shows two colors, usually green on black,

amber on black, or white on black. Also, specifically, the IBM Monochrome display unit.

MULTIPLEXER—A device that combines two or more sequences into an interleaved series. Multiplexers are used in data communications and in voice lines.

OBJECT, OBJECT CODE—Program instructions which have been translated into information the computer can understand, through a compiler or assembler. (Compare SOURCE CODE.)

OFF-LINE—Not logically connected to the computer. If a device is attached to the computer but is not available for use, it is referred to as off-line.

ON-LINE—Attached to the computer both physically and logically and ready for use. A device which is in communication with a computer is on-line.

OPERATING SYSTEM—A set of computer programs that control its basic functions, like reading diskettes and displaying information on the screen. DOS, CP/M, UNIX, and XENIX are all operating systems.

PARAMETER—A piece of information entered as part of a command to the computer and used in some process, e.g. "What are the FORMAT command parameters?"

PIXEL—Picture Element, a point on the display screen that can be set to light, dark, or a particular color. Graphics displays allow you to set each pixel individually, whereas text displays allow only character groupings to be changed.

PRINTED CIRCUIT BOARD—A piece of non-conducting material that has an electronic circuit attached to one

or both surfaces. Some PC boards are combined together to make sandwiches of four and six layers. PC boards are usually produced from fiberglass that has a layer of metal adhered to it. The circuit is produced by etching away the metal so that only the desired paths are left.

PROGRAM—A series of computer instructions that are stored together and used to produce some particular result when executed in sequence.

PROM—Programmable Memory, an I/C chip that can have a program permanently stored within it. Some PROMs can be erased and reused, while others are limited to a single programming and have to be discarded if the software becomes obsolete.

RANDOM ACCESS—Retrieving a particular piece of information from a file without having to read all of the other records. Diskettes and hard disks are random access devices, since the read/write heads can go directly to any location on them without having to read the rest of the data. Tape handlers are sequential access devices.

REGISTER—A two-byte memory location that is used in assembly and other low-level programming. The IBM PC has four general purpose registers: AX, BX, CX, DX.

ROM—Read Only Memory, a computer chip that can be read but not changed. ROM is used to store programs, and is especially valuable for bootstrap loaders and some basic system code. (Compare FIRMWARE.)

ROM BIOS—An input/output system that is permanently built into read-only memory.

SEGMENT—A logical division of memory in the IBM PC computers. Segments can be up to 64K in size, and are used to separate complex tasks.

SEQUENTIAL ACCESS—Any means of memory access that requires all of the prior records to be read before the one that is wanted can be found. Tape handlers are sequential access devices. (Compare RANDOM ACCESS.)

SOFTWARE—The files and programs used by a computer. Software is stored on diskettes or tape and may be saved as hardcopy listings. (Compare HARDWARE, FIRMWARE.)

SOURCE, SOURCE CODE—The program instructions that are actually typed in by a programmer, before they have been translated into object code for the computer's benefit. (Compare OBJECT CODE.)

SPOOL, SPOOLING—Channeling information into a disk or tape file instead of sending it directly to an I/O device, like a printer. This allows the computer to process information more rapidly, since it doesn't have to wait for the relatively slow peripheral device to catch up.

STACK—A special section of computer memory that is used to keep track of addresses and data. Information can be saved on the stack by the programmer, and it is used by the operating system to hold subroutine addresses and return locations.

STRING—A series of letters or numbers. ABCDEF is an alpha string, and 342156 is a numeric string.

SUBROUTINE—A series of instructions, within a program, that is referred to by a name or address and is

used to do something specific, like printing an error message, or clearing the display. A subroutine is generally invoked by other sections of the program and is used to avoid repetition within the code.

SYSTEM FILES—Special files, used by the operating system, and written on the the system tracks of a diskette. In the IBM PC environment these files are IBMBIO.COM and IBMDOS.COM.

SYSTEM TRACKS—The sections on a formatted diskette that are reserved for use by the operating system.

TAPE—A medium for storing information for sequential access. Since random access devices are faster, tapes are now generally used for archival purposes instead of daily operations in large commercial installations. Some low-cost home computer systems do use tapes, and these are generally the same sort of cassettes used for recording and playing music.

VIRTUAL MEMORY—An advanced memory storage technique that allows a computer to address more memory than it actually has. Although virtual memory is used on large mainframe computers it is not yet available for home systems. The IBM PC/XT 370 uses a modified form of virtual memory.

WARM BOOT—Resetting the computer while it is running. On the IBM PC this is done by pressing the CTRL, ALT, and DEL keys at the same time.

#### Appendix B SAMPLE PROGRAM LIST

The source code for the following programs is printed in this book. Readers who would like to purchase a diskette with both the source code and executable object code should contact Workman and Associates, 112 Marion Avenue, Pasadena, CA 91106.

CHARSET—Demonstration of alternate character sets. DATETIME—Display of date and time using DOS func-

tion calls.

- DISKEDIT—Display and alter diskette sectors.
- GRAPHICS—Line and circle routines using BIOS allpoints-addressable capability.
- HEBRU—Graphics display using non-standard characters (Hebrew alphabet).
- MCOPY—Copy program that displays the amount of space occupied by each program and issues a warning if there is insufficient room on the diskette for the copy.
- MDIR—Displays system and hidden files by using the file control block.
- MDIR2—Display system and hidden files by using stream I/O techniques.

- PRZER—A display subroutine that uses DOS character calls.
- SAMPLE—DOS calling conventions for .COM files.

SCAN—Simple file display program.

SCAN2—File display using stream I/O.

SCAN3—File display using video BIOS calls.

SKELETON—Skeleton assembly program.

SUBLIM—A screen display program which flashes a message and then restores the background.

TWOMON—Display routines using concurrent monitors. XKEY—Keyboard translation routine.

#### INDEX

Access denied error, 92 ASCIIZ, 89 Addressing modes, 16 Align types, 44 All-point-addressable mode, 140 Aspect ratios, 147 Assembly, 32 ASSUME, 26 Attribute characters, 129 Base pointer, 19 BASIC subroutines, 207 Binary, conversion, 34 BIOS calls, 125 BIU, 8 BLOAD, 210 BOF, 211 Bus interface unit, 8 Byte boundaries, 10 Character mode functions, 132 Character input, 60 Character output, 57 CHKDSK, 34 Class parameter, 47 Clear buffer and input, 61 Color palette, 146 Combine types, 45 Comments, 12 Controller chip, 189 Converting .COM to .EXE, 34 Copy protection, 217 CP/M, 7

Cursor positioning, 128 Custom character fonts, 141 Date and time routines, 66 DEBUG, 40 Delimiters, 29, 58 Direct console I/O, 61 Direct memory access, 77 Direct screen handling, 181 Directory operations Record-oriented, 101 Stream-oriented, 108 Disassembler (DEBUG), 40 Disk operations, 71, 163 Disk transfer address, 72 Display adaptor, 126 Documentations, 220 DOS (Disk Operating System) Console services, 55 Returning to, 28, 49 DTA, 72 Editor, 35 End-of-File marker (EOF), 76, 81 EDLIN, 35 Entry points, 29 Error return codes, 90 EU, 8 Execution unit, 8 EXE2BIN, 34, 212 FAR, 26 File allocation table (FAT), 80 FCB, 72

249

File token (handle), 71, 88 Files Closing, 80, 95 Control block, 72 Copying, 114 Creating, 92 Extensions, 21, 22, 32, 34, 42 Opening, 74, 91 Positioning, 94 Random block read, 78 Random read, 77 Record mode, 93 Sequential read, 75 Writing, 79, 94 .LIST, 33 .XLIST, 33 Graphic primitives, 189 Graphics, 140, 189 Hardware read errors, 77 Instruction set, 10 Keyboard Buffered input, 57 Handling, 155 Status, 62 Light pens, 132, 190 Linking programs, 32, 33, 34 LODSB, 58 LOOP, 59 Loop control, 15 Lseek, 94 Memory access, direct, 77 Memory-mapped video, 181 Memory organization, 14 Map, 23 Motor start delay, 163 Multitasking, 62 **NEAR**, 26 Nibble copiers, 218, 221 Operating systems, 6 Location, 21 ORG, 29 Output ports, 64 Passing parameters, 25 PC/AT, 5 PC/IX, 7 PCjr, 5 PC/XT-370, 6

Phase errors, 52 Pipelining, 8 Piracy, 218 Polar coordinates, 147 Ports Output, 64 Serial I/O, 65 Printer output, 64 Print string function, 56 Procedures, 26 Processor chips, 5, 8, 10 Program segment prefix (PSP), 23 Record-oriented I/O, 71, 80, 87 Redefining keys, 156 Registers Arithmetic, 13 Index, 13, 15 On entry, 42 Pointer, 15 Segment, 12, 13, 22, 26 Swapping, 85 Scan codes, 155 Scrolling, 129 Segments Addressability, 47 Definition, 43 Dummy, 48 Registers, 12, 13, 22, 26 Serial numbers, 220 Space checking, 114 Stack Operations, 17, 50 Pointer, 18 Stream-oriented I/O, 87 Stream-write function, 94 Symbol table, 44 Syntax, 11 Timer rate, PC, 66 UNIX, 7 Video environment, 127 Video output, 125 Windows, scrolling, 129 Writing to the screen, 131 XENIX, 7

#### 250

# ASSEMBLER

#### WE'RE LOOKING FOR A FEW GOOD PROGRAMMERS YOU MAY QUALIFY, BUT...

Just how serious are you about your PC? If all you want is a book that will show you how to write and assemble "Program HELLO.COM", so that you can say you've written in Assembler, maybe this book offers more than you're looking for. Try that one over there, the one with the cute cartoons.

But if you want to learn how to program *seriously*, if you want to be a *SERIOUS ASSEMBLER*, then you've come to the right shop. We'll show you how to write machine code that

- Runs 100 times faster than optimized Compiled BASIC;
- Bypasses BASIC from within BASIC;
- Gives you full control of the ROM BIOS from DOS or a higher-level language;
- And in general make your PC/XT/AT act like a mainframe.

Frankly if you haven't learned at least a little BASIC, then you're not ready for *The Serious Assembler*. But if you have, and if you're *serious*, then this is the book for you, because

#### IF YOU'VE GOT THE RIGHT STUFF, WE'VE GOT THE RIGHT STUFF FOR YOU!

## SPECIAL BONUS: SUBLIM.COM, a program to send subliminal messages to the screen while running other programs. (Examples: "I'm not hungry," or "I must work harder.")

The Serious Assembler is the #10 title in the Pournelle Users Guide Series. Every title in the series is commissioned, selected, edited or approved by Jerry Pournelle. Jerry personally guarantees that every title in the series delivers on its promises—because it's a Pournelle Users Guide series!

