

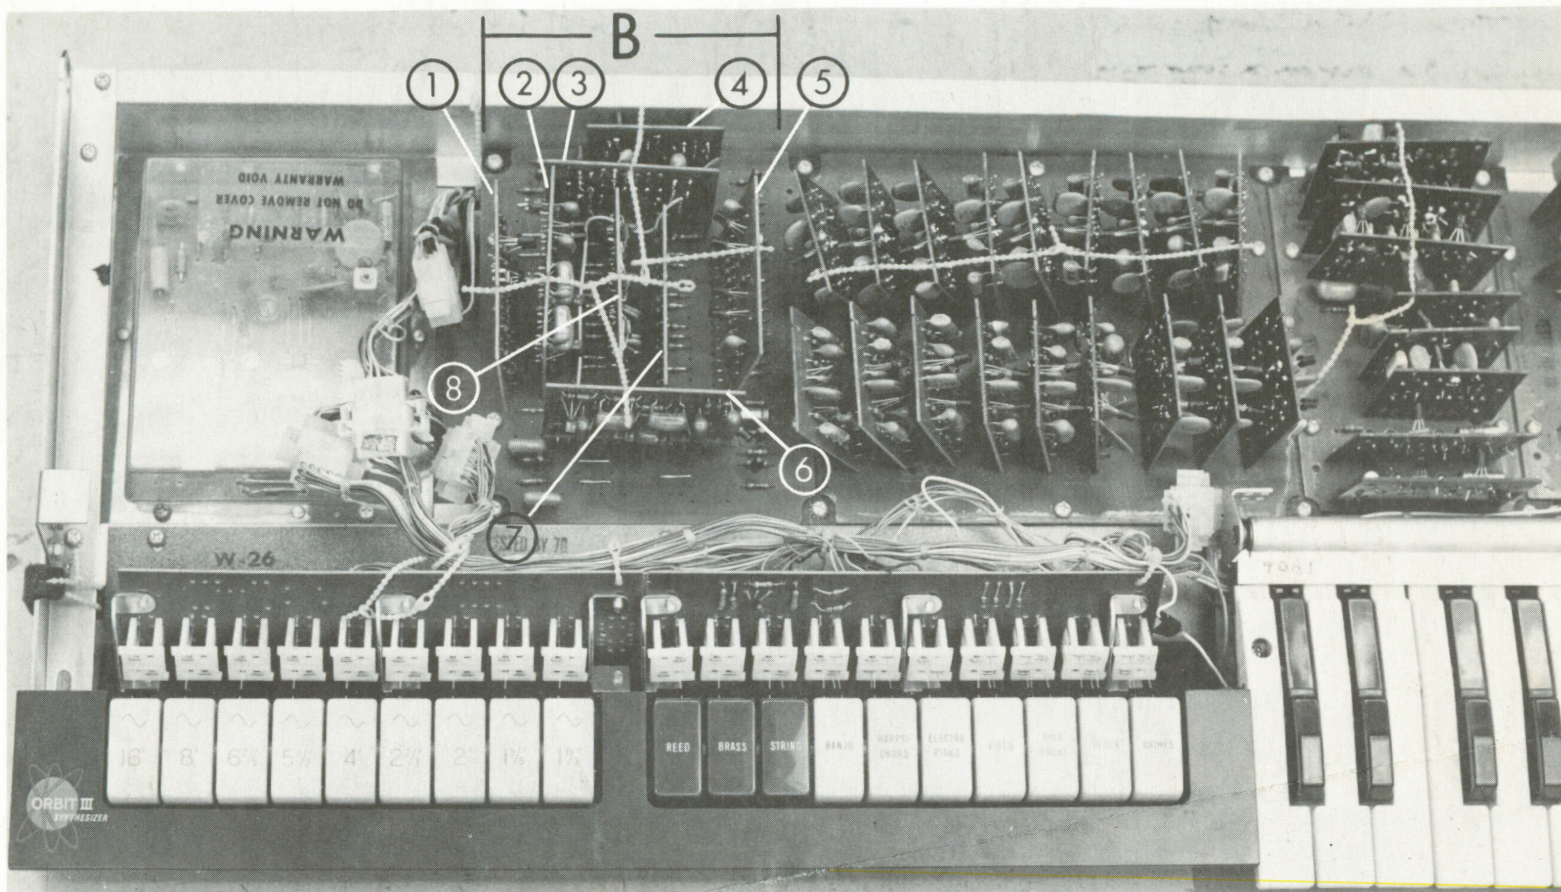
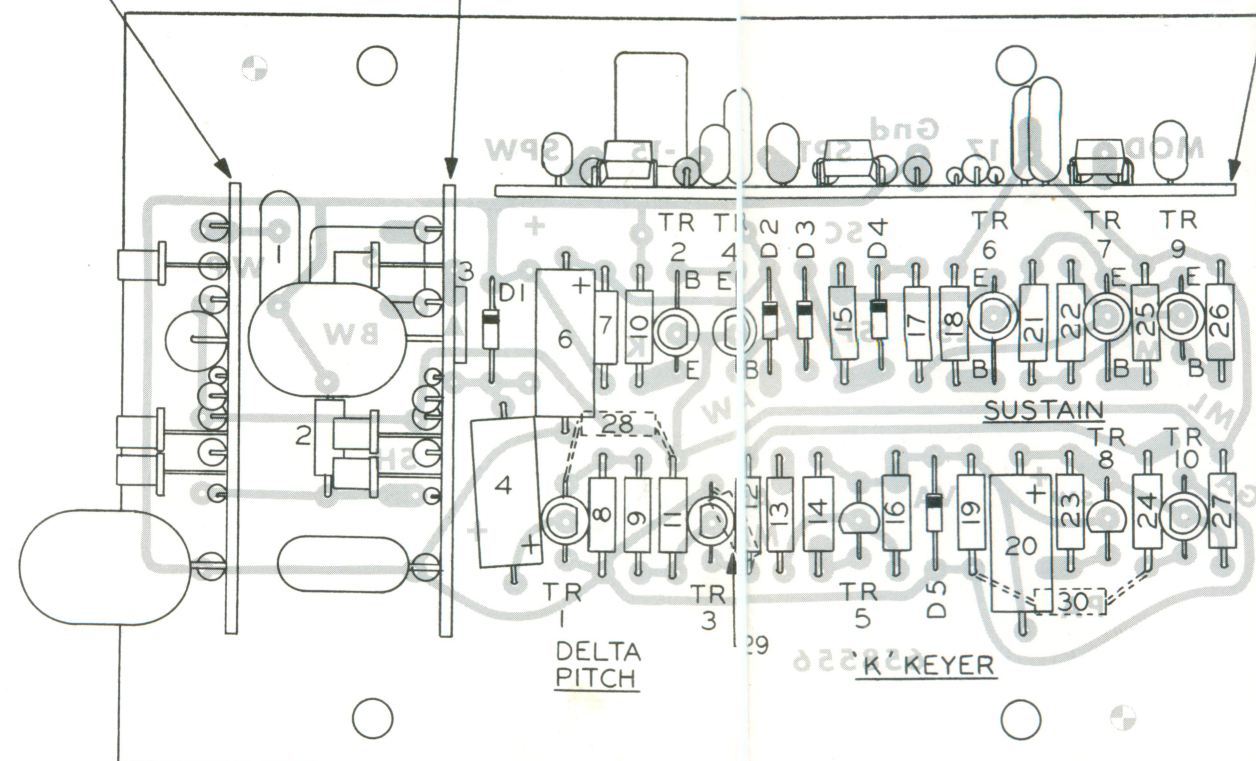
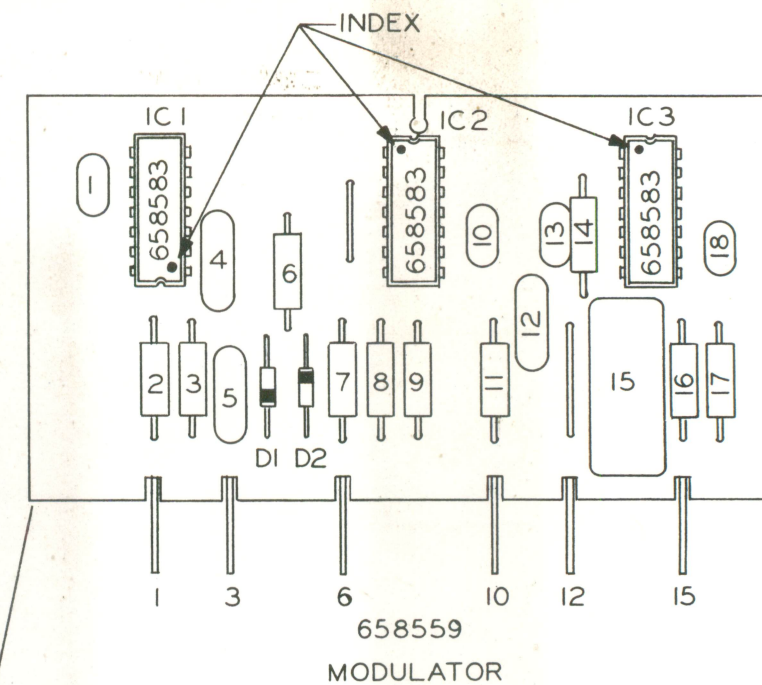


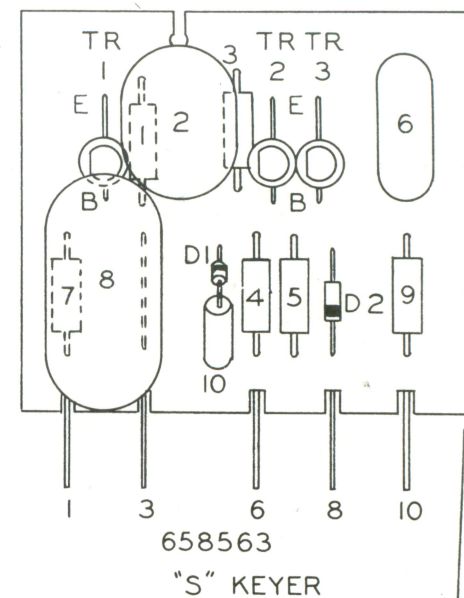

ORBIT III New Divider

SECTION B DIVIDER ASSEMBLY 660398

- 1 "E" Divider & Gates 660400
- 2 Strike Hi-Lo Gate 660175
- 3 Multiply by 2 507885
- 4 Divide by 3 659271
- 5 "K" Hi-Lo Gates 660399
- 6 Steering 660261
- 7 Stair Case Keyer 660375
- 8 Divider 16'-2-2/3 Hi-Lo 660379

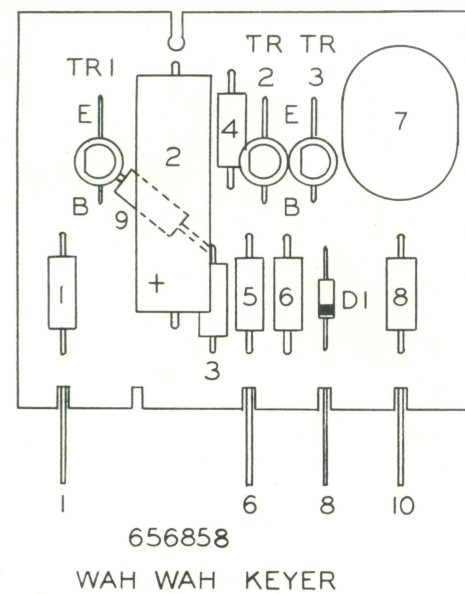


SEE SCHEMATIC 659256 FOR COMPLETE CIRCUITS AND CONNECTIONS.
 NUMBERS ON COMPONENTS CORRESPOND TO NUMBERS ON SCHEMATIC 659256
 BAND INDICATES CATHODE END OF DIODE. PG. 64

NOTES - NUMBERS ON COMPONENTS
CORRESPOND TO NUMBERS
ON SCHEMATIC 659256.


SEE SCHEMATIC 659256 FOR
CONNECTIONS AND
COMPLETE CIRCUITS.

FOOTAGE AMP. AND TONE CONTROL

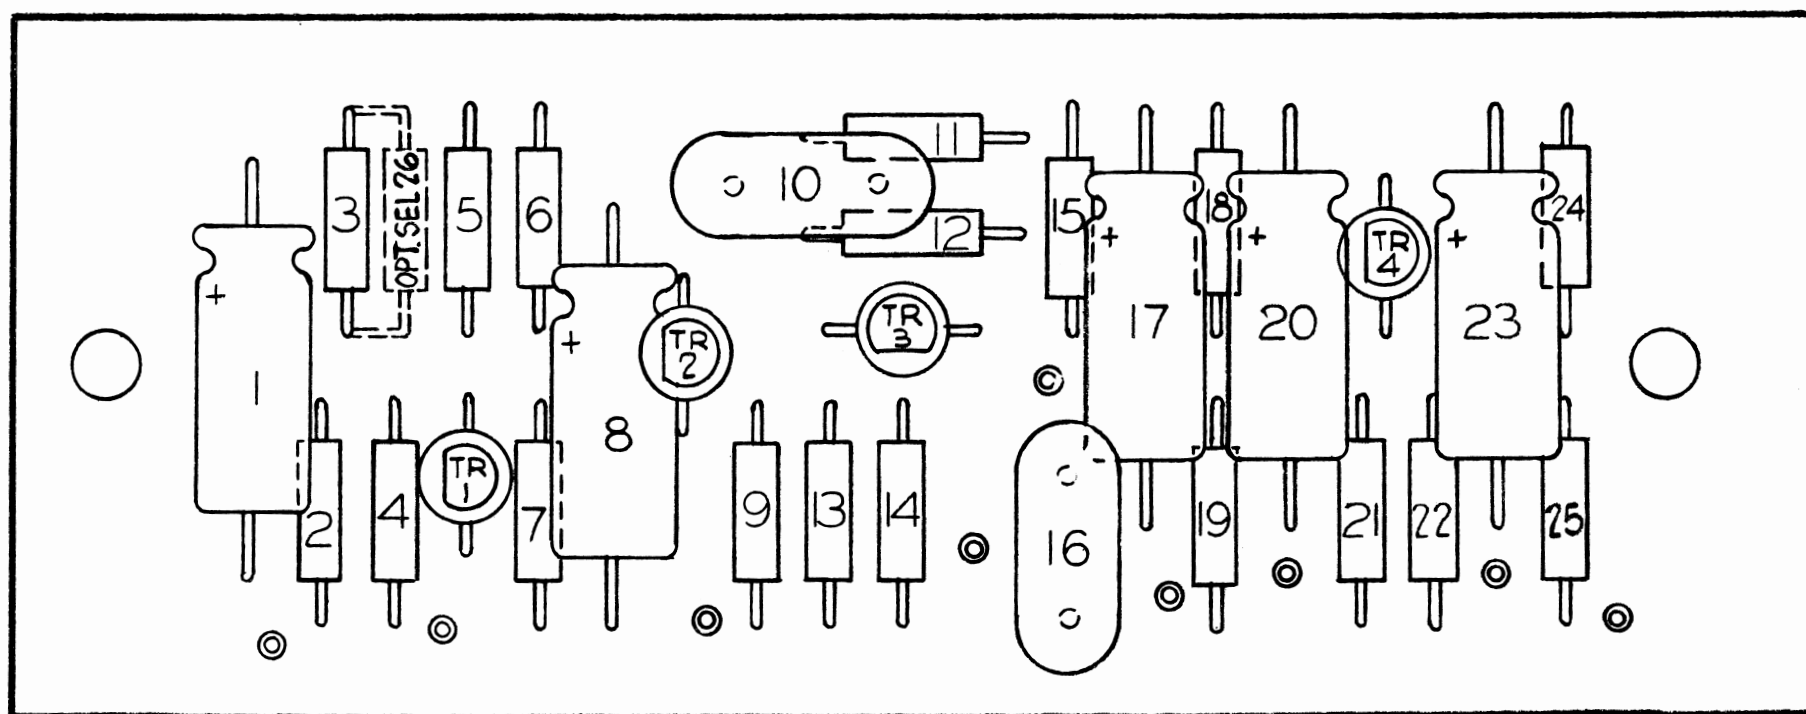

TITLE - PC: BD FOOTAGE TONE CONTROLS
MODEL - 4570 - 4573 PART NO. 659254 - S-1-E-
STARTING SERIAL NO. 1032000-1037000 DATE 3-1-1972
THE WURLITZER COMPANY - DENAUB DIVISION - DENAUB, ILL.

Sw in off Pos.

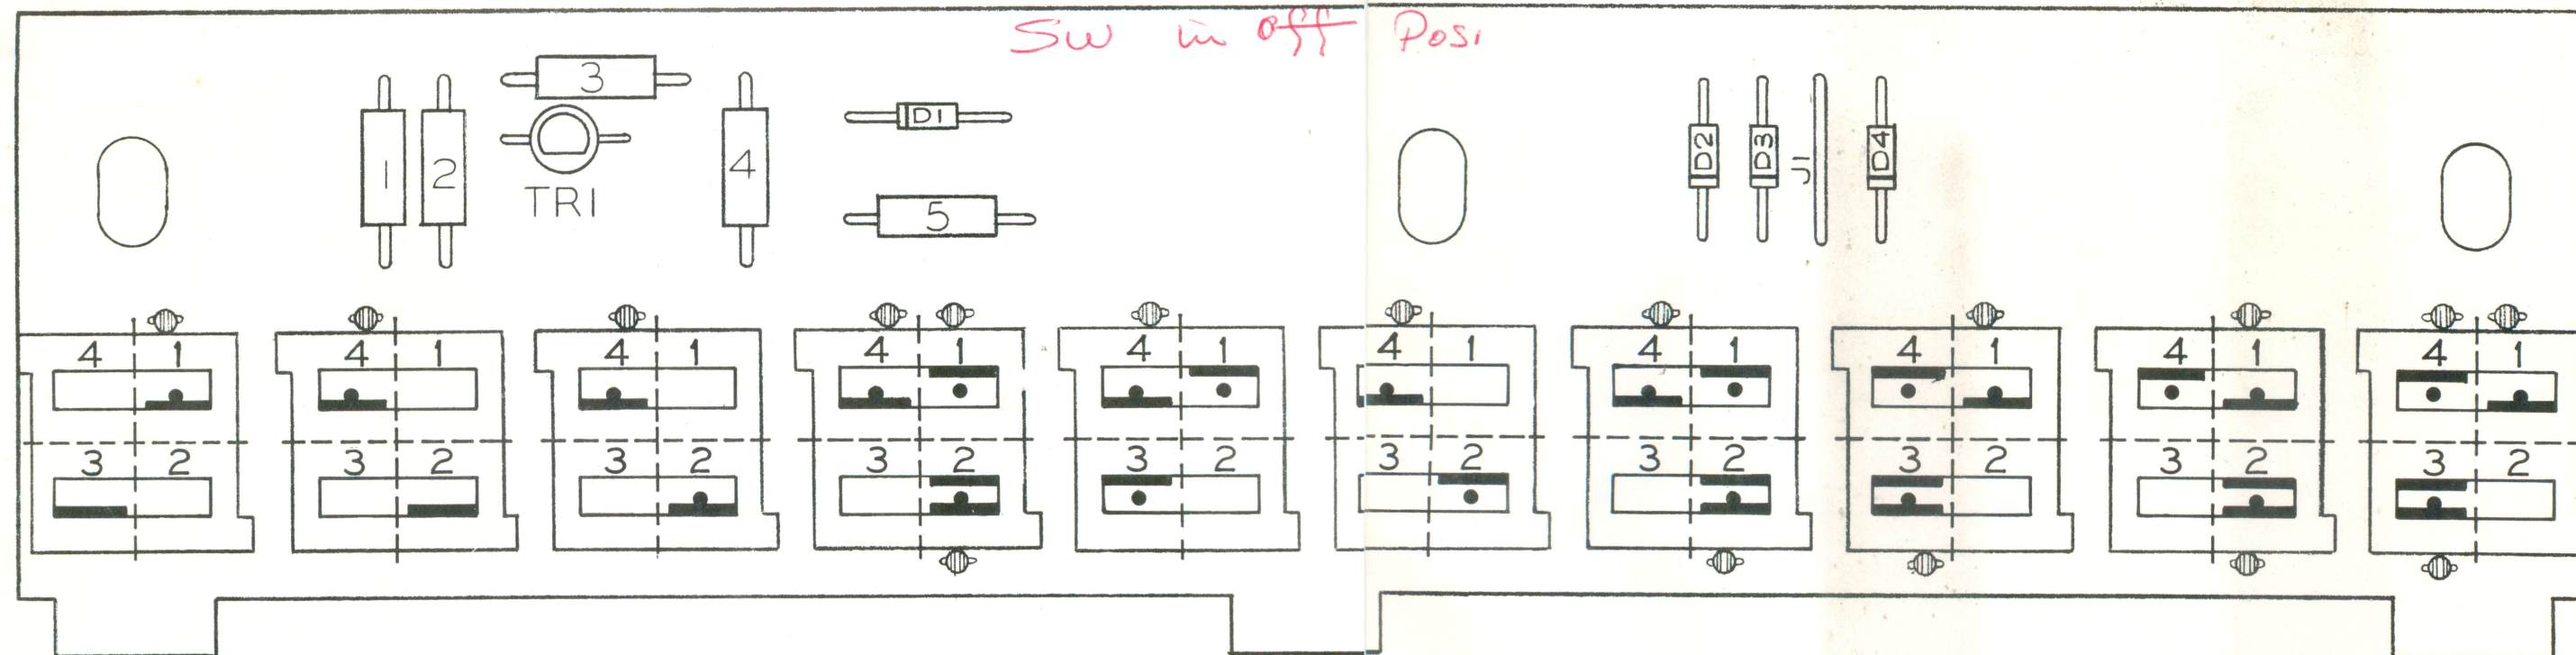

REED

BRASS

STRING

BANJO

HARPSICHORD

ELECTRO PIANO

VIBES

XYLOPHONE

GLOCK

CHIMES

MOVEABLE CONTACT WHISKER NUMBER

CORRESPONDS TO NUMBER

ON SCHEMATIC. PAGE 64

THIRD MANUAL
 4037-4373-4573

FUNCTIONS SWITCHED BY PRESET STOP SWITCHES

STOP TAB	SIGNAL	"K" KEYER	"S" KEYER	SUSTAIN
REED	6' STC	NORMAL ATTACK	_____	_____
BRASS	6' STC	NORMAL ATTACK	_____	_____
STRING	8' STC	MEDIUM ATTACK	_____	_____
BANJO	8' STC	OFF	ON-WIDE PULSE	_____
HARPSICHORD	8' STC	PLUCK	ON	MED.
PIANO	8' STC	REDUCED PLUCK	_____	MED. LONG
VIBES	8'-2'	8' PLUCK	ON-2'	LONG
	FOOTAGE			
XYLOPHONE	8'-2 2/3'	8' PLUCK	ON-2 2/3'	MED.
	FOOTAGE			
GLOCK	4'-1 1/3'	4' PLUCK	ON-1 1/3'	MED.
	FOOTAGE			
CHIMES	6 2/5'-4'-2 2/3'	6 2/5'-4'-2 2/3'	ON-2'	LONG
	2' FOOTAGE	PLUCK		